

Accessories

Datasheet

Expansion Module

EXP20

Dear Customers,

Yealink hereby informs you that the EXP20 Expansion Module has been discontinued since 2021-09-30. After the date, new orders for the product would not be accepted.

After the End-of-Life date, Yealink will not pursue any new feature development on EXP20 Expansion Module, but we will follow the industry standard practices regarding software support of the discontinued (EOL) products. Consistent with such standards, Yealink will continue to offer support and after-sale service.

For more information about EXP20 Datasheet, please refer to: [EXP20 Support](#).



EXP38

Dear Customers,

Yealink hereby informs you that EXP38 Expansion Module has been discontinued since December 31, 2015. After the date, the order for new product would not be accepted.

Yealink does not intend to pursue new feature development on EXP38 Expansion Module. But Yealink follows industry standard practices regarding the support of its software for discontinued (EOL) products. Consistent with such standards, Yealink will continue to offer support and after-sale service.

For more information about EXP38 Datasheet, please refer to: [EXP38 Support](#).



EXP39

Dear Customers,

Yealink hereby informs you that EXP39 Expansion Module has been discontinued since December 31, 2015. After the date, the order for new product would not be accepted.

Yealink does not intend to pursue new feature development on EXP39 Expansion Module. But Yealink follows industry standard practices regarding the support of its software for discontinued (EOL) products. Consistent with such standards, Yealink will continue to offer support and after-sale service.

For more information about EXP39 Datasheet, please refer to: [EXP39 Support](#).



EXP40

Dear Customers,

Yealink hereby informs you that the EXP40 Expansion Module has been discontinued since 2021-12-31. After the date, new orders for the product would not be accepted.

After the End-of-Life date, Yealink will not pursue any new feature development on EXP40 Expansion Module, but we will follow the industry standard practices regarding software support of the discontinued (EOL) products. Consistent with such standards, Yealink will continue to offer support and after-sale service.

For more information about EXP40 Datasheet, please refer to: [EXP40 Support](#).



EXP43

Color Expansion Module

The Yealink EXP43 Color Expansion Module for Yealink T43U/T46U/T48U IP phones, is designed to expand the functional capability of your SIP phone to a whole new level. It features a large 4.3-inch color-screen LCD, giving you a vivid visual experience. In addition, it provides you with a simple user interface and advanced call handling capabilities. For example, three pages of 20 flexible button shown on the display can be programmed up to 60 various features. The functionality of Yealink T43U/T46U/T48U IP phones will also be extended by the EXP43, you can set the provided multi functional line keys as BLF, speed dial, call forward, transfer, call park, call pickup, etc. The Yealink EXP43 Color Expansion Module is an ideal solution for receptionists, administrative assistants and contact center workers and gives you the ability to monitor contacts and manage a large volume of calls with ease.



Key Features and Benefits

- 4.3" 272 x 480-pixel color screen
- Color icons for rich visual experience
- 20 physical keys on each page with dual-color LEDs
- Three independent control keys with illuminated LED for fast switching pages
- Supports up to 3 modules daisy-chain
- Stand with 2 adjustable angles

User-friendly Structure Design

With a 4.3-inch color screen, the Yealink EXP43 expansion module is intended to bring a fresh visual experience and an easy operating experience to you. To ensure a higher reliability of data transmission and a higher speed of data refresh, a USB cable is chosen to connect EXP43 expansion module to Yealink T43U/T46U/T48U IP phones. Moreover, after the connection between the expansion module and the IP phone is establish, the remaining USB port on the back of EXP43 can also be used to realize the phone's extended functions, for example, call recording via USB flash drive, etc.

Intuitive Visualization

A 4.3-inch 272x480-pixel color screen greatly enriches your visual experience. The color icons for DSS keys, the feature of Wallpaper and Screensaver, all of these offer you a new operating experience as well as allow you to custom the EXP43 in your own style. More than that, its 3 independent control buttons with illuminated LED are used for fast switching to the

corresponding page.

High Expansibility

The Yealink T43U/T46U/T48U IP phones can be fully equipped with up to three EXP43 Color Expansion Modules, while adding 180 additional buttons at most. Three pages of 20 flexible buttons with dual-color LED shown on the display can be programmed up to 60 various features for speed dialing, BLF/BLA, call forward, transfer, etc. Thus, it will help you effectively manage high volume of concurrent calls, effortlessly monitor calls and greatly boost personal productivity.

Specifications

Specifications	Description
Display	<ul style="list-style-type: none"> · 4.3" 272x480-pixel color display with backlight · 16 bit depth color · Three page views are possible · Different color icons for each function shown on the LCD
Features Keys and Indicator	<ul style="list-style-type: none"> · 20 physical keys each with a dual-color LED · 40 additional keys through page switch · 3 independent control keys with illuminated LED are used for fast switching pages · Programmable for shared line, BLF List, call park, conference, forward, group pickup, group listening, LDAP, XML Browser...
Feature	<ul style="list-style-type: none"> · Wallpaper, screensaver, power saving · Stand with 2 adjustable angles · For support of two or three Expansion Modules, an external Yealink power adapter (5 V/2 A) is required · Up to three EXP43 can be attached on Yealink T43U/T46U/T48U IP phones · USB port (2.0 compliant) for data in and out · USB port (2.0 compliant) for: <ul style="list-style-type: none"> - Wired/wireless USB headset - Wi-Fi through WF40/WF50 - USB call recording through USB flash drive · Max power consumption (PSU): 1.5 W · Dimension (W x D x H x T): 124.0 mm x 137.5 mm x 42.6 mm · Applies to Yealink T43U/T46U/T48U · Operating temperature: -10 to +45°C (+14 to 113°F) · Operating humidity: 10-95%
Package Features	<ul style="list-style-type: none"> · Package content: <ul style="list-style-type: none"> - Yealink EXP43 Color Expansion Module - Stand - Connecting Sheet - USB Cable - Screwdriver - Screws - Quick Start Guide · Qty/CTN: 10 PCS · N.W/CTN: 5.8 kg · G.W/CTN: 6.4 kg · Giftbox size: 212 mm x 148 mm x 90 mm · Carton meas: 480 mm x 310 mm x 228 mm

[Click Here](#) to go to the product introduction on the Yealink official website.

EXP50

A High-performance Color-screen Expansion Module

The Yealink EXP50 Color-screen Expansion Module for Yealink T53/T53W/T54W/T57W/T58A/T58W IP phones, is designed to expand the functional capability of your SIP phone to a whole new level. It features a large 4.3-inch color-screen LCD, giving you a vivid visual experience. In addition, it provides you with a simple user interface and advanced call handling capabilities. For example, three pages of 20 flexible button shown on the display can be programmed up to 60 various features. The functionality of Yealink T53/T53W/T54W/T57W/T58A/T58W IP phones will also be extended by the EXP50, you can set the provided multi functional line keys as BLF, speed dial, call forward, transfer, call park, call pickup, etc. The Yealink EXP50 Color-screen Expansion Module is an ideal solution for receptionists, administrative assistants and contact center workers and give you the ability to monitor contacts and manage a large volume of calls with ease.



Key Features and Benefits

- 4.3" 272 x 480-pixel color screen
- Color icons for rich visual experience
- 20 physical keys on each page with dual-color LEDs
- Three independent control keys with illuminated LED for fast switching pages
- Supports up to 3 modules daisy-chain
- Stand with 2 adjustable angles

User-friendly Structure Design

With a 4.3-inch color screen, the Yealink EXP50 expansion module is intended to bring a fresh visual experience and an easy operating experience to you. Its new design for the Stand enables you to adjust between two lying angles easily even without disassembling it. To ensure a higher reliability of data transmission and a higher speed of data refresh, a USB cable is chosen to connect EXP50 expansion module to Yealink T53/T53W/T54W/T57W/ T58A/T58W IP phones. Moreover, after connecting to the IP phones successfully, the remaining USB port in the back of EXP50 can also be used to realize the phone's extended functions, for example, call recording via USB flash drive, etc.

Intuitive Visualization

A 4.3-inch 272x480-pixel color screen greatly enriches your visual experience. The color icons for DSS keys, the feature of Wallpaper and Screensaver, all of these offer you a new operating experience as well as allow you to custom the EXP50 in your own style. More than that, its 3 independent control keys with illuminated LED on the bottom are used for fast switching to the corresponding page.

High Expandability

The Yealink T53/T53W/T54W/T57W/T58A/T58W IP phones can be fully equipped with up to three EXP50 Color-screen Expansion Modules, while adding 180 additional buttons at most. Three pages of 20 flexible button with dual-color LED shown on the display can be programmed up to 60 various features that can be used for speed dialing, BLF/BLA, call forward, transfer, etc. Thus, it will help you effectively manage high volume of concurrent calls, effortlessly monitor calls and extremely boost personal productivity.

Specifications

Specifications	Description
Display	<ul style="list-style-type: none"> · 4.3" 272x480-pixel color display with backlight · 16 bit depth color · Three page views are possible · Different color icons for each function shown on the LCD
Features Keys and Indicator	<ul style="list-style-type: none"> · 20 physical keys each with a dual-color LED · 40 additional keys through page switch · 3 independent control keys with illuminated LED are used for fast switching pages · Programmable for shared line, BLF List, call park, conference, forward, group pickup, group listening, LDAP, XML Browser...
Feature	<ul style="list-style-type: none"> · Wallpaper, screensaver, power saving · Stand with 2 adjustable angles · For support of two or three Expansion Modules, an external Yealink power adapter (5 V/2 A) is required · Up to three EXP50 can be attached on Yealink T53/T53W/T54W/T57W/T58A/T58W IP phones · USB port (2.0 compliant) for data in and out · USB port (2.0 compliant) for: <ul style="list-style-type: none"> - Wired/wireless USB headset - Wi-Fi through WF40/WF50 for T53 - USB call recording through USB flash drive · Max power consumption (PSU): 1.8 W · Dimension (W x D x H x T): 196.5 mm x 124.0 mm x 137.5 mm x 42.6 mm · Applies to Yealink T53/T53W/T54W/T57W/T58A/T58W · Operating temperature: -10 to +45°C (+14 to 113°F) · Storage temperature: -30 to +70°C (-22 to +158°F) · Operating humidity: 10-95%

Package Features	<ul style="list-style-type: none"> · Package content: - Yealink EXP50 Color-screen Expansion Module - Stand - Connecting Sheet - USB Cable - Screwdriver - Screws - Quick Start Guide · Qty/CTN: 10 PCS · N.W/CTN: 6.0 kg · G.W/CTN: 6.598 kg · Giftbox size: 212 mm x 148 mm x 90 mm · Carton meas: 480 mm x 310 mm x 228 mm
-------------------------	--

[Click Here](#) to go to the product introduction on the Yealink official website.

Wireless Headset Adapter

EHS35

Talk and receive calls everywhere

The new and advanced Yealink Headset Adapter EHS35 provides a technical interface between your Yealink IP phones (T3X series) and a compatible Yealink wireless headset (WH62/WH63).



The unit is easy to install, simply link EHS35 to the RJ9 (4P4C) headset port of the phone. Its plug-and-play effectively gives you the ability to remotely control your Yealink phone calls, including answering, rejecting, holding, muting, hanging up, switching between multiple calls, and adjusting the volume.

Key Features and Benefits

- Support Yealink wireless headset (WH62/WH63) only
- Control phone through wireless headset
- Plug and play
- Easy to use

Specifications

Specifications	Description
Main Features	<ul style="list-style-type: none"> · Compatible with Yealink wireless headsets (WH62/WH63) · Plug and play · Incoming calls are signalled in the headset earpiece · Remote control feature: <ul style="list-style-type: none"> - Answer calls - Reject calls - Hang up calls - Switch between multiple calls - Hold - Mute - Adjust the volume
Physical Features	<ul style="list-style-type: none"> · 1 x RJ9 (4P4C) headset jack · 1 x Micro USB port for Yealink wireless headset
Package Features	<ul style="list-style-type: none"> · Package content: - EHS35 · Qty/CTN: 100 PCS · N.W/CTN: 2.14 kg · G.W/CTN: 2.74 kg · Giftbox Size: 174 mm x 180 mm x 63 mm · Carton Meas: 375 mm x 336 mm x 187 mm

 
Connection

The following figure shows the connection between the IP phone and the Yealink wireless headset WH62/WH63.


NOTE

The WH62/WH63 headset version must be 104.434.0.15 or later. You can check out the headset version via Yealink USB Connect (PC)
 Download: <https://www.yealink.com/product/yuc>.


• **Mitel & Unify Phone**

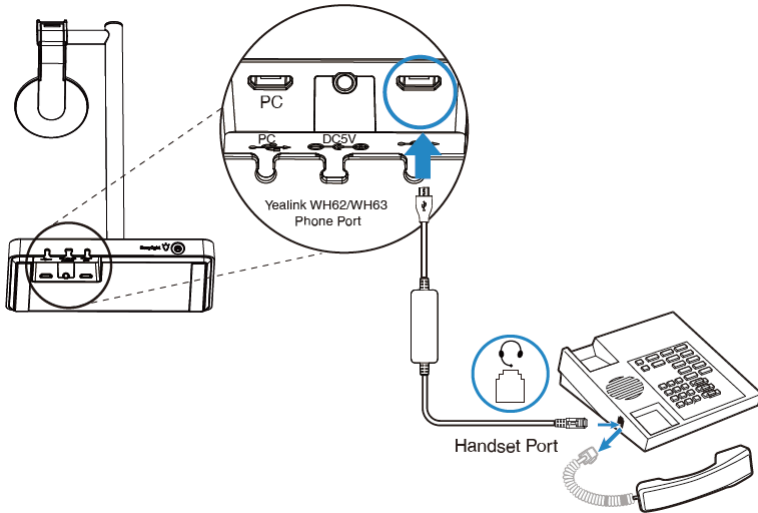

 • **Avaya/Poly/GS/Fanvil/Snom IP Phone**

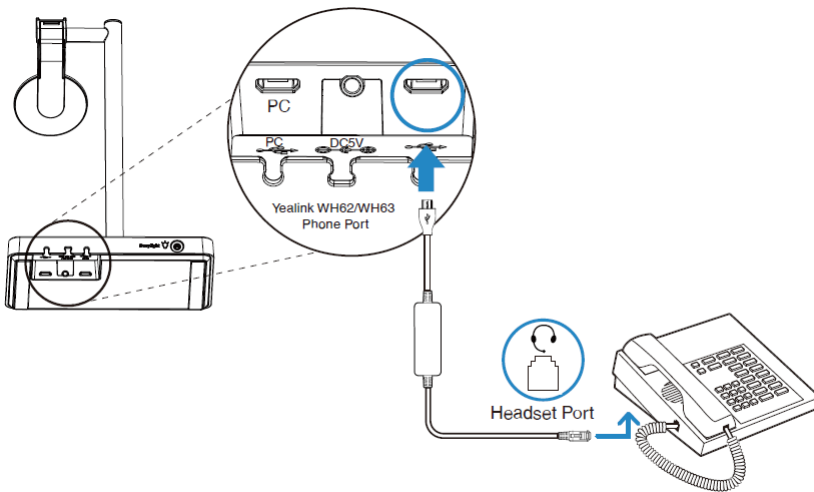

• **Yealink IP Phone**

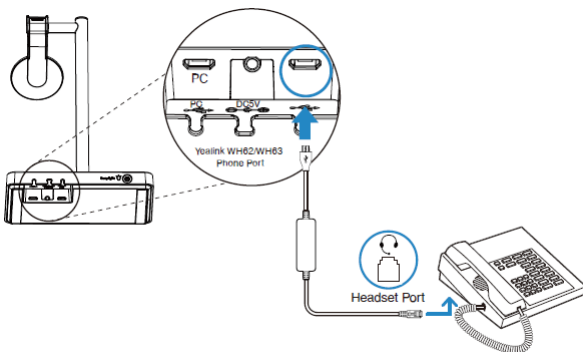 

For more information, please refer to [EHS35/EHS60/EHS61 Wireless Headset Adapter Guide](#).
 Click [Here](#) to go to the product introduction on the Yealink official website.

EHS36

Talk and receive calls everywhere

The new and advanced Yealink Headset Adapter EHS36 provides the technical interface between your Yealink T48S/T46S/T42S/T41S/T48G/T46G/T42G/T40G/T40P/T41P/T29G/T27G/T27P IP Phones and a compatible wireless headset. It is approved for using with major manufacture Jabra and Plantronics wireless models.

The unit is easy to install, simply link EHS36 to the EXT port of the phone and, effectively 'plug and play' giving you control of your Yealink phone and the ability to answer and hang up calls remotely.


It has been especially designed to ensure maximum productivity in business applications such as receptions, call centers and general telephone use and is ideal for the Corporate, Financial, Health, Government, Educational, Industrial, and SME/SoHo market sectors.




Key Features and Benefits


- Compatible with Jabra and Plantronics
- Control phone through wireless headset
- Plug and play
- Easy to use

Specifications

Specifications	Description
Main Features	<ul style="list-style-type: none"> • Supports Yealink T48S/T46S/T42S/T41S/T48G/T46G/T42G/T40G/T40P/T41P/T29G/T27G/T27P IP Phones • Compatible with Jabra and Plantronics wireless headsets • Plug and play • Answer incoming call through remote wireless headset • Terminate calls using remote wireless headset key • Incoming calls are signalled in the headset earpiece
Physical Features	<ul style="list-style-type: none"> • Built-in a RJ12 (6P6C) input port connected to IP phone • 1 x RJ45 (8P8C) output port for GN/Jabra headset • 1 x 3.5 mm output port for Plantronics headset • Accessories: 1 x RJ12, 1 x RJ45, 1 x 3.5 mm, 1 x RJ9
Package Features	<ul style="list-style-type: none"> • Qty/CTN: 40 PCS • N.W/CTN: 6.5 kg • G.W/CTN: 7.0 kg • Giftbox size: 160 mm x 85 mm x 35 mm • Carton meas: 400 mm x 382 mm x 190 mm
Compatible Headsets	

  Connection

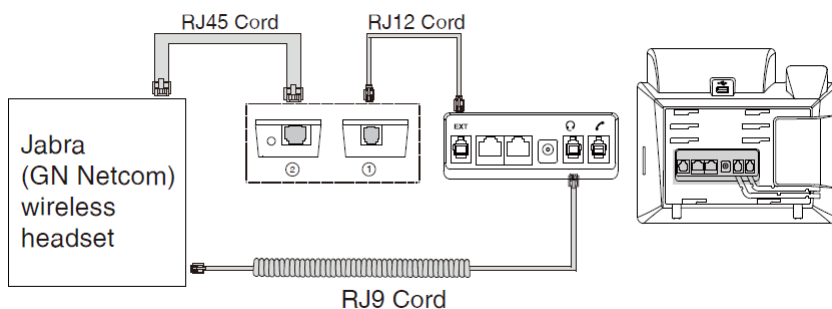

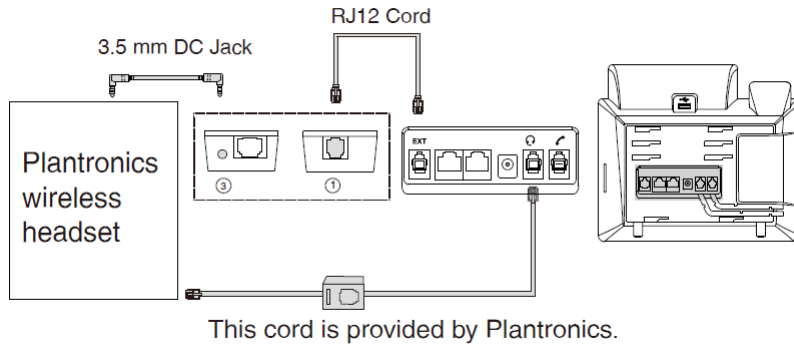

[Click Here](#) to go to the product introduction on the Yealink official website.

EHS40

Talk and receive calls everywhere

The new and advanced Yealink Headset Adapter EHS40 provides a technical interface between your Yealink IP Phones (VP59/T58W/T57W/T54W/T53W/T58A/T56A/T48U/T46U/T43U/T42U//T48S/T46S/T42S/T41S/T53) and a compatible wireless headset, including Jabra and Plantronics wireless models. The unit is easy to install, simply link EHS40 to the USB port of the phone and, its plug-and-play effectively gives you the control of your Yealink phone and the ability to answer and hang up calls remotely. It has been especially designed to ensure maximum productivity in business applications such as receptions and call centers, and is ideal for the Corporate, Financial, Health, Government, Educational, Industrial, and SME/SoHo market sectors.





Key Features and Benefits

- Compatible with Jabra and Plantronics
- Control phone through wireless headset
- Plug and play
- Easy to use


Specifications

Specifications	Description
Main Features	<ul style="list-style-type: none"> • Supports Yealink VP59/T58W/T57W/T54W/T53W/T58A/T56A/T48U/T46U/T43U/T42U/T48S/T46S/T42S/T41S/T53 IP Phones (apply to firmware version 85 or later) • Compatible with Jabra and Plantronics wireless headsets • Plug and play • Answer incoming call through remote wireless headset • Terminate calls using remote wireless headset key • Incoming calls are signalled in the headset earpiece
Physical Features	<ul style="list-style-type: none"> • 1 x USB 2.0 connector • 1 x RJ45 (8P8C)/1 x RJ9 (4P4C) output port for GN/Jabra/ Plantronics headset


<p>Package Features</p>	<ul style="list-style-type: none"> · Package content: - EHS40 - Jabra Y-Cord - Plantronics Y-Cord - Sennheiser Y-Cord - User Guide · Qty/CTN: 40 PCS · N.W/CTN: 6.16 kg · G.W/CTN: 6.75 kg · Giftbox size: 141 mm x 102 mm x 46 mm · Carton meas: 430 mm x 243 mm x 297 mm
<p>Compatible Headsets</p>	<div style="display: flex; align-items: center; gap: 20px;">   </div>

Connection

 The following figure shows the connection between the IP phone and the Jabra (GN Netcom) wireless headset.

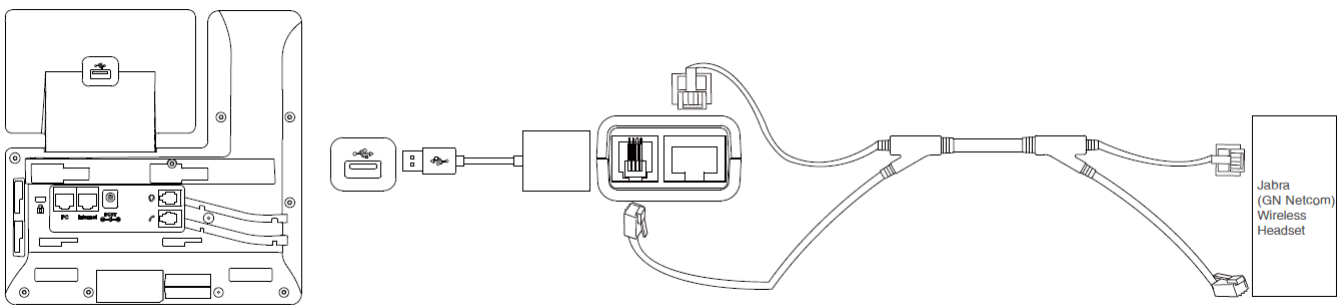

 The following figure shows the connection between the IP phone and the Plantronics wireless headset.

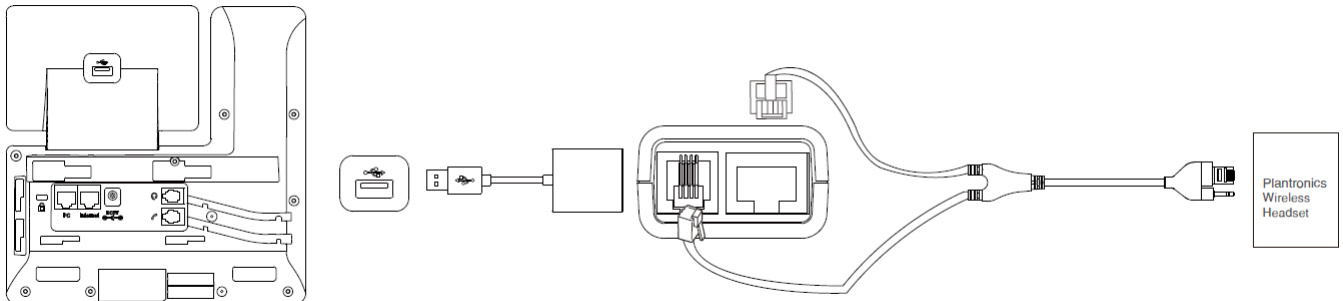

[Click Here](#) to go to the product introduction on the Yealink official website.

EHS60

Talk and receive calls everywhere

The advanced Yealink Headset Adapter EHS60 provides a technical interface between your Yealink DECT Headset and a compatible desk phone (Cisco/Avaya/Poly/Grandstream/Fanvil). The unit is easy to install. Its plug-and-play effectively allows you to remotely control your phone calls, including answering, hanging up, and adjusting the volume. (Muting the microphone only for Cisco Phone).

It has been specially designed to ensure maximum productivity in business applications such as receptions and call centers and is an ideal choice for the Corporate, Financial, Healthy, Governmental, Educational, Industrial, and SME/SoHo market sectors.



Key Features and Benefits


- Support Yealink wireless headset only
- Perfectly compatible with Cisco/Avaya/Poly/Grandstream/Fanvil desk phones
- Control phone through wireless headset
- Plug and play
- Easy to use

Specifications


Specifications	Introduction
Main Features	<ul style="list-style-type: none"> • Compatible with Yealink wireless headsets (WH62/WH63) • Perfectly compatible with Cisco/Avaya/Poly/Grandstream/Fanvil IP phones • Plug and play • Incoming calls are signaled in the headset earpiece • Control calls through remote wireless headset: <ul style="list-style-type: none"> - Answer calls - Hang up calls - Adjust the volume - Mute the microphone (Only for Cisco Phone)
Physical Features	<ul style="list-style-type: none"> • 1 x Micro USB port for Yealink wireless headset (WH62/WH63), cable length 20 cm • 1 x RJ45 (8P8C) and 1 x RJ9 (4P4C) headset jacks to connect the desk phone, EHS60 and headset port through the included cable
Package Features	<ul style="list-style-type: none"> • Package content: <ul style="list-style-type: none"> - EHS60 - Cable A (for connecting Avaya/Grandstream/Fanvil IP phones) - Cable B (for connecting Cisco IP phones) - Cable C (for connecting Poly IP phones) - User Guide • Qty/CTN: 40 PCS • N.W/CTN: 3.672 kg • G.W/CTN: 4.204 kg • Giftbox size: 141mm x 102mm x 46mm • Carton meas: 430mm x 243mm x 297mm

Connection

 
Connect the Cisco IP phone

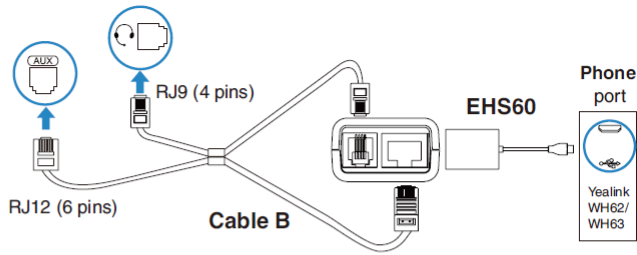

 Connect the Avaya/Grandstream/Fanvil IP phone

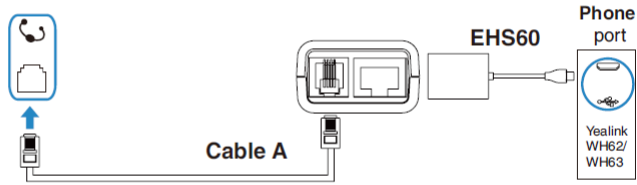

Connect the Poly IP phone

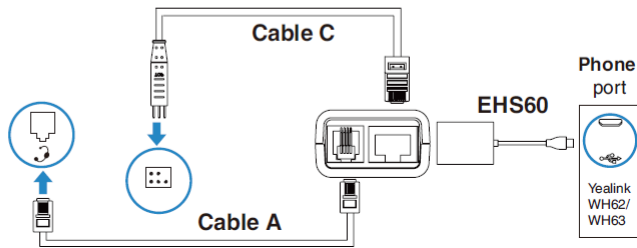 

Related Topic: [EHS60 Wireless Headset Adapter Guide](#)

[Click Here](#) to go to the product introduction on the Yealink official website.

EHS61

Talk and receive calls everywhere

The advanced Yealink Headset Adapter EHS61 provides a technical interface between your Yealink DECT Headset and a compatible desk phone (Mitel/Unify/Yealink T2X/T4XG). The unit is easy to install. Its plug-and-play effectively gives you the ability to remotely control your phone calls, including answering, hanging up, and adjusting the volume.

It has been specially designed to ensure maximum productivity in business applications such as receptions and call centers and is ideal for the Corporate, Financial, Health, Government, Educational, Industrial, and SME/SoHo market sectors.



Key Features and Benefits

- Support Yealink wireless headset only
- Perfectly compatible with Mitel/Unify/Yealink T2X/T4XG desk phones
- Control phone through wireless headset
- Plug and play
- Easy to use


Specifications

Specifications	Introduction
-----------------------	---------------------

<p>Main Features</p>	<ul style="list-style-type: none"> · Compatible with Yealink wireless headsets (WH62/WH63) · Perfectly compatible with Mitel/Unify/Yealink T2X/T4XG IP Phone · Plug and play · The incoming call is transmitted directly to the wireless headset · Control calls through remote wireless headset: <ul style="list-style-type: none"> - Answer calls - Hang up calls - Adjust the volume
<p>Physical Features</p>	<ul style="list-style-type: none"> · 1 x Micro USB jack for Yealink wireless headset (WH62/WH63), cable length 20 cm · 1 x TR9-5 (8 pins) to RJ9 (4 pins) & TR9-5 (8 pins) to RJ45 (8 pins) cable to connect Mitel & Unify Phones, EHS61 and headset port through the included cable · 1 x RJ9 (4 pins) to RJ9 (4 pins) & RJ45 (8 pins) to RJ12 (6 pins) cable to connect the Yealink desk phone and EHS61 through the included cable
<p>Package Features</p>	<ul style="list-style-type: none"> · Package content: <ul style="list-style-type: none"> - EHS61 - Cable A (for connecting Mitel & Unify Phones) - Cable B (for connecting Yealink desk phones) - Cable C (for connecting Yealink desk phones) · User Guide · Qty/CTN: 40 PCS · N.W/CTN: 3.6 kg · G.W/CTN: 4.1 kg · Giftbox Size: 141 mm x 102 mm x 46 mm · Carton Meas: 430 mm x 243 mm x 297 mm


Connection

 • **Mitel & Unify Phone**

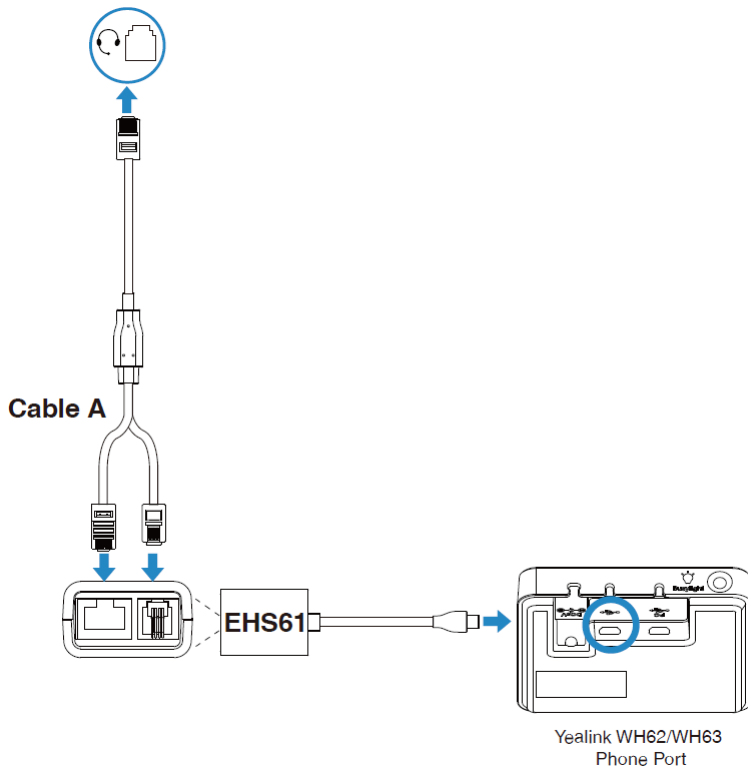

• Yealink IP Phone

 For Yealink Phones, you can plug and play.

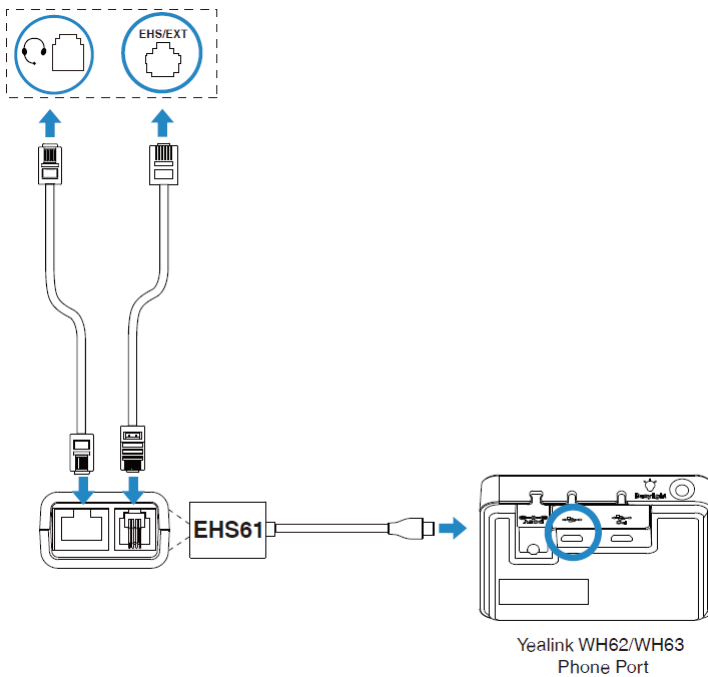

Related Topic: [EHS61 Wireless Headset Adapter Guide](#)

[Click Here](#) to go to the product introduction on the Yealink official website.

Wi-Fi USB Dongle


WF40

New Wi-Fi Life for Your IP Phone

Wi-Fi USB Dongle WF40 is a low-power, small form factor device that can be implemented within offices for seamlessly connecting their IP phones to available wireless networks. This dynamic plug-and-play style USB device is an ideal office networking solution for companies—particularly, smaller organizations—seeking affordable, convenient and reliable high-speed wireless connectivity.

Supported by a powerful transmission rate of 150 Mbps, the solution is able to quickly and reliably establish Wi-Fi connectivity so that users can optimally communicate, collaborate, access pertinent documents and resources and more. Wi-Fi USB Dongle WF40 is safe, reliable and easy deployment, which guarantees a flexible and optimal user experience.

 Even more, Wi-Fi USB Dongle WF40 is compliant with the IEEE802.11n and IEEE802.11b/g standards, maximizing reliability and throughput.




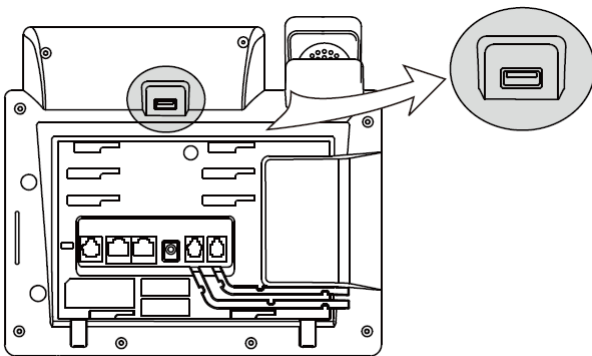 
Key Features and Benefits

- Supports Yealink SIP-T27G/T29G/T46G/T48G/T41S/T42S/T46S/T48S/T42U/T43U/T46U/T48U/T52S/T54S/T53
 - For T48G: upgrade to the version of 35.80.0.95 or higher
 - For T29G/T46G/T46S/T48S: upgrade to the version 81 or higher
 - For T27G/T41S/T42S: upgrade to the version of x.81.0.110 or higher
- Reliable Connection
- Ease-of-use
- Plug and Play

- High Transmission Rate
- Lower Power Consumption

Specifications

Specifications	Description
Specifications	<ul style="list-style-type: none"> · Network Standard: IEEE802.11b/g/n · Transmission Rate: 150 Mbps · Frequency Range: 2.4 GHz · Security: 64/128/152-bit WEP Encryption, WPA-PSK, WPA2-PSK · Interface: USB2.0 · L x W x H: 26.9 mm x 18 mm x 8 mm · Working Temperature: 0°C to +40°C (32°F to 104°F) · Storage Temperature: -40°C to +85°C (-40°F to 185°F)
Package Features	<ul style="list-style-type: none"> · Qty/CTN: 40 PCS · N.W/CTN: 1.70 kg · G.W/CTN: 2.20 kg · Carton meas: 305 mm x 260 mm x 272 mm · Giftbox size: 119 mm x 113 mm x 26 mm
Certifications	 <p>IC: 10741A-WIFI40</p>



[Click Here](#) to go to the product introduction on the Yealink official website.

WF50

Dual Band Wi-Fi USB Dongle

Yealink WF50 is a next-generation Wi-Fi USB Dongle, designed to allow users to select whether to connect to a 2.4GHz (150 Mbps) Wi-Fi network or a 5GHz (up to 433 Mbps) Wi-Fi network. With wireless connections transiting over the 5GHz band, users no longer need to worry about the interference from nearby wireless devices which may interfere with their wireless signal, guaranteeing high-quality connections perfect for establishing calls and HD video streaming.

This dynamic plug-and-play style USB device is equipped with WPA/WPA2 encryptions, providing your network with active defense against security threats. Besides, WF50 owns the ability to establish Wi-Fi connectivity easily, quickly, and reliably, so that users can optimally communicate, collaborate and more.

Yealink WF50 is compliant with IEEE 802.11a/b/g/n/ac standard, maximizing reliability and throughput.




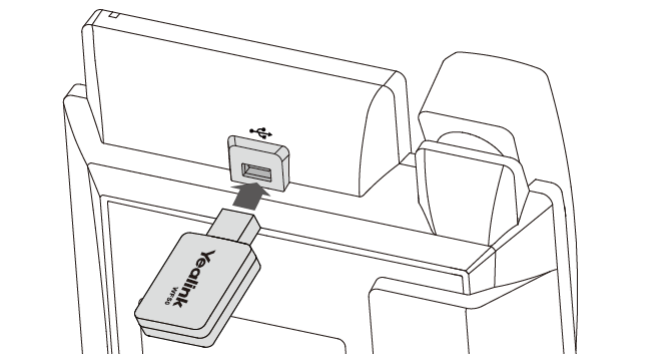 
Key Features and Benefits

- WF50: compatible with Yealink SIP-T27G/T41S/T42S/T46S/T48S/T42U/T43U/T46U/T48U/T52S/T54S/T53 IP Phone (Version 84 or later) and Teams T55A/Skype for BusinessT55A/Teams T56A/Skype for BusinessT56A/Teams MP54/Skype for Business MP54
- WF50 (V1): compatible with Yealink SIP-T42U/T43U/T46U/T48U (108.86.0.70 or later), Yealink SIP-T53 (96.86.0.70 or later) and Teams MP54
- Dual-Band Connectivity

- High Transmission Rate
- Interference Free
- Reliable Connection
- Easy to Use
- Plug and Play

Specifications

Specifications	Description
Specifications	<ul style="list-style-type: none"> • Network Standard: IEEE 802.11 a/n/ac, IEEE 802.11 b/g/n • Transmission Rate: <ul style="list-style-type: none"> - 5 GHz: <ul style="list-style-type: none"> 11ac: Up to 433Mbps(dynamic) 11n: Up to 150Mbps(dynamic) 11a: Up to 54Mbps(dynamic) - 2.4 GHz: <ul style="list-style-type: none"> 11n: Up to 150Mbps(dynamic) 11g: Up to 54Mbps(dynamic) 11b: Up to 11Mbps(dynamic) • Frequency Range: 2.4 GHz/5 GHz • OS Support: Linux, Android • Antenna Type: Integrated • Security: WEP, WPA/WPA2, WPA-PSK/WPA2-PSK, WPA2-Enterprise • Interface: USB 2.0 • Operating Voltage: 5.0 V DC \pm5% • Dimensions (L x W x H): 52 mm x 27 mm x 8 mm • Weight: 28 g • Operating Temperature: 0°C to +40°C (32°F to 104°F) • Storage Temperature: -30°C to +70°C (-22°F to 158°F) • Operating Humidity: 10% to 90% (Non-condensing)
Package Features	<ul style="list-style-type: none"> • Package Content: <ul style="list-style-type: none"> - WF50 - User Guide • Qty/CTN: 80 PCS • N.W/CTN: 1.70 kg • G.W/CTN: 2.20 kg • Giftbox size: 136 mm x 70 mm x 40 mm • Carton meas: 443 mm x 305 mm x 285 mm
Certifications	 <p>IC: 10741A-WF50</p>



[Click Here](#) to go to the product introduction on the Yealink official website.

Bluetooth USB Dongle

BT40

Dear Customers,

Yealink hereby informs you that the BT40 has been discontinued since May 31, 2019. After the date, new orders for the product would not be accepted.

After the End-of-Life date, Yealink will not pursue any new feature development on BT40, but we will follow the industry standard practices regarding software support of the discontinued (EOL) products. Consistent with such standards, Yealink will continue to offer support and after-sale service.

For more information about BT40 Datasheet, please refer to: [BT40 Support](#).



BT41

USB Dongle for Bluetooth Headsets

The Bluetooth USB dongle adds Bluetooth connectivity to your IP Phone with a wide variety of Bluetooth Headsets, allowing you to receive calls wherever you are in the office. Compatible with Bluetooth specification V4.1, back compatible with Bluetooth 1.1, 1.2, 2.0 and 3.0 for wide-ranging use.



Key Features and Benefits

- Supports Yealink SIP-T27G/T29G/T46G/T48G/T41S/T42S/T46S/T48S/T42U/T43U/T46U/T48U/T53
- Answer/Terminate calls through wireless headset
- 10 m Range

Specifications

Specifications	Description
Main Features	<ul style="list-style-type: none"> · Bluetooth specification: V4.1 · Enhanced Data Rate (edr) compliant for both 2Mbps and 3Mbps supported · A2DP technology · Support 8K NBS (apply to SIP-T27G/T29G/T46G/T48G/T41S/T42S/T46S/T48S) · Support 16K WBS (apply to SIP-T42U/T43U/T46U/T48U/T53) · Operating distance: 10 meters · Answer incoming calls through Bluetooth headset · Terminate calls through Bluetooth headset · Adjusts the volume of Bluetooth headset through Bluetooth headset or your phone · Bluetooth frequency range: 2.402 GHz-2.480 GHz · Built-in security · Low power consumption
Physical Feature	<ul style="list-style-type: none"> · Supports Yealink SIP-T27G/T29G/T46G/T48G/T41S/T42S/T46S/T48S/T42U/T43U/T46U/T48U/T53 (version 82 or later) · USB2.0 interface · Symbol rate: 3Mbps · Dimensions: 18 mm x 14 mm x 5.5 mm · Weight: 2 g
Package Features	<ul style="list-style-type: none"> · Qty/CTN: 40 PCS · N.W/CTN: 1.6 kg · G.W/CTN: 2.6 kg · Carton meas: 310 mm x 275 mm x 290 mm · Giftbox size: 119 mm x 113 mm x 26 mm

[Click Here](#) to go to the product introduction on the Yealink official website.

BT42

BT42 Bluetooth USB Dongle


The Bluetooth USB Dongle BT42 can be used with Yealink Video Conferencing System to connect the Yealink Wireless Bluetooth Microphone CPW90-BT. With BT42, one video conferencing system can connect up to two microphones at the same time to meet different rooms.



Key Features and Benefits

- Compatible with VC880/VC800/VC500
- Reliable Connection
- 10m Range
- Easy to Use
- Plug and Play

Specifications

Specifications	Description
Features	<ul style="list-style-type: none"> • Supported microphone model: CPW90-BT • Operating distance: 10 meters • RF power output: 0dBm • Frequency Range: 2400-2483.5MHz
Physical Feature	<ul style="list-style-type: none"> • Compatible with VC880/VC800/VC500 • Interface: USB 2.0 • Symbol rate: 3Mbit/sec • Dimensions (L x W x H): 52 x 27 x 8mm • Weight: 28 g
Package Features	<ul style="list-style-type: none"> • Qty/CTN: 80 PCS • N.W/CTN: 1.7 kg • G.W/CTN: 2.2 kg • Carton Meas: 136 mm x 70 mm x 40 mm • Giftbox size: 443 mm x 305 mm x 285 mm
Compliance	 IC: 10741A-BT42

BT50

Bluetooth USB Dongle

Yealink BT50 is a plug-and-play USB Bluetooth dongle that connects your Yealink CP900/CP700 to your PC to ensure a fast and reliable Bluetooth connection. BT50 guarantees a first-rate range of up to 100ft/30m, allowing you to move away freely from your laptop during a call. As for the audio, by incorporating sound quality features to BT50, you can enjoy the natural sound even when you are away from your desk. Meanwhile, the music will be streamed in amazing HiFi quality via A2DP.




Key Features and Benefits

- Compatible with CP900/CP700

- Reliable connection
- Up to 100ft/30m wireless range
- Easy to use
- Plug and play

Specifications

Specifications	Description
Features	<ul style="list-style-type: none"> • Bluetooth version: BT 5.0 • PC connection: USB 2.0 • Bluetooth range: Up to 100ft/30m • Bluetooth profiles: HFP 1.6, DIP 1.3, A2DP 1.2, Bluetooth Low Energy (BTLE) • Bluetooth audio bandwidth: Narroband, Wideband, A2DP • Firmware update via Yealink Connect app • Visual indicator: One blue LED indicates pairing and connection
Physical Feature	<ul style="list-style-type: none"> • OS compatibility (as audio device): <ul style="list-style-type: none"> - Windows XP/SP3, Windows Vista 32-bit, Windows Vista 64-bit, Windows 7 32-bit, Windows 7 64-bit, Windows 8.1 32-bit, Windows 8.1 64-bit, Windows 10 32-bit, Windows 10 64-bit - MAC OS 10.6 or later • Compatible with CP900/CP700 • Softphone support (call control): <ul style="list-style-type: none"> - Fully compatible with Microsoft Teams/Skype for Business • Compatible with most of PC softclients and, as a minimum, work as audio device • Dimensions (L x W x H): 18 x 13.9 x 5.1mm • Operating environment: -10°C to +60°C
Compliance	 IC: 10741A-BT50

BT51

Bluetooth USB Dongle

Yealink BT51 is a plug-and-play USB Bluetooth dongle, which is available in BT51-A and BT51-C versions. It connects your Yealink BH72/BH76 to your PC to ensure a fast and reliable Bluetooth connection. BT51 guarantees a first-rate range of up to 100ft/30m, allowing you to move away freely from your laptop during a call. As for the audio, by incorporating sound quality features to BT51, you can enjoy the natural sound even when you are away from your desk. Meanwhile, the music will be streamed in amazing HiFi quality via A2DP



BT51-A



BT51-C

Key Features and Benefits

- Compatible with BH72/BH76
- Reliable connection
- Up to 100ft/30m wireless range
- Easy to use
- Plug and play

Specifications

Specifications	Description
Features	<ul style="list-style-type: none"> • Bluetooth version: BT 5.0 • PC connection: USB 2.0 (USB-A/USB-C) • Bluetooth range: Up to 100ft/30m • Bluetooth profiles: HFP 1.7, A2DP 1.3, AVRCP 1.6 • Bluetooth audio bandwidth: Narroband, Wideband, A2DP • Firmware update via Yealink USB Connect app • Visual indicator: 1 blue LED +1 red Led indicates pairing and connection

<p>Physical Feature</p>	<ul style="list-style-type: none"> · OS compatibility (as audio device): <ul style="list-style-type: none"> - Windows XP/SP3, Windows Vista 32-bit, Windows Vista 64-bit, Windows 7 32-bit, Windows 7 64-bit, Windows 8.1 32-bit, Windows 8.1 64-bit, Windows 10 32-bit, Windows 10 64-bit, Windows 11 64-bit - MAC OS 10.6 or later · Compatible with BH72 Lite/BH72/BH76 · Softphone support (call control): - Fully compatible with Microsoft Teams/Skype for Business - Compatible with most of PC softclients and, as a minimum, work as audio device
<p>Package Features</p>	<ul style="list-style-type: none"> · Dimensions (L x W x H): BT51-A: 18 x 13.9 x 5.1mm · Dimensions (L x W x H): BT51-C: 16.15 x 14.5 x 9mm · Operating environment: -10°C to + 60°C

IP Phone Camera

CAM50

HD Camera for Yealink SIP-T58W Series/MP58

Being an easy add-on, Yealink IP Phone Camera CAM50 is a HD video camera with high quality that helps your Yealink SIP-T58W Series/MP58 IP phones to turn into a real desktop video conferencing solution in seconds.

The Yealink IP Phone Camera CAM50, powered by 2 mega-pixel and 720P resolution, grants you an interactive collaboration with top-notch video communications experience. No any extra software driver is require, just insert the CAM50 camera to the USB port on the top of the T58W Series/MP58, the simple plug-and-play installation leads you to use the CAM50 camera at once.

Meanwhile, to fully protect personal privacy, a special privacy shutter is attached to let you switch the video on-off easily. For the better user experience, you can adjust the camera angle forward and backward directly, empowering your video call more vivid and immersive.

Designed as your ideal office assistant, the Yealink IP Phone Camera CAM50 allows you to perfectly participant in video communications, immediately and effectively from your desktop phone.




Key Features and Benefits

- Compatible with Yealink SIP T58W Series/MP58 IP Phones
- 2 mega-pixel HD Camera
- 720p@30fps
- Ease-of-use
- Plug and Play
- Adjustable with privacy shutter

Specifications

Specifications	Description
<p>Specifications</p>	<ul style="list-style-type: none"> · Video codec: H.264 High Profile, H.264, VP8 · White Balance · Automatic Exposure · Horizontal Field of View: 62±3° · Vertical Field of View: 47±3° · Diagonal Field of View: 75±5° · LED indicator · Interface: USB 2.0 · Power: 5 V @ < 500 mA via USB port · Operating humidity: 10-95% · Operating temperature: 0 to 40°C

<p>Package Features</p>	<ul style="list-style-type: none"> · Qty/CTN: 20 PCS · N.W/CTN: 1.70 kg · G.W/CTN: 2.20 kg · Carton meas: 250 mm x 218 mm x 292 mm · Giftbox size: 119 mm x 113 mm x 26 mm
<p>Compliance</p>	

[Click Here](#) to go to the product introduction on the Yealink official website.

Wireless Expansion Microphone

CPW65

CP Wireless DECT Expansion Mic CPW65

The Yealink CPW65 is a Wireless Expansion Mic that works as an audio input device for Yealink CP965 conference phone. Covered with black fabric (the same material as CP965), CPW65 is elegant, waterproof, greaseproof, and antifouling. Its 3 built-in microphones support a 360-degree voice pickup range with a 10-foot (3-meter) radius, which can guarantee you a balanced and crystal-clear audio experience. You can easily expand the voice pickup range of CP965 by connecting it to 2 CPW65 wirelessly, and the connection distance is up to 20 meters. CPW65 is easy to use with intuitive capacitive mute buttons. What’s more, just by randomly putting CPW65 on the charger cradle, the charging is proceeding without worrying about its direction. Its long battery life can offer you 11-day standby time or 12-hour talk time, saving you from frequent charging. All of the advantages make CPW65 an ideal choice for organizations that need optimal microphone placement and wider room coverage.



Key Features and Benefits



Optimal HD Voice



Wireless Expansion Microphone



Capacitive Mute Touchpad




Place-and-Charge Charger Cradle

Specifications

Specifications	Description
<p>Features</p>	<ul style="list-style-type: none"> · Optimal HD voice · Full duplex technology · Muting the microphone with touchpad · 10-foot (3-meter) 360° voice pickup · Largest distance between CP965 and CPW65: 20 meters · 1500 mAh battery capacity · 13-hour talk time · 11-day standby time

Physical Feature	<ul style="list-style-type: none"> · Dimension (W x D x H): -Microphone: 78.59 mm x 78.59 mm x 15.3 mm -Charge Cradle: 100 mm x 60 mm x 25.8 mm · Operating humidity: 10-90% · Storage temperature: -20-60°C
DECT	<ul style="list-style-type: none"> · Frequency bands: 1880 – 1900 MHz (Europe) 1920 – 1930 MHz (US) 1902 – 1906 MHz (THA) 1910 – 1920 MHz (BA)
Package Content	<ul style="list-style-type: none"> · 2 x CP Wireless Expansion Microphone · Charger Cradle · 0.3 m Micro USB Cable · Quick Start Guide
Package Features	<ul style="list-style-type: none"> · Qty/CTN: 20 PCS · N.W/CTN: 7.368 kg · G.W/CTN: 7.812 kg · Giftbox size: 190 mm x 82 mm x 48 mm · Carton meas: 395 mm x 251 mm x 185 mm
Compliance	

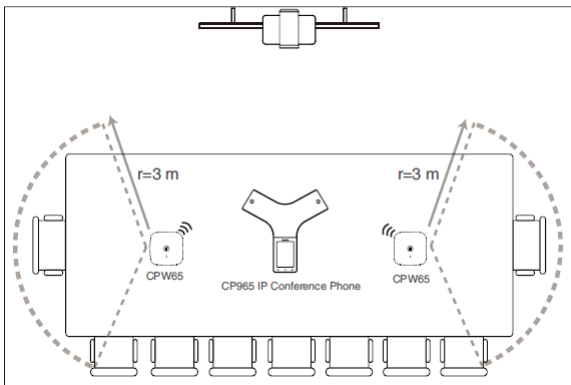 

[Click Here](#) to go to the product introduction on the Yealink official website.

CPW90

CP Wireless Expansion Mic CPW90

The Yealink CPW90 is a CP Wireless Expansion Mic which works as an audio input device for Yealink CP960 conference phone. It features superior audio technology and supports 360-degree voice pickup range at a radius of up to 10 feet (3 meters) without any wiring troubles. Capacitive mute touchpad plus place-and-charge charger cradle round out its user-friendly features, making Yealink CP Phone Wireless Expansion Mic CPW90 ease of use and being an ideal choice for organizations who need optimal microphone placement and wider room coverage.



Key Features and Benefits

- Optima HD voice
- Full duplex technology
- 10-foot (3-meter) 360° voice pickup
- Capacitive mute touchpad
- Echo cancellation
- DECT Technology



Optima
HD Voice



Capacitive
Mute Touchpad




Wireless
Micpod



Place-and-Charge
Charge Cradle

Specifications

Specifications	Description
Features	<ul style="list-style-type: none"> · Optima HD voice · Full duplex technology · Muting the microphone with touchpad · 10-foot (3-meter) 360° voice pickup · Distance between CP960 and CPW90: 20 meters · 800 mAh battery capacity · 19-hour talking time · 11-day standby time
Physical Feature	<ul style="list-style-type: none"> · Dimension (W x D x H): -Microphone: 85.98 mm x 85.98 mm x 16.35 mm -Charge Cradle: 190 mm x 86 mm x 25.5 mm · Operating humidity: 10-90% · Storage temperature: 0 to 40°C (+32 to 104°F)
DECT	<ul style="list-style-type: none"> · Frequency bands: 1880 – 1900 MHz (Europe), 1920 – 1930 MHz (US)
Package Content	<ul style="list-style-type: none"> · 2 x CP Wireless Expansion Microphone · Charger Cradle · 0.3 m Micro USB Cable · Quick Start Guide
Package Features	<ul style="list-style-type: none"> · Qty/CTN: 20 PCS · N.W/CTN: 12.2 kg · G.W/CTN: 12.8 kg · Giftbox size: 242 mm x 102 mm x 46 mm · Carton meas: 500 mm x 220 mm x 256 mm
Compliance	

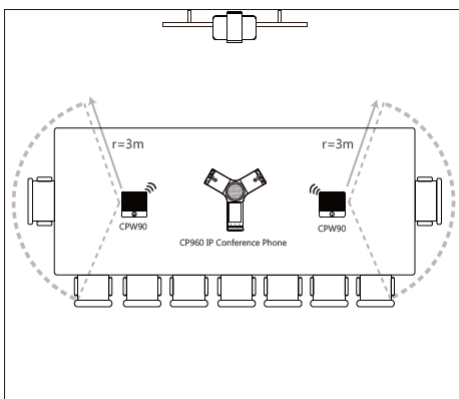 

[Click Here](#) to go to the product introduction on the Yealink official website.

CPW90-BT

Bluetooth Wireless Microphone CPW90-BT

The Yealink CPW90-BT, as a Bluetooth wireless microphone, packs it with Bluetooth technology, Yealink HD voice quality and 360-degree voice pickup range at a radius of up to 10 feet (3 meters) without any wiring troubles. Up to two CPW90-BT can be connected at the same time when working with Yealink Bluetooth USB dongle BT42, increasing microphone pickup range and making you feel free to sit at any end of the table or walk over that everyone can still hear you clearly. Capacitive mute touchpad plus place-and-charge charger cradle round out its user-friendly features; patented Yealink Noise Proof technology automatically silences noises that can interrupt the conversation; all of these make CPW90-BT ease of use and be an ideal choice for organizations who need optimal microphone placement and wider room coverage.



Key Features and Benefits

- Optima HD voice
- Full duplex technology
- 10-foot (3-meter) 360° voice pickup
- Capacitive mute touchpad
- Yealink Noise Proof Technology
- Echo cancellation
- Bluetooth Technology



Optima HD Voice



Capacitive Mute Touchpad



Wireless Microphone



Place-and-Charge Charge Cradle

Specifications

Specifications	Description
Features	<ul style="list-style-type: none"> • Optima HD voice • Full duplex technology • Muting the microphone with touchpad • 10-foot (3-meter) 360° voice pickup • Distance between CP960 and CPW90: 20 meters • 800mAh battery capacity • 48-hour talking time • 7-day standby time
Physical Feature	<ul style="list-style-type: none"> • Dimension (W x D x H): Microphone: 85.98 mm x 85.98 mm x 16.35 mm Charge Cradle: 190 mm x 86 mm x 25.5 mm • Operating humidity: 10-95% • Storage temperature: 0-40°C (+32-104°F)
Package Content	<ul style="list-style-type: none"> • 2 x Bluetooth Wireless Microphone • Charger Cradle • 1.8 m Micro USB Cable • Power Adapter • BT42 Bluetooth USB Dongle (Optional) • Quick Start Guide
Package Features	<ul style="list-style-type: none"> • Qty/CTN: 20 PCS • N.W/CTN: 0.5 kg • G.W/CTN: 0.6 kg • Giftbox size: 315 mm x 102 mm x 55 mm • Carton Meas: 584 mm x 220 mm x 330 mm
Compliance	

DECT USB Dongle

DD10K

Yealink Ruggedized DECT Handset

The Yealink DECT dongle DD10K not only enables T41S/T42S/T54W to work concurrently with the Yealink DECT system as a handset after pairing with Yealink W60B/W70B/W80B/W90B DECT IP base station, but also enables T53/T53W/T54W/T57W/T58A/T58W/VP59 to work as a base station which can be registered with up to 4 compatible Yealink W52H/W56H/W53H/W73H/W78H/W57R/W59R handsets. Supported by a powerful transmission rate of 1152kbps/s, this solution provides you with a quick and reliable DECT connection without wiring or cabling troubles, and gives you the privilege of enjoying wireless communications in minutes. As a complement to the Yealink DECT series, attaching DD10K to your desk phone offers a new solution by combining the desk phone's features with DECT capabilities.

Yealink DD10K complies is easy and safe to deploy, guaranteeing a flexible and optimal user experience.

 


Key Features and Benefits

- Compatible with Yealink SIP- T41S/T42S with FW 66.82.0.35 or later, SIP-T58A with FW V83 or later and SIP T53/T53W/T54W/T57W/T58W/VP59
- Reliable Connection
- Ease-of-use
- Plug and Play
- High Transmission Rate


Use Scenario of DD Phone (T54W+DD10K)


- Warehouse
- Supermarket
- Restaurant
- Others

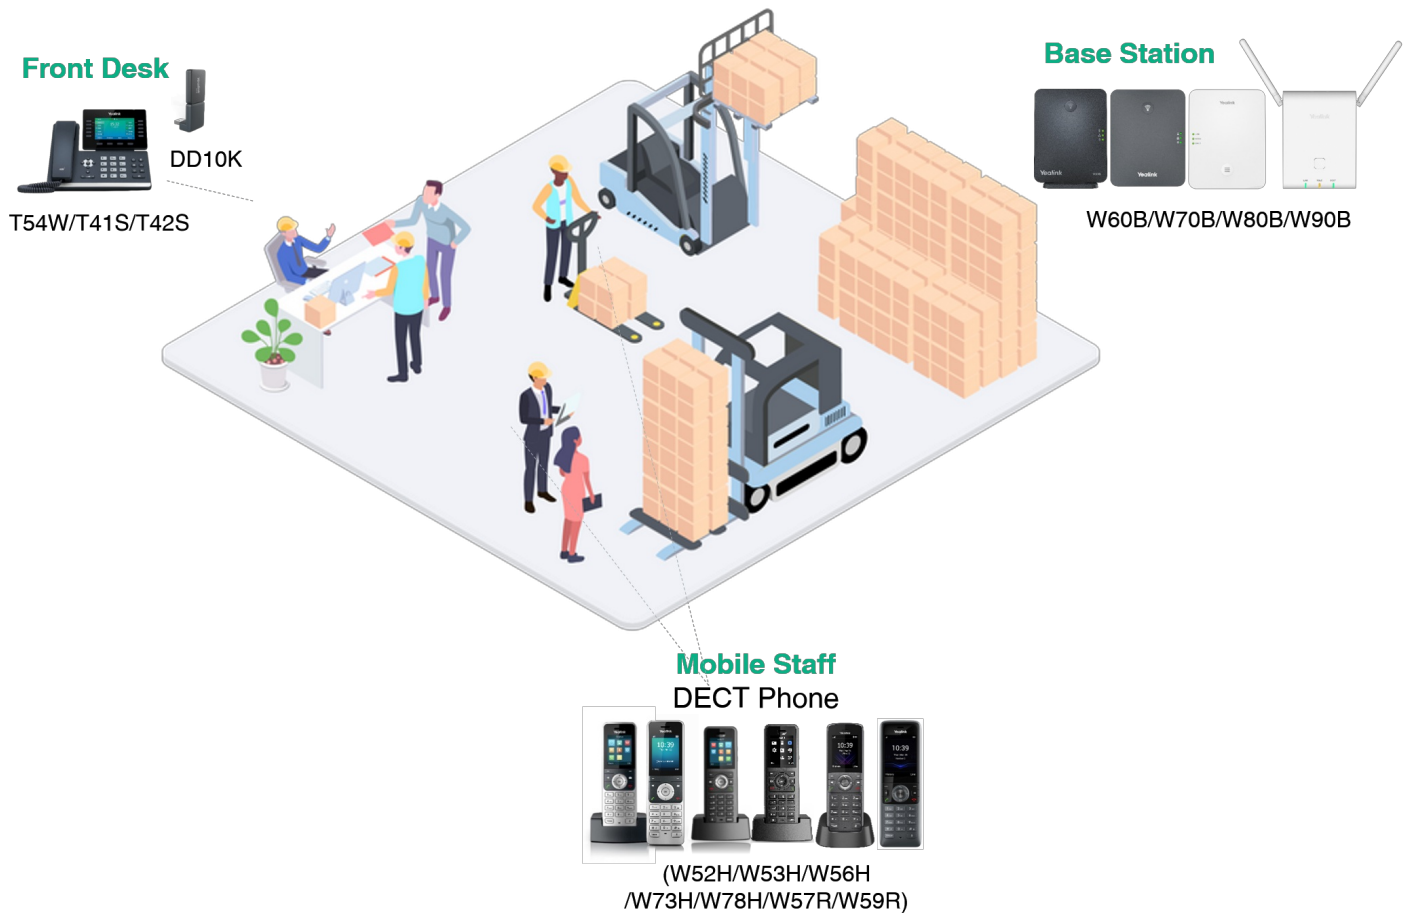

Specifications

Specifications	Description
----------------	-------------

<p>Display</p>	<ul style="list-style-type: none"> · 1.8" 128x160 TFT color screen · Intuitive user interface with icons and soft keys · Caller ID with name and number · Notification Light: voice mail, missed call · Date & time (manual/auto synchronization) · Screen saver · Multilingual user interface · Keypad backlight
<p>Phone Features</p>	<ul style="list-style-type: none"> · Up to 2 simultaneous calls per handset · Handset select for receiving call · Handset and number select for making call · Auto intercom, auto answer · 3-way conference · Call forward: Always/Busy/No Answer · Call waiting, mute, hold · DND · Call transfer · Swap between calls · Redial · Speed dial · Voice mail · Silence · Dial plan: Replace Rule/Area Code/Block Out · Keypad lock · Emergency call · 100 phone book memory (store in the base) · Remote phonebook, LDAP, XML phonebook · Phonebook search, blocklist · Call history: All/Placed/Missed/Received (up to 100 entries) · Direct IP call without SIP proxy · Reset to factory, reboot · Anonymous call, anonymous call rejection · OTA (Over-The-Air) upgrade via base station
<p>Audio Features</p>	<ul style="list-style-type: none"> · Full-duplex speakerphone · HD audio · Hearing Aid Compatibility (HAC) compliant · Frequency response: 100 Hz-7 kHz · FNR (Flexible Noise Reduction) · Receiver volume control: 5 steps · Ringer volume control: 5 steps+off · 9 ringer melodies · Multiple advisory tones · Acoustic warning for low battery status · DTMF
<p>DECT</p>	<ul style="list-style-type: none"> · DECT Transmission Rate: 1152 kbps/s · 2 internal QWL omnidirectional antennas · Power Consumption: 815 mW · Frequency bands: 1880 – 1900 MHz (Europe), 1920 – 1930 MHz (US) · DECT Range: <ul style="list-style-type: none"> - Indoor Range: 20 m-50 m (The max distance is 50 m) - Outdoor Range: 300 m (In clear view and ideal conditions)
<p>Physical Features</p>	<ul style="list-style-type: none"> · Interface: USB 2.0 · Dimension: 73 mm x 27 mm x 8 mm · Weight: 2 g
<p>Package Features</p>	<ul style="list-style-type: none"> · Package contents: <ul style="list-style-type: none"> - DD10K DECT USB Dongle - Quick start guide · Qty/CTN: 80 PCS · Giftbox size: 136 mm x 70 mm x 40 mm · Carton meas: 443 mm x 305 mm x 285 mm · N.W: 4.0 kg · G.W: 4.6 kg
<p>Compliance</p>	<div style="text-align: center;">  <p>IC: 10741A-DD10</p> </div>

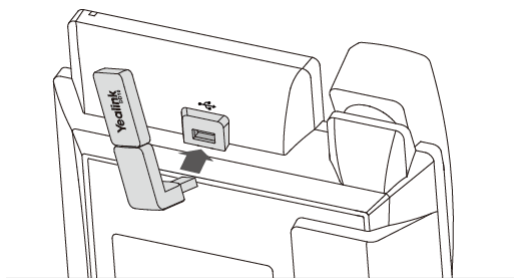 

[Click Here](#) to go to the product introduction on the Yealink official website.




Comparison Lists

Expansion Module



Category	Features	EXP20*	EXP38*	EXP39*	EXP40*	EXP43	EXP50
							
Compatible IP Phone		Expansion Module	Expansion Module	Expansion Module	Expansion Module	Expansion Module	Expansion Module
Product	Size (W x D x H x T)	122 mm x 143 mm x 110 mm x 45 mm	132 mm x 143 mm x 42 mm	145 mm x 182 mm x 100 mm	127 mm x 213 mm x 167 mm x 45 mm	196.5 mm x 124.0 mm x 137.5 mm x 42.6 mm	196.5 mm x 124.0 mm x 137.5 mm x 42.6 mm
	Display	160x320 graphic LCD	/	160x320 graphic LCD	160x320 graphic LCD	4.3" 272x480-pixel color display	4.3" 272x480-pixel color display
	LCD Backlight	✓	✓	✓	✓	✓	✓
	Key Backlight	☒	☒	☒	✓	✓	✓
	Color Icons	☒	☒	☒	☒	✓	✓
Features Keys	Physical Keys	20	38	20	20	20	20
	Additional Keys	18	38	20	20	40	40
	Control Keys	☒	☒	☒	2	3	3
Main Feature	BLF	✓	✓	✓	✓	✓	✓
	BLA	✓	✓	✓	✓	✓	✓
Physical Feature	Wall Mountable	☒	☒	☒	✓	✓	✓
	Stand with 2 Adjustable Angles	✓	☒	☒	✓	✓	✓
	Max Daisy-Chain Number	6	6	6	6	3	3

*: EOL Product

Wireless Headset Adapter

Category	Features	EHS35	EHS36	EHS40	EHS60	EHS61
						
Compatible IP Phone	Yealink	Wireless Headset Adapter	Wireless Headset Adapter	Wireless Headset Adapter	Wireless Headset Adapter	Wireless Headset Adapter
	Other Vendor	Avaya/Poly/Snom/Grandstream/Fanvil IP Phones	☒	☒	Cisco/Avaya/Poly/Grandstream/Fanvil IP Phones	Mitel/Unify IP Phones
Compatible Headset		Yealink wireless headsets (WH62/WH63)	Jabra and Plantronics wireless headsets	Jabra and Plantronics wireless headsets	Yealink wireless headsets (WH62/WH63)	Yealink wireless headsets (WH62/WH63)
Main Feature	Remote Control Feature	<ul style="list-style-type: none"> - Answer calls - Reject calls - Hang up calls - Switch between multiple calls - Hold - Mute - Adjust the volume 	<ul style="list-style-type: none"> - Answer calls - Terminate calls 	<ul style="list-style-type: none"> - Answer calls - Terminate calls 	<ul style="list-style-type: none"> - Answer calls - Hang up calls - Adjust the volume - Mute the microphone (Only for Cisco Phone) 	<ul style="list-style-type: none"> - Answer calls - Hang up calls - Adjust the volume
Product	Physical Features	<ul style="list-style-type: none"> · 1 x RJ9 (4P4C) headset jack · 1 x Micro USB port for Yealink wireless headset 	<ul style="list-style-type: none"> · Built-in a RJ12 (6P6C) input port · 1 x RJ45 (8P8C) output port · 1 x 3.5mm output port · Accessories: 1 x RJ12, 1 x RJ45, 1 x 3.5mm, 1 x RJ9 	<ul style="list-style-type: none"> · 1 x USB 2.0 connector · 1 x RJ45 (8P8C)/1 x RJ9 (4P4C) output port 	<ul style="list-style-type: none"> · 1 x Micro USB port · 1 x RJ45 (8P8C) and 1 x RJ9 (4P4C) headset jacks 	<ul style="list-style-type: none"> 1 x Micro USB jack · 1 x TR9-5 (8 pins) to RJ9 (4 pins) & TR9-5 (8 pins) to RJ45 (8 pins) cable · 1 x RJ9 (4 pins) to RJ9 (4 pins) & RJ45 (8 pins) to RJ12 (6 pins) cable

Wi-Fi USB Dongle

Category	Features	WF40	WF50
			
Compatible IP Phone		Wireless Headset Adapter	Wireless Headset Adapter
Product	Size (L x W x H)	26.9 mm x 18 mm x 8 mm	52 mm X 27 mm X 8 mm
	Port	USB 2.0	USB 2.0
Network&Security	Network Standard	IEEE802.11b/g/n	IEEE802.11b/g/n IEEE 802.11 a/n/ac




	Transmission Rate	150 Mbps	- 5GHz: 11ac: Up to 433Mbps(dynamic) 11n: Up to 150Mbps(dynamic) 11a: Up to 54Mbps(dynamic) - 2.4GHz: 11n: Up to 150Mbps(dynamic) 11g: Up to 54Mbps(dynamic) 11b: Up to 11Mbps(dynamic)
	Frequency Range	2.4GHz	2.4GHz/5GHz
	Security	64/128/152-bit WEP Encryption, WPA-PSK, WPA2-PSK	WEP, WPA/WPA2,WPA-PSK/WPA2-PSK, WPA2-Enterprise

Bluetooth USB Dongle

Category	Features	BT40*	BT41	BT42	BT50	BT51
						 BT51-A BT51-C
Compatible IP Phone		Bluetooth USB Dongle	Bluetooth USB Dongle	Bluetooth USB Dongle	Bluetooth USB Dongle	Bluetooth USB Dongle
Product	Size (L x W x H)	18 mm X 14 mm X 5.5 mm	18 mm X 14 mm X 5.5 mm	52 mm x 27 mm x 8mm	18 mm x 13.9 mm x 5.1mm	· BT51-A: 18 mm x 13.9 mm x 5.1mm · BT51-C: 16.15 mm x 14.5 mm x 9mm
	Port	USB 2.0	USB 2.0	USB 2.0	USB 2.0	USB 2.0
Main Features	Bluetooth specification	V4.0+HS system	V4.1	V4.2	BT 5.0	BT 5.0
	Operating distance	10 meters	10 meters	10 meters	Up to 100ft/30m	Up to 100ft/30m
	Answer incoming calls through Bluetooth headset	✓	✓	✓	✓	✓
	Terminate calls through Bluetooth headset	✓	✓	✓	✓	✓
	Adjusts the volume of Bluetooth headset through Bluetooth headset or your phone	✓	✓	✓	✓	✓
	Visual indicator	☒	☒	☒	✓	✓
Network	Bluetooth frequency range	2.402GHz-2.480GHz	2.402GHz-2.480GHz	2400-2483.5MHz	2400-2483.5MHz	2400-2483.5MHz
	Symbol rate	3Mbps	3Mbps	3Mbit/sec	3Mbit/sec	3Mbit/sec

*: EOL Product

Wireless Expansion Microphone

Category	Features	CPW65	CPW90	CPW90-BT
				
Compatible IP Phone		Wireless Expansion Microphone	Wireless Expansion Microphone	Wireless Expansion Microphone
Product	Size (W x D x H)	-Microphone: 78.59 mm x 78.59 mm x 15.3 mm -Charge Cradle: 100 mm x 60 mm x 25.8 mm	-Microphone: 85.98 mm x 85.98 mm x 16.35 mm -Charge Cradle: 190 mm x 86 mm x 25.5 mm	Microphone: 85.98 mm x 85.98 mm x 16.35 mm Charge Cradle: 190 mm x 86 mm x 25.5 mm

Features	Talking Time	13-hour	19-hour	48-hour
	Standby Time	11-day	11-day	7-day
	Largest Connection Distance	20 meters	20 meters	20 meters
	Pickup Range	10-foot (3-meter) 360° voice pickup	10-foot (3-meter) 360° voice pickup	10-foot (3-meter) 360° voice pickup
	Battery Capacity	1500mAh	800mAh	800mAh
	Capacitive Mute Touchpad	✓	✓	✓
	Place-and-Charge Charge Cradle	✓	✓	✓
	Transmission Technology	DECT	DECT	Bluetooth
Audio	HD Audio	✓	✓	✓
	Echo Cancellation	✓	✓	✓

Quick Start Guide

Expansion Module

EXP20

Dear Customers,

Yealink hereby informs you that the EXP20 Expansion Module has been discontinued since 2021-09-30. After the date, new orders for the product would not be accepted.

After the End-of-Life date, Yealink will not pursue any new feature development on EXP20 Expansion Module, but we will follow the industry standard practices regarding software support of the discontinued (EOL) products. Consistent with such standards, Yealink will continue to offer support and after-sale service.

For more information about EXP20 Quick Start Guide, please refer to: [EXP20 QSG](#).

For more information about EXP20 User Guide, please refer to: [EXP20 User Guide](#).

EXP38

Dear Customers,

Yealink hereby informs you that EXP38 Expansion Module has been discontinued since December 31, 2015. After the date, the order for new product would not be accepted.

Yealink does not intend to pursue new feature development on EXP38 Expansion Module. But Yealink follows industry standard practices regarding the support of its software for discontinued (EOL) products. Consistent with such standards, Yealink will continue to offer support and after-sale service.

For more information about EXP38 Quick Start Guide, please refer to the attachment.

EXP39

Dear Customers,

Yealink hereby informs you that EXP39 Expansion Module has been discontinued since December 31, 2015. After the date, the order for new product would not be accepted.

Yealink does not intend to pursue new feature development on EXP39 Expansion Module. But Yealink follows industry standard practices regarding the support of its software for discontinued (EOL) products. Consistent with such standards, Yealink will continue to offer support and after-sale service.

For more information about EXP39 Quick Start Guide, please refer to the attachment.

EXP40

Dear Customers,

Yealink hereby informs you that the EXP40 Expansion Module has been discontinued since 2021-12-31. After the date, new orders for the product would not be accepted.


After the End-of-Life date, Yealink will not pursue any new feature development on EXP40 Expansion Module, but we will follow the industry standard practices regarding software support of the discontinued (EOL) products. Consistent with such standards, Yealink will continue to offer support and after-sale service.

For more information about EXP40 Quick Start Guide, please refer to: [EXP40 QSG](#).

For more information about EXP40 User Guide, please refer to: [EXP40 User Guide](#).


EXP43

 Package Contents

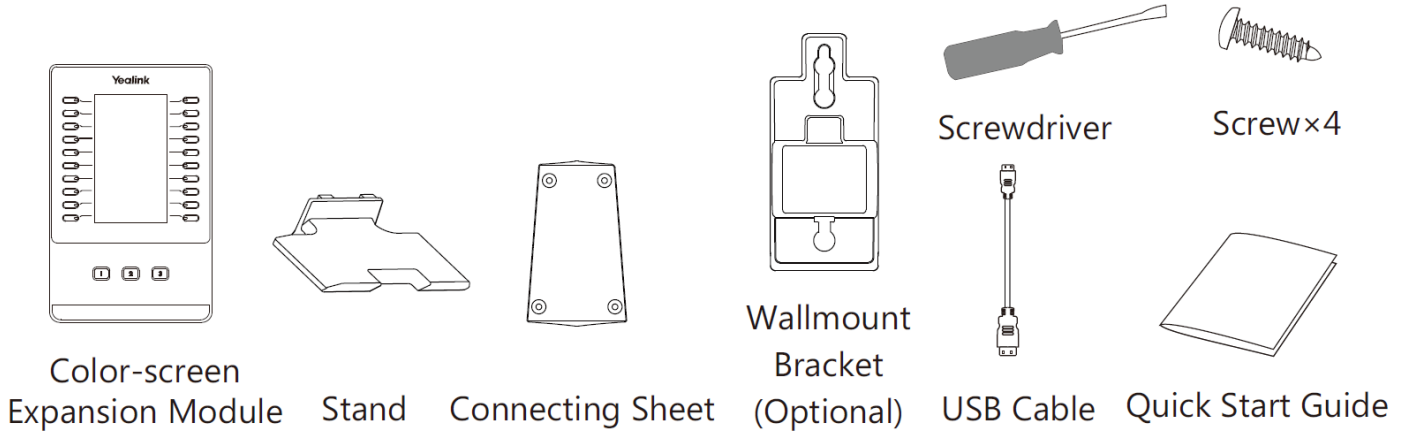


Connect to the Phone

 1. Connect the EXP43 and the phone using the supplied screws and connecting sheet, as shown below:

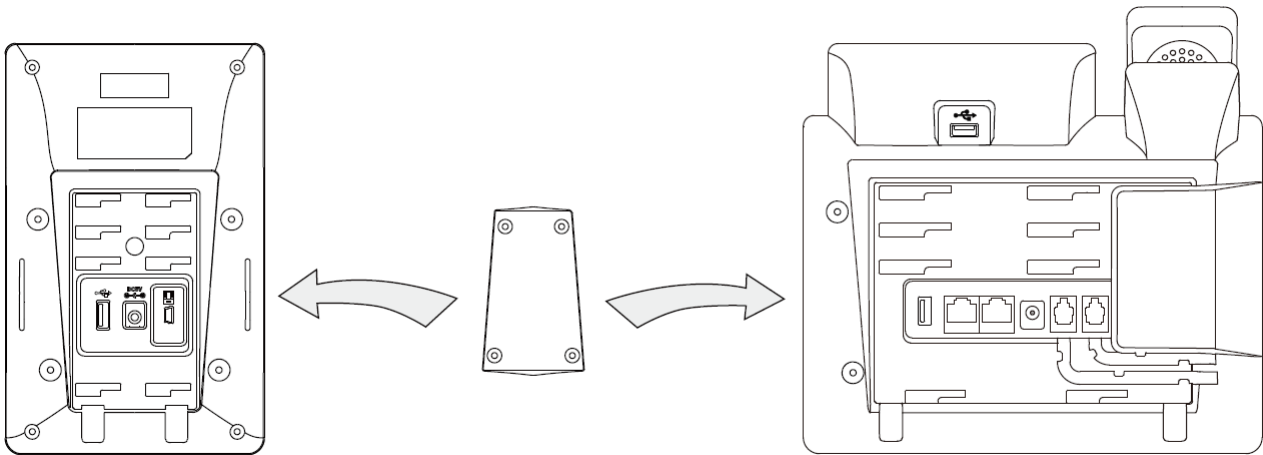


 Your phone and the expansion module will be connected as shown below:

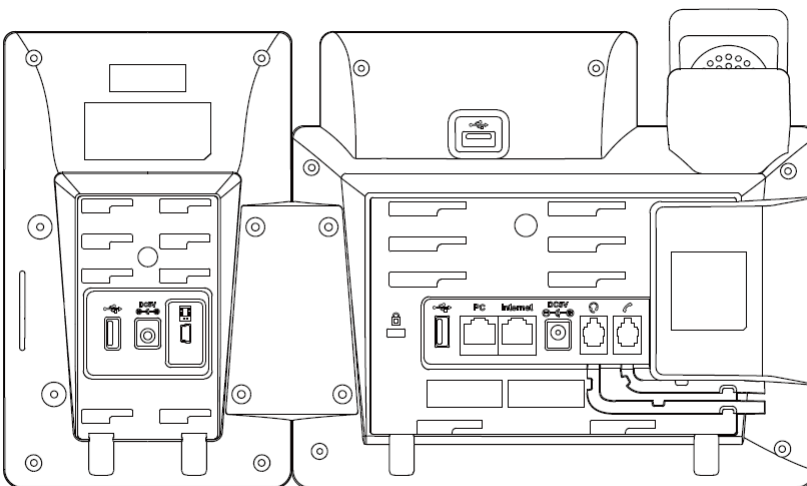


Connect Two Expansion Modules

 1. Follow the same step to connect two expansion modules:

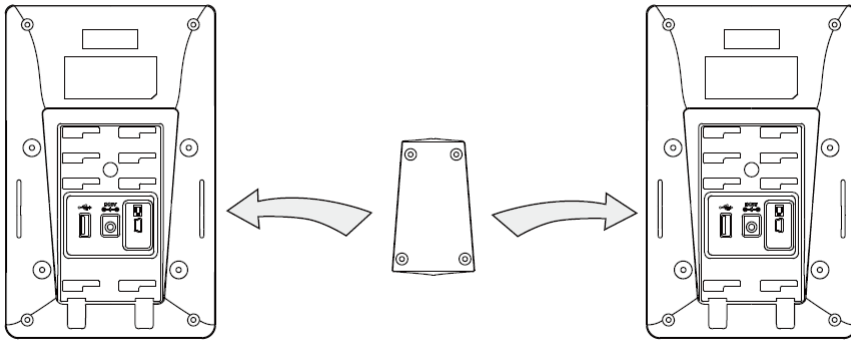

 Your phone and the two expansion modules are connected as shown below:

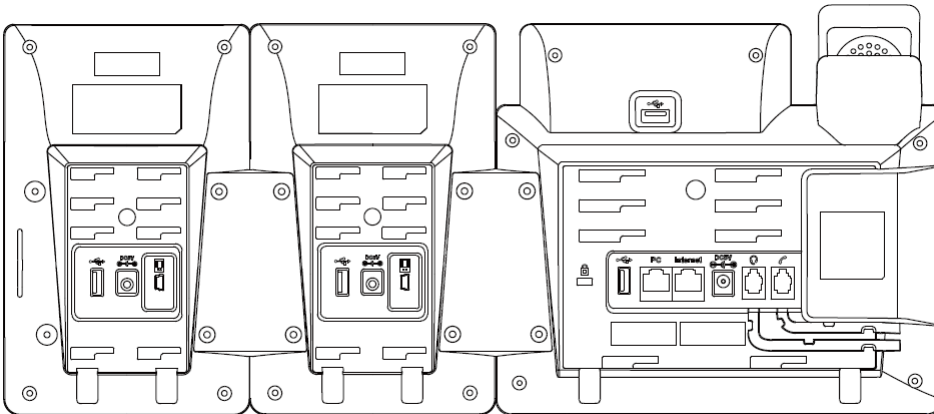


NOTE

The T43U/T46U/T48U IP phone can support 3 expansion modules at most. But if you use the expansion module on the T43U or use more than one expansion module on the T46U/T48U, you need to connect an additional Yealink power adapter (5V/2A) to any one of the expansion modules. The power adapter should be purchased separately
...

Connect the USB Cable

Connect the USB jack of the IP phone and the mini USB jack of the first module using a USB cable. If you want to connect another module, connect the USB jack of the first module and the mini USB jack of the second module using a USB cable.

 As shown below:

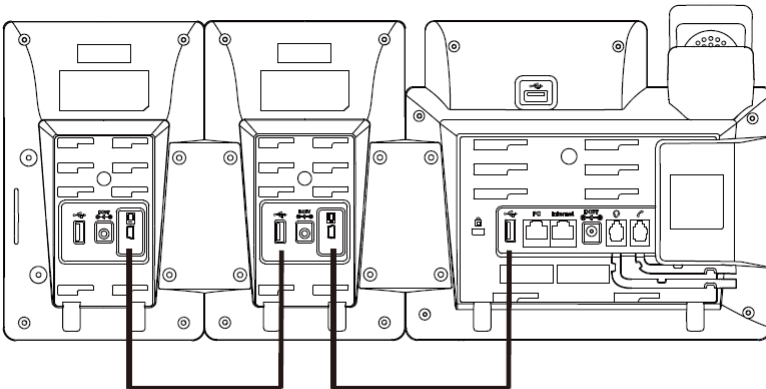

Connecting Cord

 
TIP

You just need to connect the USB jack of the previous module and the mini USB jack of the next module using a USB cable.


Then you can attach the stand, the power adapter and the Ethernet cable to the phone, connect the handset and headset to use.

Assemble the EXP43

Attach the stand, as shown below:

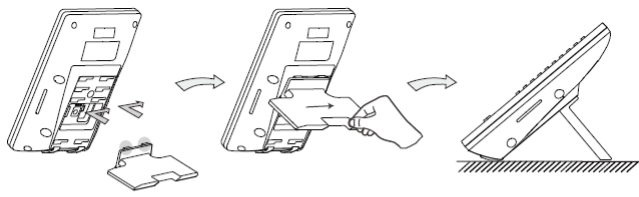

Desk Mount Method

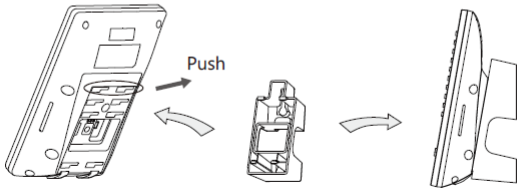 

Wall Mount Method(Optional)

Basic Configurations

The EXP43 supports 60 DSS keys in three screen pages. Each page displays 20 DSS keys.

You can press **1**, **2** or **3** to switch to the corresponding page and use your desired DSS key.

You can assign a feature to a DSS key via phone user interface. Press the desired DSS key of EXP43 for about 5 seconds, the phone LCD screen will prompt the setting of this key.

The following sections provide you with detailed instruction of assigning some frequently used features to the DSS keys via web user interface.

Conference

The conference key allows you to set up a conference with a third party when already in a call.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **Conference** from the **Type** drop-down menu.
3. Enter the phone number or extension of the destination party in the **Value** field.
4. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
5. Click **Confirm** to accept the change.

Forward

When there is an incoming call, you can press the forward key to forward the incoming call to the pre-defined destination number.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **Forward** from the **Type** drop-down menu.
3. Enter the destination number to forward the incoming calls to in the **Value** field.
4. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
5. Click **Confirm** to accept the change.

Transfer

You can press the transfer key to perform a Blind/Semi-Attended/Attended transfer during a call.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **Transfer** from the **Type** drop-down menu.
3. Enter the phone number you want to transfer the call to in the **Value** field.
4. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
5. Click **Confirm** to accept the change.

Hold

You can press the hold key to hold and retrieve a call.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **DND** from the **Type** drop-down menu.
3. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
4. Click **Confirm** to accept the change.

DND

You can press the DND key when the phone is idle to activate or deactivate the DND mode.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **DND** from the **Type** drop-down menu.
3. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.

4. Click **Confirm** to accept the change.

Recall

You can place a call back to the caller of the last incoming call by pressing the ReCall key.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **Recall** from the **Type** drop-down menu.
3. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
4. Click **Confirm** to accept the change.

SMS

You can access the SMS more quickly and easily by pressing the SMS key.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **SMS** from the **Type** drop-down menu.
3. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
4. Click **Confirm** to accept the change.

Direct Pickup

If you press the direct pickup key when the specific phone number receives an incoming call, the call is answered on your phone.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **Pickup** from the **Type** drop-down menu.
3. Enter the direct call pickup code followed by the specific number that you want to pick up a call from in the **Value** field.
4. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
5. Select the desired line from the **Line** drop-down menu.
6. Click **Confirm** to accept the change.

Group Pickup

You can pick up the incoming call of the pre-defined group by pressing the group pickup key.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select Group Pickup from the **Type** drop-down menu.
3. Enter the group call pickup code in the **Value** field.
4. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
5. Select the desired line from the **Line** drop-down menu.
6. Click **Confirm** to accept the change.

Call Park

You can park a call at an extension by pressing the call park key. The current call is put on hold and can be retrieved on another IP phone.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **Call Park** from the **Type** drop-down menu.
3. Enter the call park code in the **Value** field.
4. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
5. Select the desired line from the **Line** drop-down menu.
6. Click **Confirm** to accept the change.

Voice Mail

You can access the voice mail more quickly by pressing the voice mail key.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **Voice Mail** from the **Type** drop-down menu.
3. Enter the voice mail access code in the **Value** field.
4. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
5. Select the desired line from the **Line** drop-down menu.
6. Click **Confirm** to accept the change.

Speed Dial

You can speed up dialing the numbers which are frequently used or hard to remember by pressing the speed dial key.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **SpeedDial** from the **Type** drop-down menu.
3. Enter the desired number you want to dial out directly in the **Value** field.
4. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
5. Select the desired line from the **Line** drop-down menu.
6. Click **Confirm** to accept the change.

Intercom

You can connect to the operator or the secretary more quickly by pressing the intercom key in an office environment.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **Intercom** from the **Type** drop-down menu.

3. Enter the remote extension number in the **Value** field.
4. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
5. Select the desired line from the **Line** drop-down menu.
6. Click **Confirm** to accept the change.

Line

You can configure a DSS key as the line key. It performs the same as a hard line key.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **Line** from the **Type** drop-down menu.
3. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
4. Select the desired line from the **Line** drop-down menu.
5. Click **Confirm** to accept the change.

BLF

The BLF key allows you to monitor the status of the pre-defined number. You can also pick up incoming calls of the monitored number.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **BLF** from the **Type** drop-down menu.
3. Enter the phone number or extension you want to monitor in the **Value** field.
4. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
5. Select the desired line from the **Line** drop-down menu.
6. Enter the directed call pickup code in the **Extension** field.
7. Click **Confirm** to accept the change.

Group Listening

You can configure a DSS key as the group listening key. Then you are allowed to activate the Speakerphone and Handset/Headset at the same time by pressing the group listening key.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select Group Listening from the **Type** drop-down menu.
3. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
4. Click **Confirm** to accept the change.

FAQ

I have an IP Phone with an EXP module connection, but I need to connect the phone to a headset with an EHS adapter. How can I connect them?


You can connect the headset to the USB port on the EXP module, but we recommend connecting your phone to Yealink headsets for better compatibility.

Related Guide


For more information about EXP40 User Guide, please refer to the attachment.

EXP50

 
Package Contents

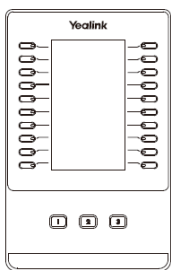

Color-screen
Expansion Module

 


Stand

 


Connecting Sheet



 
USB Cable



Screwdriver

 


Screw

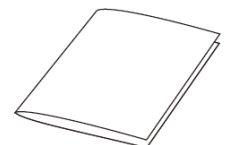 


Quick Start Guide

Connect to the Phone

 1. Connect the EXP50 and the phone using the supplied screw and connecting sheet, as shown below:

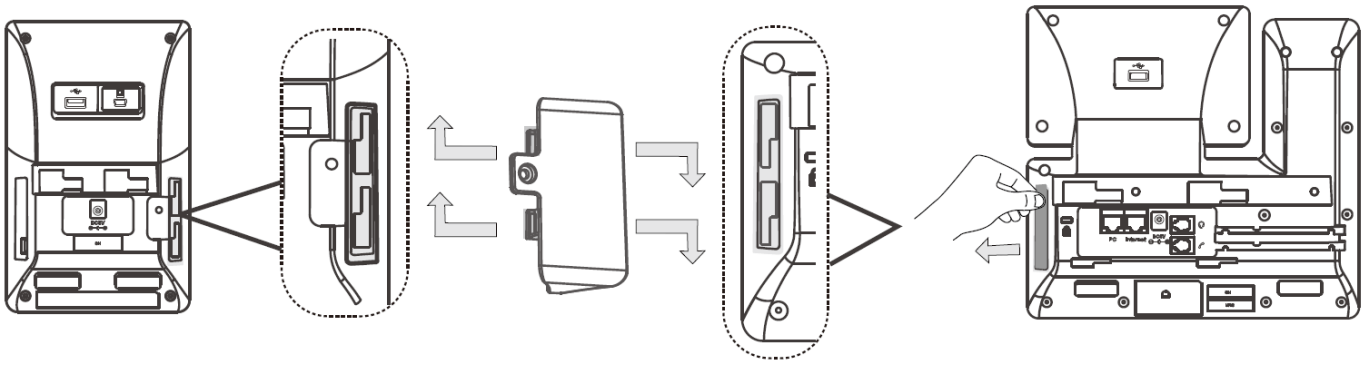


 You may need to pull out the silica gel on the phone when connecting expansion module.

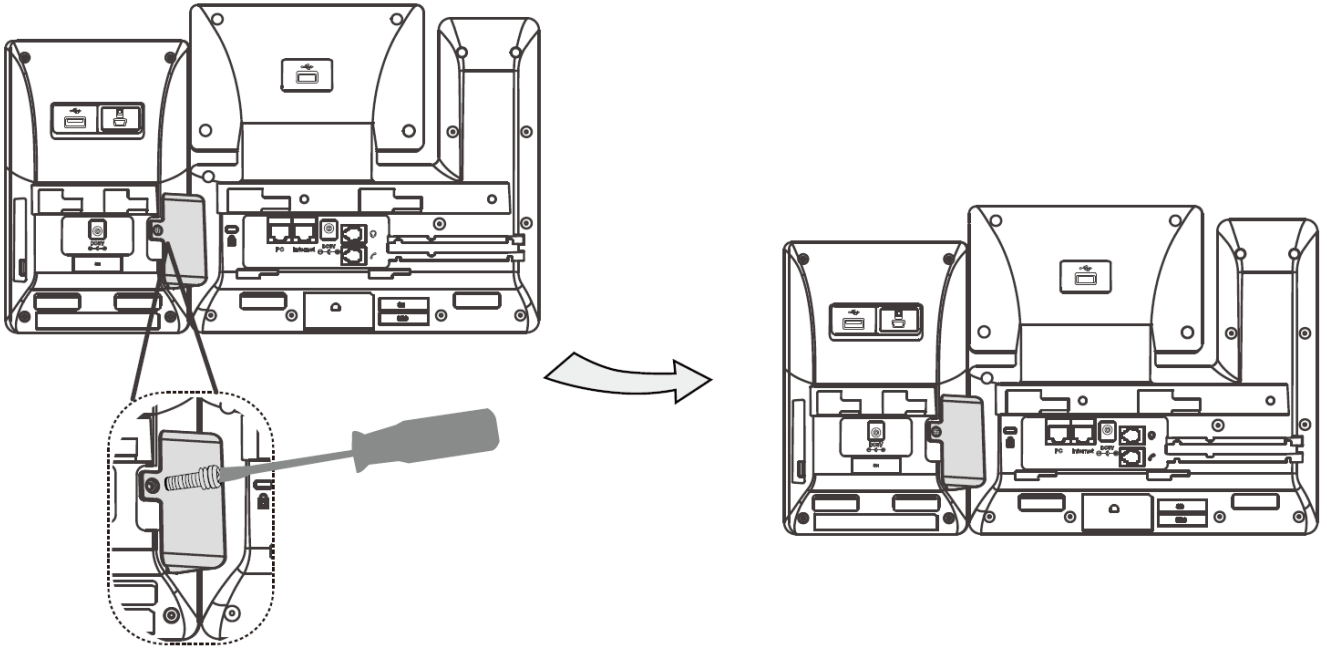


Connect Two Expansion Modules

 1. Follow the same step to connect two expansion modules:

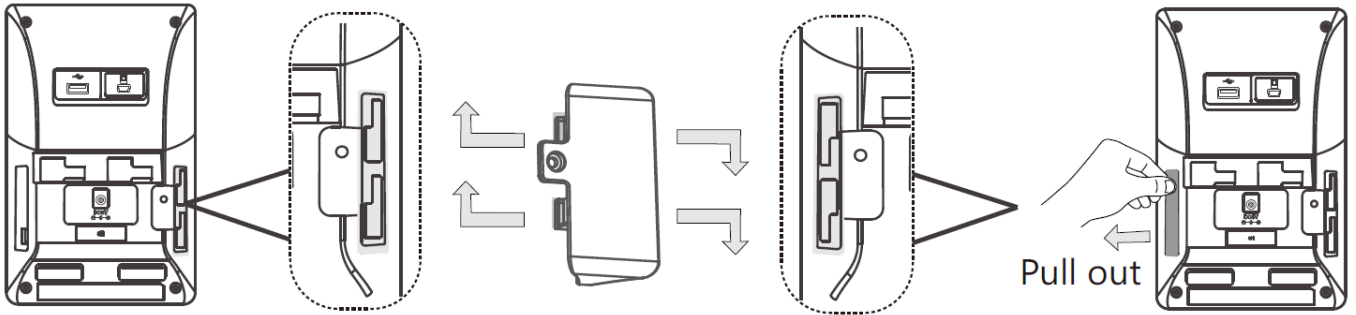

The slots are plugged up by silica gel. You can pull out the silica gel when cascading expansion modules.

 Your phone and the two expansion modules are connected as shown below:

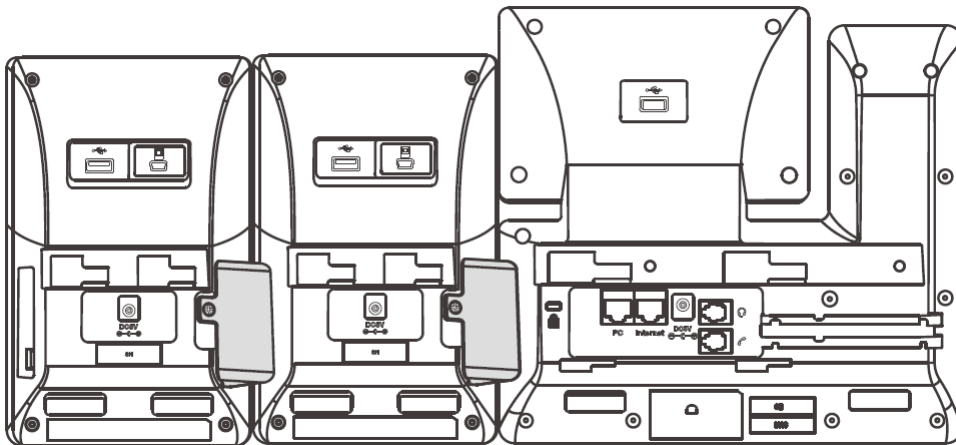


NOTE

The T53/T53W/T54W/T57W/T58A/T58A with camera IP phone can support 3 expansion modules at most. But if you use more than one expansion module, you need to connect an additional Yealink power adapter (5V/2A) to any one of the expansion modules. The power adapter should be purchased separately.

Connect the USB Cable

Connect the USB jack of the IP phone and the mini USB jack of the first module using a USB cable. If you want to connect another module, connect the USB jack of the first module and the mini USB jack of the second module using a USB cable.

 As shown below:

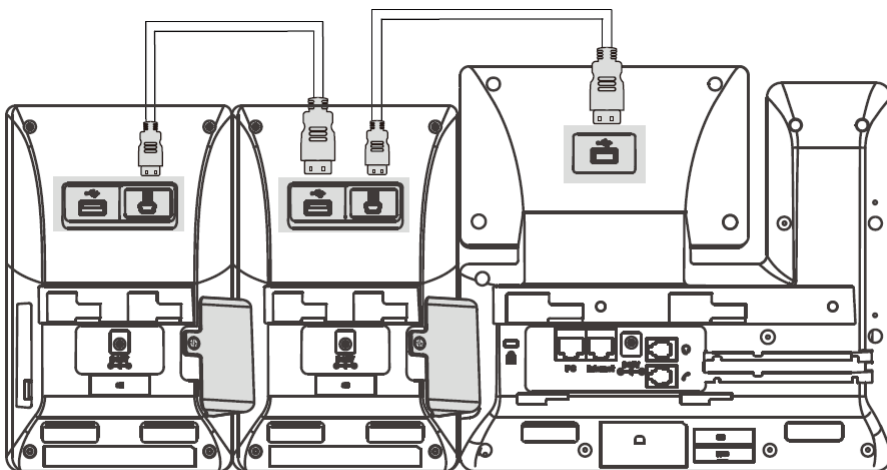

Connecting USB Cable

TIP

You just need to connect the USB jack of the previous module and the mini USB jack of the next module using a USB cable.

Then you can attach the stand, the power adapter and the Ethernet cable to the phone, connect the handset and headset to use.

Assemble the EXP50

Attach the stand, as shown below:



Desk Mount Method

Basic Configurations

The EXP50 supports 60 DSS keys in three screen pages. Each page displays 20 DSS keys.

You can press **1**, **2** or **3** to switch to the corresponding page and use your desired DSS key.

You can assign a feature to a DSS key via phone user interface. Press the desired DSS key of EXP50 for about 5 seconds, the phone LCD screen will prompt the setting of this key. The following sections provide you with detailed instruction of assigning some frequently used features to the DSS keys via web user interface.

Conference

The conference key allows you to set up a conference with a third party when already in a call.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **Conference** from the **Type** drop-down menu.
3. Enter the phone number or extension of the destination party in the **Value** field.
4. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
5. Click **Confirm** to accept the change.

Forward

When there is an incoming call, you can press the forward key to forward the incoming call to the pre-defined destination number.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **Forward** from the **Type** drop-down menu.
3. Enter the destination number to forward the incoming calls to in the **Value** field.
4. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
5. Click **Confirm** to accept the change.

Transfer

You can press the transfer key to perform a Blind/Semi-Attended/Attended transfer during a call.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **Transfer** from the **Type** drop-down menu.
3. Enter the phone number you want to transfer the call to in the **Value** field.
4. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
5. Click **Confirm** to accept the change.

Hold

You can press the hold key to hold and retrieve a call.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **DND** from the **Type** drop-down menu.
3. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
4. Click **Confirm** to accept the change.

DND

You can press the DND key when the phone is idle to activate or deactivate the DND mode.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **DND** from the **Type** drop-down menu.
3. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
4. Click **Confirm** to accept the change.

Recall

You can place a call back to the caller of the last incoming call by pressing the ReCall key.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **Recall** from the **Type** drop-down menu.
3. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
4. Click **Confirm** to accept the change.

SMS

You can access the SMS more quickly and easily by pressing the SMS key.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **SMS** from the **Type** drop-down menu.
3. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
4. Click **Confirm** to accept the change.

Direct Pickup

If you press the direct pickup key when the specific phone number receives an incoming call, the call is answered on your phone.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **Pickup** from the **Type** drop-down menu.
3. Enter the direct call pickup code followed by the specific number that you want to pick up a call from in the **Value** field.
4. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
5. Select the desired line from the **Line** drop-down menu.
6. Click **Confirm** to accept the change.

Group Pickup

You can pick up the incoming call of the pre-defined group by pressing the group pickup key.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select Group PickUp from the **Type** drop-down menu.
3. Enter the group call pickup code in the **Value** field.
4. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
5. Select the desired line from the **Line** drop-down menu.
6. Click **Confirm** to accept the change.

Call Park

You can park a call at an extension by pressing the call park key. The current call is put on hold and can be retrieved on another IP phone.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **Call Park** from the **Type** drop-down menu.
3. Enter the call park code in the **Value** field.
4. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
5. Select the desired line from the **Line** drop-down menu.
6. Click **Confirm** to accept the change.

Voice Mail

You can access the voice mail more quickly by pressing the voice mail key.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **Voice Mail** from the **Type** drop-down menu.
3. Enter the voice mail access code in the **Value** field.
4. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
5. Select the desired line from the **Line** drop-down menu.
6. Click **Confirm** to accept the change.

Speed Dial

You can speed up dialing the numbers which are frequently used or hard to remember by pressing the speed dial key.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **SpeedDial** from the **Type** drop-down menu.
3. Enter the desired number you want to dial out directly in the **Value** field.
4. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
5. Select the desired line from the **Line** drop-down menu.
6. Click **Confirm** to accept the change.

Intercom

You can connect to the operator or the secretary more quickly by pressing the intercom key in an office environment.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **Intercom** from the **Type** drop-down menu.
3. Enter the remote extension number in the **Value** field.
4. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.

5. Select the desired line from the **Line** drop-down menu.
6. Click **Confirm** to accept the change.

Line

You can configure a DSS key as the line key. It performs the same as a hard line key.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **Line** from the **Type** drop-down menu.
3. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
4. Select the desired line from the **Line** drop-down menu.
5. Click **Confirm** to accept the change.

BLF

The BLF key allows you to monitor the status of the pre-defined number. You can also pick up incoming calls of the monitored number.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select **BLF** from the **Type** drop-down menu.
3. Enter the phone number or extension you want to monitor in the **Value** field.
4. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
5. Select the desired line from the **Line** drop-down menu.
6. Enter the directed call pickup code in the **Extension** field.
7. Click **Confirm** to accept the change.

Group Listening

You can configure a DSS key as the group listening key. Then you are allowed to activate the Speakerphone and Handset/Headset at the same time by pressing the group listening key.

1. Click **DSSKey > Ext Key**.
2. In the desired DSS key field, select Group Listening from the **Type** drop-down menu.
3. (Optional.) Enter the string that will appear on the LCD screen in the **Label** field.
4. Click **Confirm** to accept the change.

FAQ

I have an IP Phone with an EXP module connection, but I need to connect the phone to a headset with an EHS adapter. How can I connect them?

You can connect the headset to the USB port on the EXP module, but we recommend connecting your phone to Yealink headsets for better compatibility.


Related Guide

For more information about EXP50 User Guide, please refer to: [EXP50 User Guide](#).

Wireless Headset Adapter

EHS35

 Package Contents

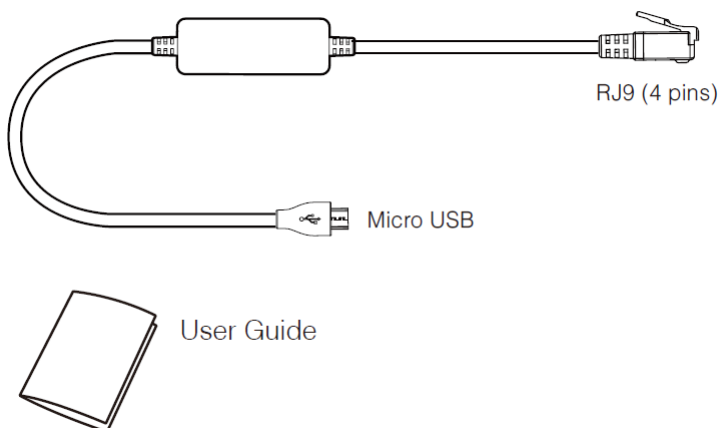


Connect the IP Phone and Headset

The WH62/WH63 headset version must be 104.434.0.15 or later.

You can check out the headset version via Yealink USB Connect (PC). Download: <https://www.yealink.com/product/yuc>.

 
Connect the Mitel & Unify Phone

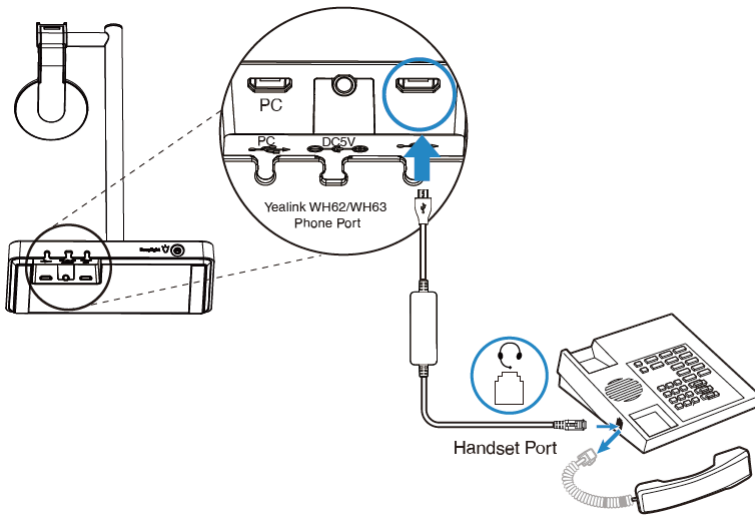

You need to do the following on the WH62/WH63:

1. Before a call, press the **PC** button on the base to enable the audio channel. The LED indicator of the **PC** button turns solid green.
2. After a call, press the **PC** button on the base again or dock the headset to the base to disable the audio channel. The LED indicator of the **PC** button turns off.
3. The call can only be controlled on the IP phone.

 Connect the Avaya/Poly/GS/Fanvil/Snom IP Phone

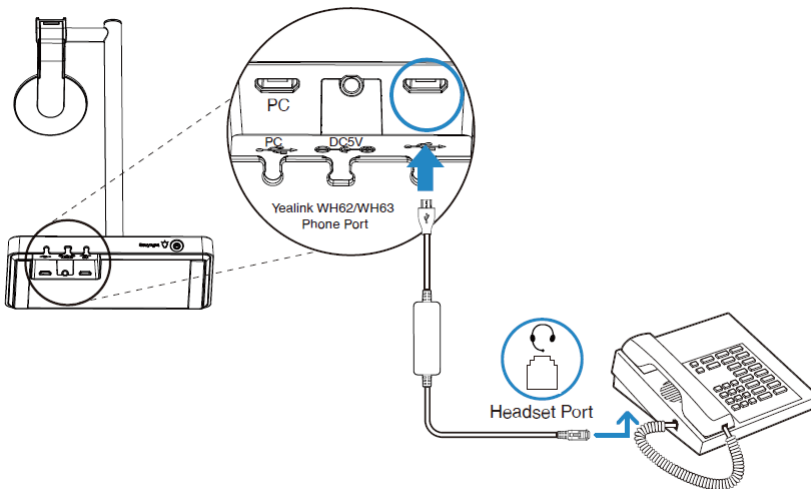


You need to do the following:

Step 1: For IP Phones, you need to press the **PC** button on the phone to set the audio device as a headset. The call can only be controlled on the IP phone.

Step 2: For WH62/WH63:

- Before a call, press the **PC** button on the base to enable the audio channel. The LED indicator of the **PC** button turns solid green.
- After a call, press the **PC** button on the base again or dock the headset to the base to disable the audio channel. The LED indicator of the **PC** button turns off.

 Connect the Yealink IP Phone

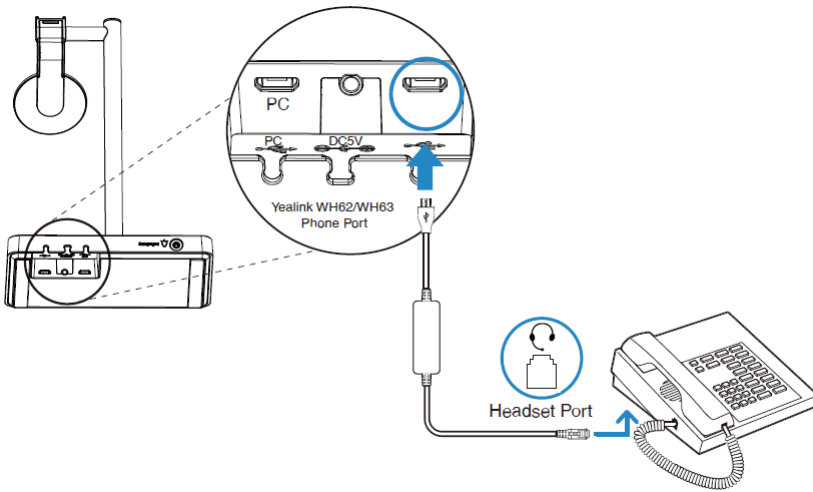

You need to do the following:

Step 1: For IP Phones, you need to press the **PC** button on the phone to set the audio device as a headset. The call can only be controlled on the IP phone.

Step 2: For WH62/WH63:

- Before a call, press the **PC** button on the base to enable the audio channel. The LED indicator of the **PC** button turns solid green.
- After a call, press the **PC** button on the base again or dock the headset to the base to disable the audio channel. The LED indicator of the **PC** button turns off.

NOTE

If it is connected to a T3X series IP phone, the WH62/WH63 can directly control the call. We recommend updating the T3 series phones to the latest firmware version. For more details, please scan the QR code.



For more information, please refer to [EHS35/EHS60/EHS61 Wireless Headset Adapter Guide](#).

NOTE


- Connect Yealink T3X series phones: EHS35 supports WH62/WH63 to control phone calls and transmit audio.
- Connect Yealink T58, T67LTE, T4XS, T4XU, T5XW, T2XG, T4XG, VP59, MP5X: EHS35 can only transmit audio.

FAQ


[How to use EHS35 with T3 series phones and WH62/WH63 headsets together?](#)

EHS36

 Package Contents

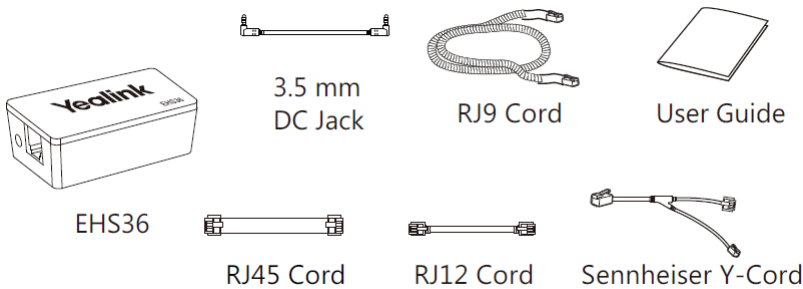

Port Description

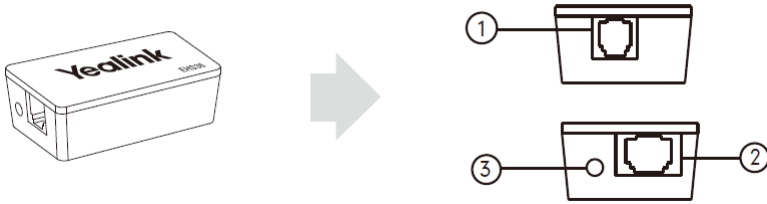 

No.	Description
①	Connect this port and the IP phone EXT/EHS port or Expansion Module EXT port (the expansion module has been connected to the phone) using the RJ12 cord.
②	Connect this port and the Jabra(GN Netcom)/Sennheiser Wireless headset using the RJ45 cord.
③	Connect this port and the Plantronics Wireless headset using the 3.5 mm DC jack.

Cord Description


In addition to the cords mentioned in the Port Description section, the RJ9 Cord and the Sennheiser Y-Cord are also provided.

Cord	Description
RJ9 Cord	For the audio connection between the IP phone headset port and the Jabra (GN Netcom) wireless headset.
Sennheiser Y-Cord	For the audio connection between the IP phone headset port, Wireless Headset Adapter and the Sennheiser wireless headset.


Connect IP Phone and Headset

This section introduces the connection between SIP-T48S/T48G/T46S/T46G/T42S/T42G/T41S/T41P/T40P/T40G/T29G/T27P/T27G IP phones and the wireless headset. The following figures take the SIP-T46S IP phone as an example.

 The following figure shows the connection between the IP phone and the Jabra (GN Netcom) wireless headset.

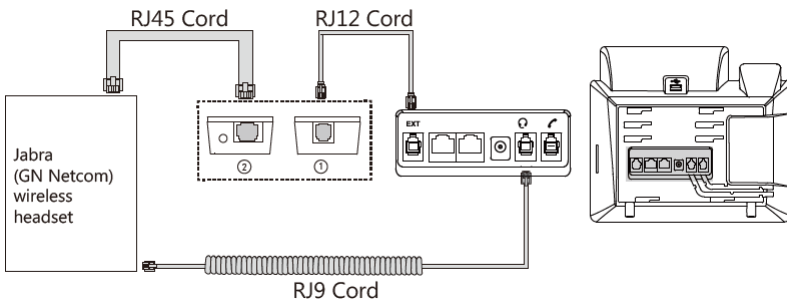


 The following figure shows the connection between the IP phone and the Sennheiser wireless headset.

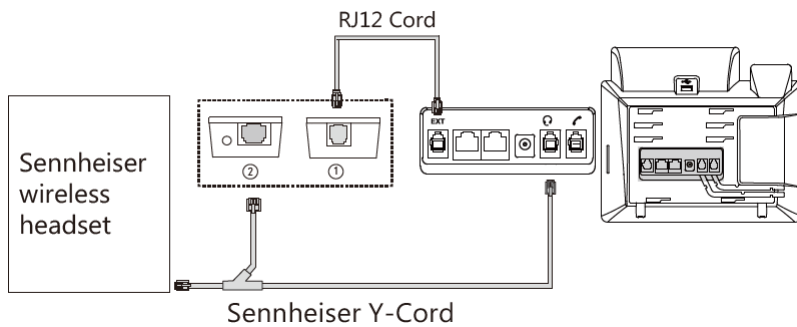

TIP
The sennheiser wireless headset must be running the latest firmware of the DW-Office series (version 96 or later) !

 The following figure shows the connection between the IP phone and the Plantronics wireless headset.

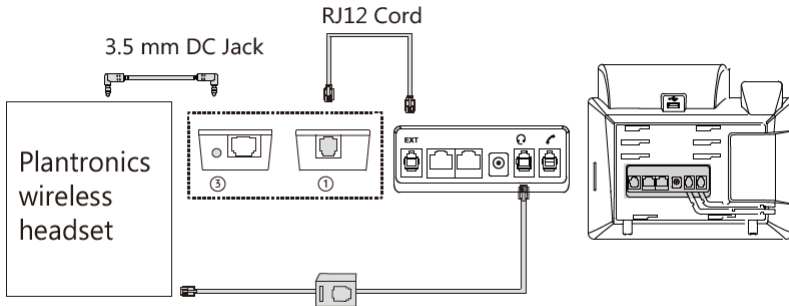


This cord is provided by Plantronics.

FAQ


[EHS36 Headset Adapter plus Plantronics Online Indicator Light](#)

EHS40

 Package Contents

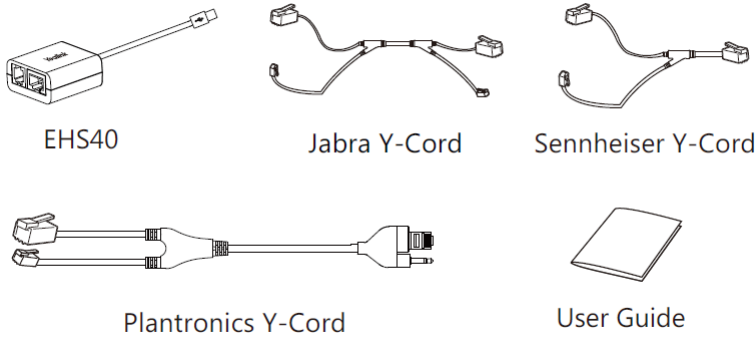

Port Description

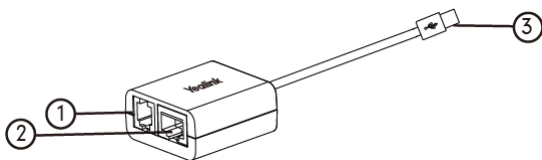 

No.	Description
①②	Allow you to connect the Jabra/Plantronics/Sennheiser wireless headset using the Jabra/Plantronics/Sennheiser Y-Cord.
③	Allows you to connect EHS40 and the IP phone.


NOTE
 If an expansion module has been connected to the SIP-T58A/T57W/T54W/T53W/T53/T48U/T46U/T43U IP phone, you can connect the EHS40 to the expansion module.

Cord Description


Cord	Description
RJ9 Cord	For the audio connection between the Wireless Headset Adapter EHS40 and the Jabra wireless headset.
Sennheiser Y-Cord	For the audio connection between the Wireless Headset Adapter EHS40 and the Sennheiser wireless headset.
Plantronics Y-Cord	For the audio connection between the Wireless Headset Adapter EHS40 and the Plantronics wireless headset.

Connect IP Phone and Headset

 
This section introduces the connection between SIP-VP59/T58A/T57W/T54W/T53W/T53/T48U/T48S/T46U/T46S/T43U/T42U/T42S/T41S IP phones and the wireless headset. The following figures take the SIP-T53 IP phone as an example. The following figure shows the connection between the IP phone and the Jabra (GN Netcom) wireless headset.

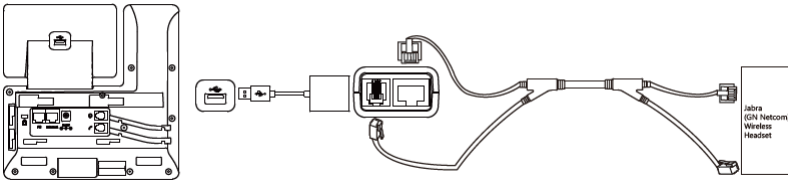

 The following figure shows the connection between the IP phone and the Sennheiser wireless headset.

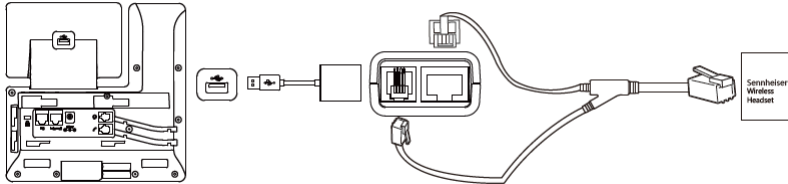

 The following figure shows the connection between the IP phone and the Plantronics wireless headset.

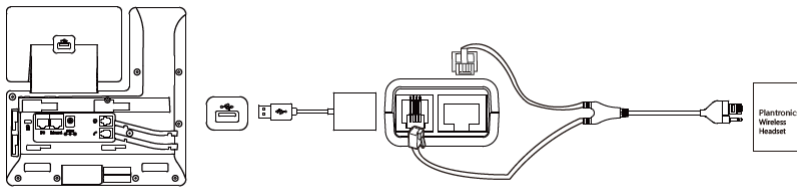


Update EHS40

You can update the EHS60 firmware via Yealink USB Connect. You can refer to [Update Firmware](#).

NOTE
Contact Yealink Support to obtain the special software upgrade package.

EHS60

 Package Contents




EHS60




Cable A

 RJ9 (4 pins) to RJ9 (4 pins)




Cable B

 RJ9 (4 pins) to RJ9 (4 pins)
& RJ45 (8 pins) to RJ12 (6 pins)



Cable C

 5 pin to RJ45 (8 pins)




User Guide

Connect the IP Phone and Headset

NOTE

You need to enable EHS feature for the phone on the server side for the first time. The configuration item is **Wireless Headset Hookswitch Control Enabled**. Once the phone is configured, you can connect the EHS60 cord and headset.

 
Connect the Cisco IP phone

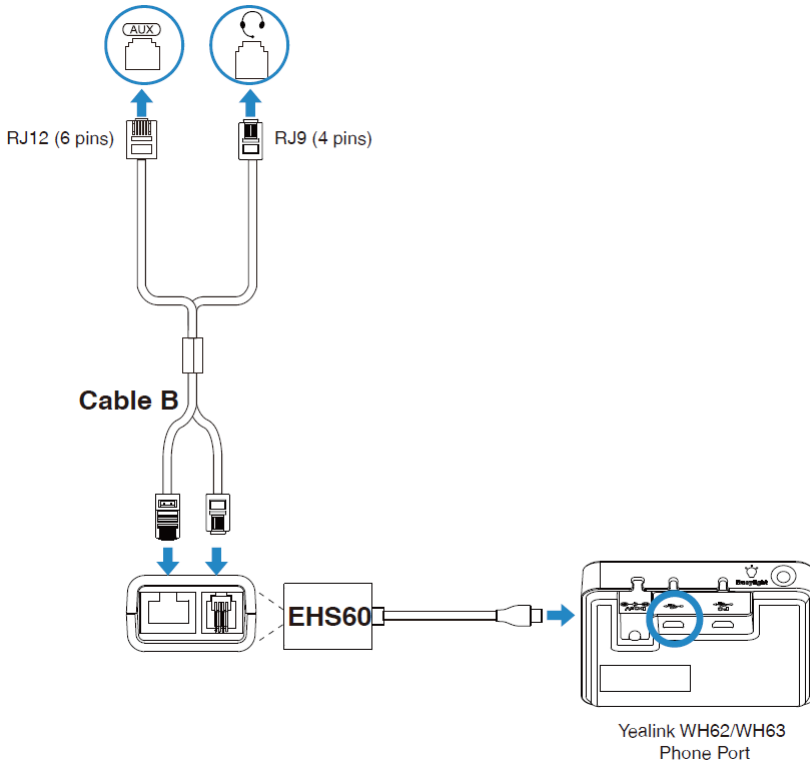

Connect the Avaya/Grandstream/Fanvil IP phone

NOTE

 
- For Avaya phones, you need to go to the phone's setup menu to enable the EHS feature. Once the phone is configured, you can connect the EHS60 cord and headset. Turn "switch hook and alert" to ON at the path: **Setting > audio > headset signaling > switch hook and alert ON** or **Options&setting > Call settings > headset signaling > switch hook and alert ON**.
- For Grandstream phones, you need to enable the EHS feature for this phone extension on the server side. Once the phone is configured, you can connect the EHS60 cord and headset.
 - 1) Set **HEADSET key mode** to **Default Mode** or **Headset/Hands-free Mode**.
 - 2) Set **Headset Type** to **Plantronics EHS**.
 - 3) Set **Always Ring Speaker** to **Yes**.

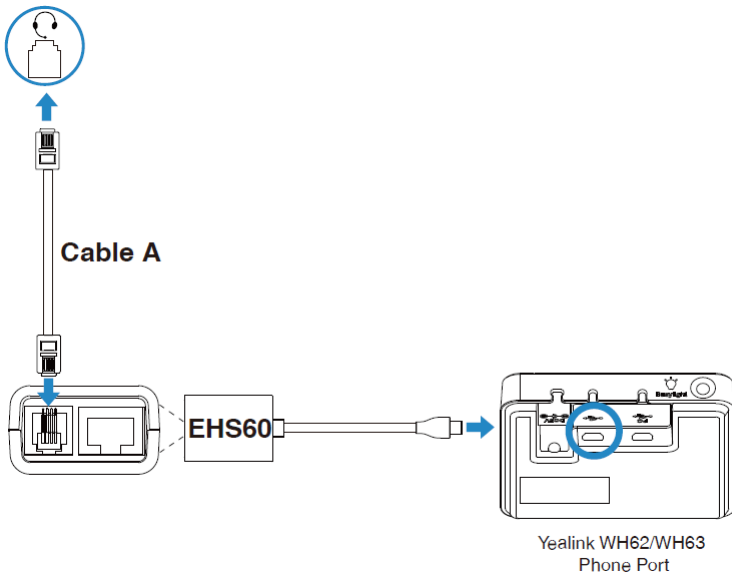

Connect the Poly IP phone

NOTE

 You need to go to the setup menu of the phone to enable the EHS feature. Once the phone is configured, you can connect the EHS60 cord and headset. Set Hookswitch Mode to Jabra or Sennheizer mode at the path: **setting > basic > preferences > Headsethook > switch mode.**

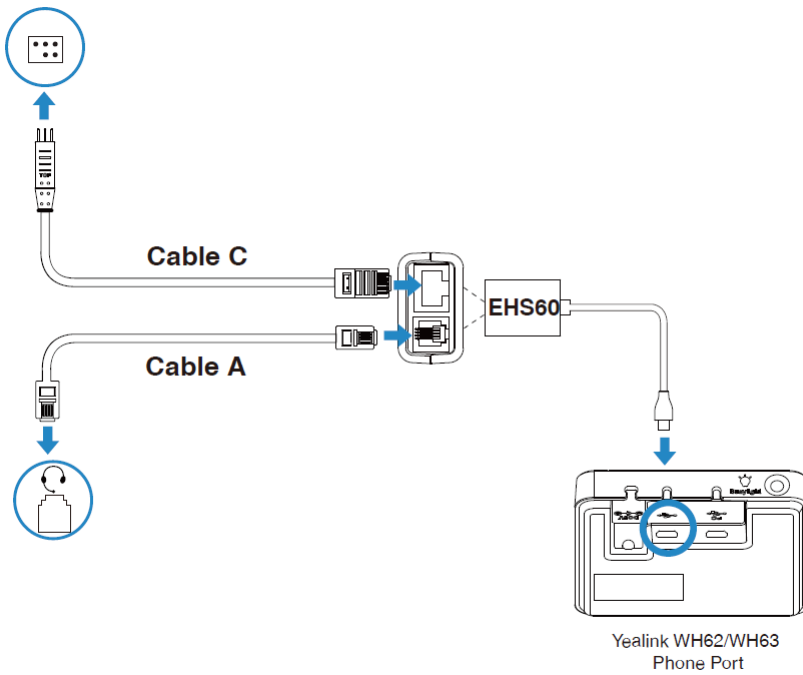

Update EHS60

Ensure the product label sticker on your WH62/WH63 base has **EHS60 Supported**. Then you can use the device to update EHS60.

Procedure

1. Update WH62/WH63 to a special version that includes EHS60 firmware via Yealink USB Connect. You can refer to [Update Firmware](#).

NOTE

Contact Yealink Support to obtain the special software upgrade package.

2. Connect EHS60 to the Phone port of the WH62/WH63 base. If the **Phone** button glows white, the connection is successful.
3. Connect the PC port of the WH62/WH63 base to a PC.

Results

EHS60 automatically triggers the update.


- During the upgrade, the **Phone** button on the WH62/WH63 base flashes white and green alternately.
- If the upgrade is successful, the **Phone** button on the WH62/WH63 base will glow green for 5 seconds and then off.
- If the upgrade fails, the **Phone** button on the WH62/WH63 base will flash white for 5 seconds and then off. Then you can reconnect, and it will upgrade again.

NOTE

1. Reject any call or answer operations during the upgrade.
2. You need to upgrade your WH6X to the original or the newest version via Yealink USB Connect after upgrading the EHS60.

EHS61

 Package Contents

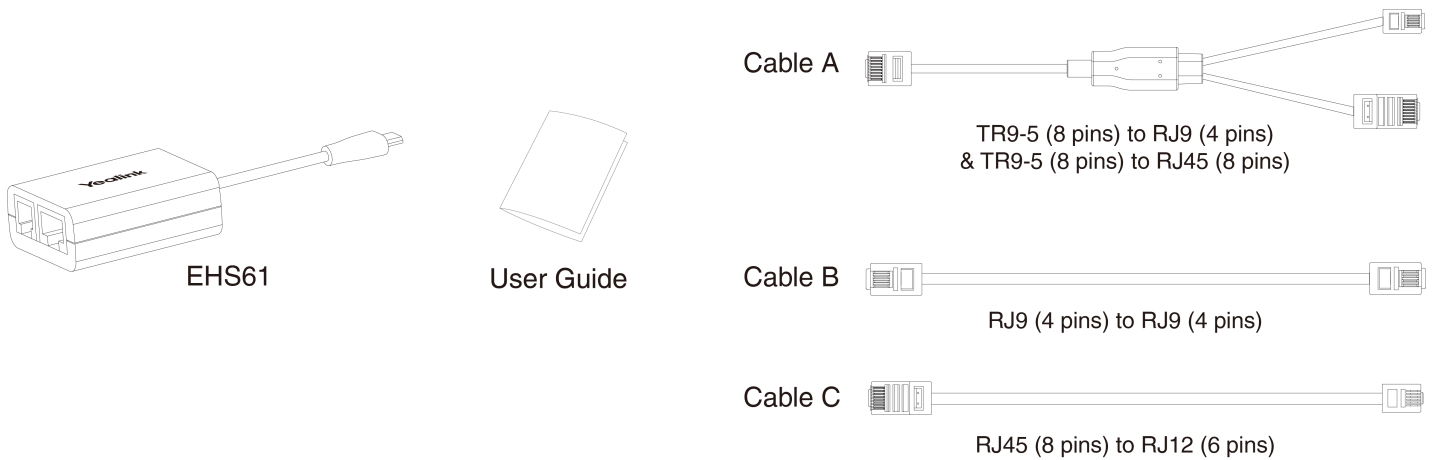

Connect the IP Phone and Headset

 
Connect the Mitel & Unify Phone

NOTE

For Mitel Phones, you need to go to the phone's setup menu to enable the EHS feature for the first time. Once the phone is configured, you can connect the EHS61 cord and headset.


1. In **Settings** interface, press **Audio > Audio Mode** to select **Headset** or **Speaker/Headset** or **Headset/Speaker**.
2. Return to **Settings** interface, press **Audio > Headset** to select **DHSG is ON**.

For Unify Phones, you can plug and play.

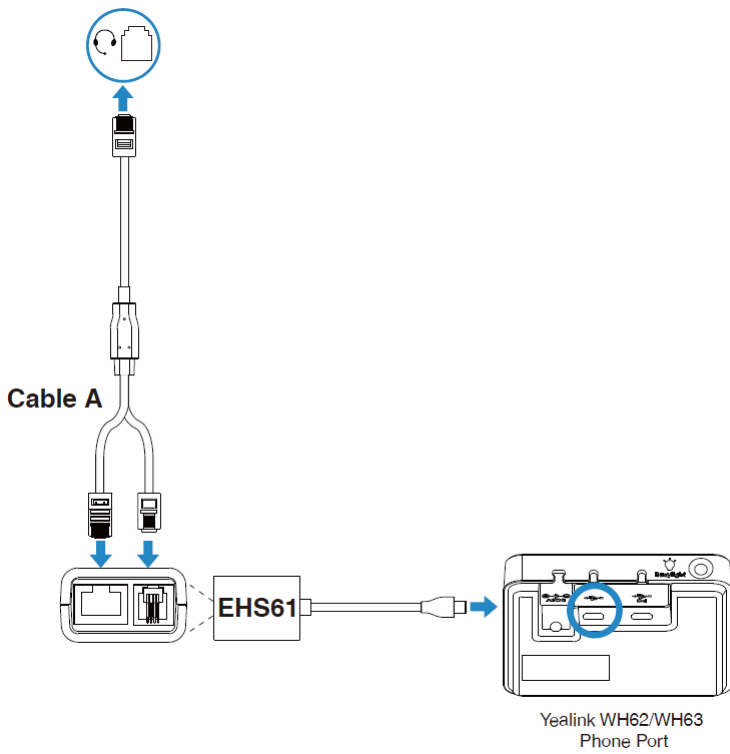

Connect the Yealink IP phone

 For Yealink Phones, you can plug and play.

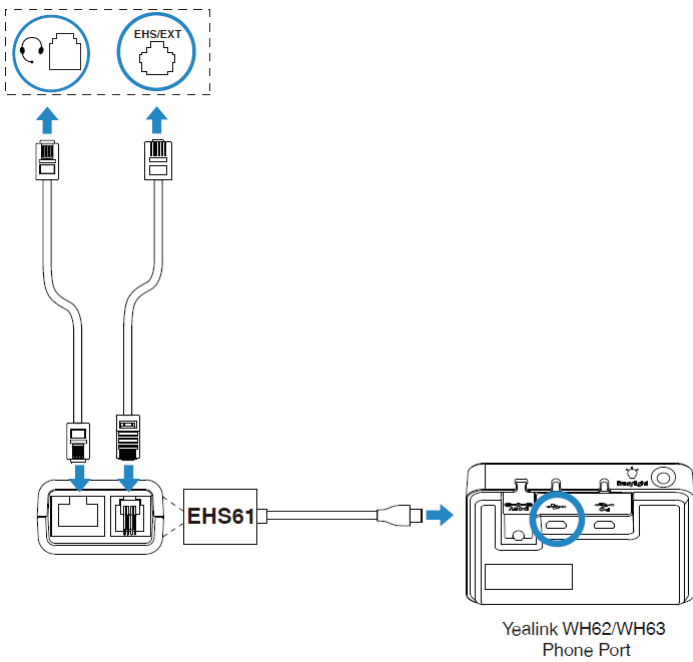

Update EHS61

Ensure the product label sticker on your WH62/WH63 base has **EHS61 Supported**. Then you can use the device to update EHS61.

Procedure

1. Update WH62/WH63 to a special version that includes EHS61 firmware via Yealink USB Connect. You can refer to [Update Firmware](#).

NOTE

Contact Yealink Support to obtain the special software upgrade package.

2. Connect EHS61 to the Phone port of the WH62/WH63 base. If the **Phone** button glows white, the connection is successful.

3. Connect the PC port of the WH62/WH63 base to a PC.

Results

EHS61 automatically triggers the update.

- During the upgrade, the **Phone** button on the WH62/WH63 base flashes white and green alternately.
- If the upgrade is successful, the **Phone** button on the WH62/WH63 base will glow green for 5 seconds and then off.
- If the upgrade fails, the **Phone** button on the WH62/WH63 base will flash white for 5 seconds and then off. Then you can reconnect, and it will upgrade again.

NOTE

1. Reject any call or answer operations during the upgrade.
2. You need to upgrade your WH6X to the original or the newest version via Yealink USB Connect after upgrading the EHS61.


FAQ

Are all “EHS60 supported” headsets also available with EHS61?

Wi-Fi USB Dongle

WF40

 Package Contents




Wi-Fi USB Dongle



User Guide

Assemble the Wi-Fi USB Dongle

 1. Insert the Wi-Fi USB Dongle into the USB port on the back of the phone.

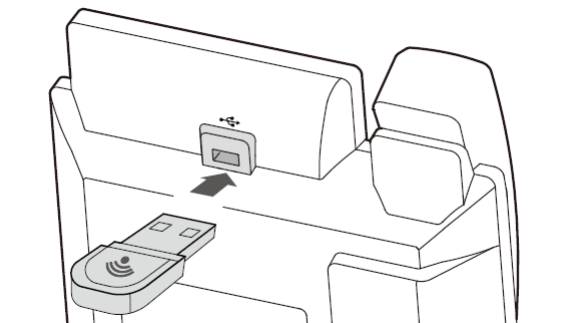

Connect the IP phone to an Available Wireless Network


To manually connect the IP phone to an available wireless network (take the SIP-T48G IP phone for example): After your phone is powered on and the system boots up, you can connect the IP phone to an available wireless network.

1. Insert the Wi-Fi USB Dongle WF40 into the USB port on the back of the phone when the phone is idle.
The touch screen prompts “Wi-Fi adapter has been added, scanning the available wireless network right now?”
2. Tap **OK** to activate Wi-Fi mode directly and scan Wi-Fi devices automatically.
3. (Optional.) To re-search the available network, tap the **Scan** soft key.
4. Tap the desired wireless network to connect to your IP phone. You can also tap after the desired wireless network, and then tap **Connect**.

5. If the network is secure, enter its password in the **Pin** field.

6. Tap **OK**.


Once the connection has completed successfully, the prompt “Connect Success.” appears at the end of the desired SSID.

You can also configure the Wi-Fi feature at the path:  > **Basic** > **Wi-Fi**.

NOTE
Contact your network administrator for the Wi-Fi password.

Disable Wi-Fi Feature on the IP Phone

To disable Wi-Fi feature, do one of the following (take the SIP-T48G IP phone for example):

- Tap  > **Basic** > **Wi-Fi**.
Mark the Off radio box in the Wi-Fi field.
- Unplug the Wi-Fi USB dongle from the IP phone.
The IP phone toggles the Wi-Fi to off.

Troubleshooting

Why can't the Wi-Fi feature be enabled?

- Ensure the Wi-Fi USB dongle is not broken.
- Ensure the Wi-Fi USB dongle is assembled and detected by the phone successfully.

Why can't the IP phone connect to the wireless network?

- If the network is secure, ensure the entered password is right.
- Ensure your gateway/router enables the wireless network feature.
- Reboot your gateway/router.
- Turn off the Wi-Fi feature on the IP phone and then turn it on again.

Why is the wireless signal strength low?


Ensure the IP phone and your gateway/router are within the working range and there is no obvious interference (walls, doors, etc) between them.

WF50

Package Contents



 Wi-Fi USB Dongle WF50

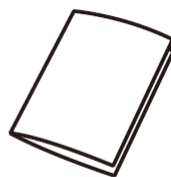

User Guide

Introduction

Wi-Fi USB Dongle is used in following scenarios:

- For IP phones: connect to the wireless network.
- For video conferencing systems: connect to the wireless network or provide wireless AP (Access Point) for other devices.

NOTE
Not all IP phones and video conferencing systems support Wi-Fi USB Dongle. For more information, contact your system administrator.

Assemble the Wi-Fi USB Dongle


To assemble the Wi-Fi USB Dongle:

1. Insert the Wi-Fi USB Dongle to the USB port on the IP phone or video conferencing system.


Connect to the Wireless Network

To connect to an available wireless network via the IP phone (take the SIP-T46S phone for an example):

1. Assemble the Wi-Fi USB Dongle.
The LCD screen prompts "Wi-Fi adapter has been added, scanning the available wireless network right now?"
2. Press the **OK** soft key.
3. Select **X available network(s)**.
4. Select the desired wireless network and then press the **Connect** soft key.
5. (Optional.) Enter its password in the **Password** field.
6. Press the **OK** soft key.

Once the connection completes successfully, the icon  appears after the SSID.


To connect to an available wireless network via the video conferencing system:

1. Assemble the Wi-Fi USB Dongle.
The monitor prompts "Wi-Fi adapter is connected" .
 2. On your remote control, navigate to **More > Setting > Advanced > Wi-Fi**.
 3. Select the **Wi-Fi** checkbox.
 4. If you already enabled wireless AP, press OK to disable it.
 5. Select the desired wireless network and then press OK.
 6. (Optional.) Enter its password in the **Password** field.
 7. Select **Join to Network**.
- Once the connection completes successfully, the icon  appears on your monitor.

Provide Wireless AP for Other Devices

To provide wireless AP via the video conferencing system:

1. Assemble the Wi-Fi USB Dongle.
The monitor prompts "Wi-Fi adapter is connected" .
2. On your remote control, navigate to **More > Setting > Advanced > Wireless AP**.
3. Select the **Wireless AP** checkbox.
4. If you already enabled Wi-Fi, press OK to disable it.

Other devices can connect to this wireless AP. Once the connection is successful, the number of connections appears beside the  icon.

Troubleshooting

Why can't the Wi-Fi feature be enabled?

- Ensure the Wi-Fi USB dongle is not broken.
- Ensure the Wi-Fi USB dongle is assembled and detected by the phone/video conferencing system successfully.

Why can't the phone/video conferencing system connect to the wireless network?

- If the network is secure, ensure the entered password is right.
- Ensure your gateway/router enables the wireless network feature.
- Reboot your gateway/router.
- Turn off the Wi-Fi feature and then turn it on again.

Why is the wireless signal strength low?

Ensure the phone/video conferencing system and your gateway/router are within the working range and there is no obvious interference (walls, doors, and so on) between them.

FAQ

[WF50 WiFi Adapter Issue](#)

Bluetooth USB Dongle

BT40

Dear Customers,

Yealink hereby informs you that the BT40 has been discontinued since May 31, 2019. After the date, new orders for the product would not be accepted.

After the End-of-Life date, Yealink will not pursue any new feature development on BT40, but we will follow the industry standard practices regarding software support of the discontinued (EOL) products. Consistent with such standards, Yealink will continue to offer support and after-sale service.

For more information about BT40 User Guide, please refer to: [BT40 Support](#).

FAQ



[BT Dongle Compatibility list](#)

[BT40 Can't Pair With Bluetooth Headset](#)

[BT40 Can't Be Recognized By Phone](#)

BT41

  
Package Contents

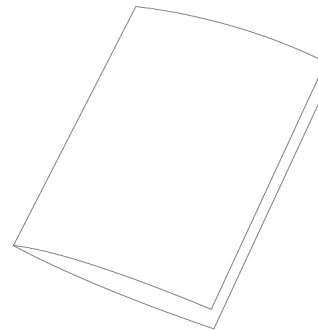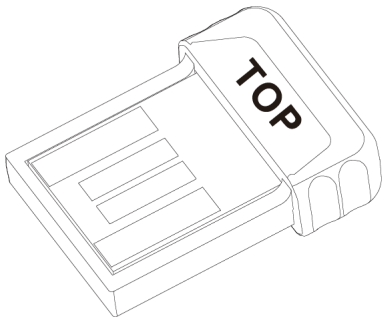

BT41

Quick Start Guide

 Assemble the USB Dongle

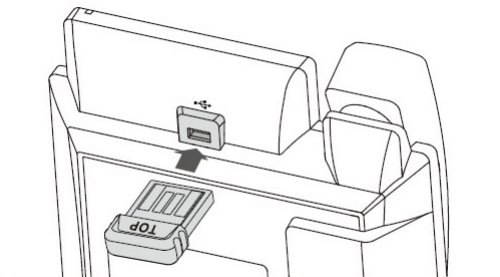

Pair & Connect Bluetooth Headset to the Phone

1. Turn on the Bluetooth headset.
2. Long press the multifunction key on the Bluetooth headset until the LED indicator alternately flashes red and blue.

The Bluetooth headset is in pairing mode.

3. Assemble the USB dongle.
4. Activate the Bluetooth feature on the phone.
Refer to corresponding user guide of the phone to activate the Bluetooth feature.

5. Select **Scan** on the phone.

The phone starts searching for Bluetooth headsets within the working range of 10 meters (32 feet) and displays all detected Bluetooth headsets.

NOTE

The USB dongle provided by Yealink supports hot plug. You can plug and unplug the USB dongle without rebooting the phone.

Answer Calls

1. With the Bluetooth headset paired and connected, press the multifunction key on the Bluetooth headset to answer an incoming call. If there is already an active call on the phone, the original call is placed on hold after answering the new incoming call.

Adjust the Earphone Volume

With the Bluetooth headset paired and connected, you can do the following:

- Press the Volume key (+) on the Bluetooth headset to increase the volume.
- Press the Volume key (-) on the Bluetooth headset to decrease the volume.

End Calls

With the Bluetooth headset paired and connected, press the multifunction key on the Bluetooth headset to end a call.

Troubleshooting

Why can't the phone detect the Bluetooth headset?

- Ensure the Bluetooth headset is turned on.
- Ensure the Bluetooth headset is in pairing mode when the phone is searching for Bluetooth headsets.

Why there is a noise?

- Check the battery level. If the battery level is low, charge the Bluetooth headset.
- Ensure the Bluetooth headset and the phone are within the working range of 10 meters (32 feet) and there is no obvious interference (walls, doors, etc.) between them.

FAQ

[BT Dongle Compatibility list](#)

[BT40 Can't Pair With Bluetooth Headset](#)

[BT40 Can't Be Recognized By Phone](#)


[How to Pairing and Connecting the Bluetooth Headset\(AirPods\) to a Phone?](#)

BT42

Package Contents




 USB Dongle

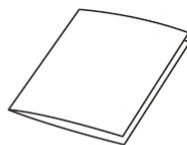

User Guide

 Assemble the USB Dongle

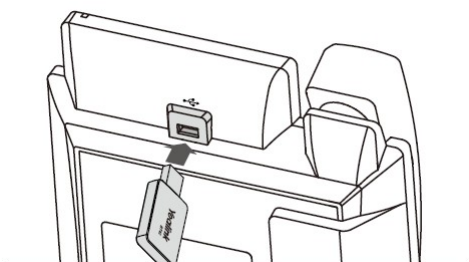

Pair & Connect Bluetooth Headset to the Phone

1. Turn on the Bluetooth headset.
2. Long press the multifunction key on the Bluetooth headset until the LED indicator alternately flashes red and blue.

The Bluetooth headset is in pairing mode.

3. Assemble the USB dongle.
4. Activate the Bluetooth feature on the phone.
Refer to corresponding user guide of the phone to activate the Bluetooth feature.

5. Select **Scan** on the phone.
The phone starts searching for Bluetooth headsets within the working range of 10 meters (32 feet) and displays all detected Bluetooth headsets.

NOTE

The USB dongle provided by Yealink supports hot plug. You can plug and unplug the USB dongle without rebooting the phone.

Answer Calls

1. With the Bluetooth headset paired and connected, press the multifunction key on the Bluetooth headset to answer an incoming call.
If there is already an active call on the phone, the original call is placed on hold after answering the new incoming call.

Adjust the Earphone Volume

With the Bluetooth headset paired and connected, you can do the following:

- Press the Volume key (+) on the Bluetooth headset to increase the volume.
- Press the Volume key (-) on the Bluetooth headset to decrease the volume.

End Calls

With the Bluetooth headset paired and connected, press the multifunction key on the Bluetooth headset to end a call.

Troubleshooting

Why can't the phone detect the Bluetooth headset?

- Ensure the Bluetooth headset is turned on.
- Ensure the Bluetooth headset is in pairing mode when the phone is searching for Bluetooth headsets.

Why there is a noise?

- Check the battery level. If the battery level is low, charge the Bluetooth headset.
- Ensure the Bluetooth headset and the phone are within the working range of 10 meters (32 feet) and there is no obvious interference (walls, doors, etc.) between them.

FAQ

[BT Dongle Compatibility list](#)

BT51

Package Contents



BT51-A



BT51-C

 
 


Quick Start Guide

Pair with PC/Deskphone


1. Turn on the Bluetooth headset.

For BH72/76:

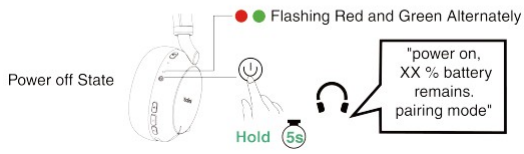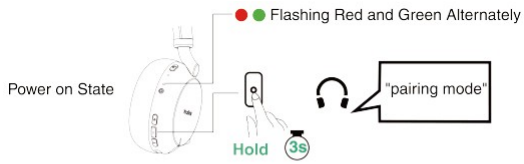


For BH71:

 Slide and hold the switch for 3 seconds to enter Bluetooth pairing mode.

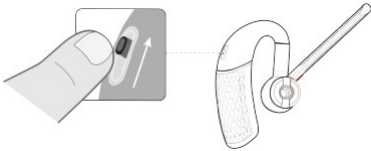

 
2. Connect the BT51-A/BT51-C to the USB port on your PC or deskphone.

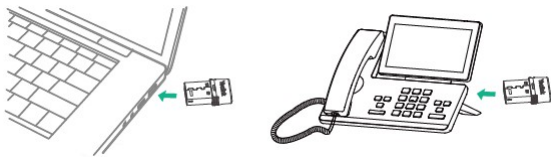

IP Phone Camera

CAM50

 Package Contents



CAM50



 
Quick Start Guide

How to Use CAM50


1. Insert CAM50 to the phone.

TIP

CAM50 is applicable to SIP-T58W Series/MP58 IP phones.

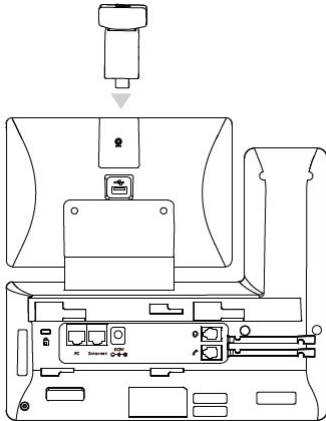

 2. Adjust the shutter switch.

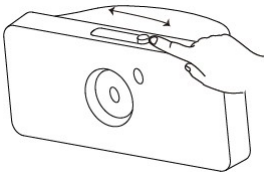

3. Adjust the camera angle.




Wireless Expansion Microphone


CPW65

Package Contents

 
The following items are included in your package. If you find anything missing, contact your system administrator.

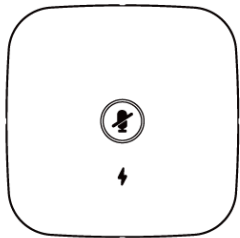


DECT Microphonex2

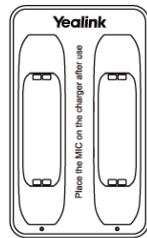 

Charger Cradle


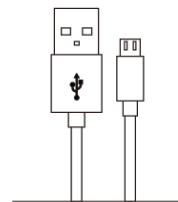 


Micro USB Cable

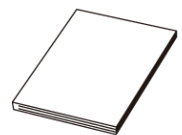 

Quick Start Guide

  Hardware Overview

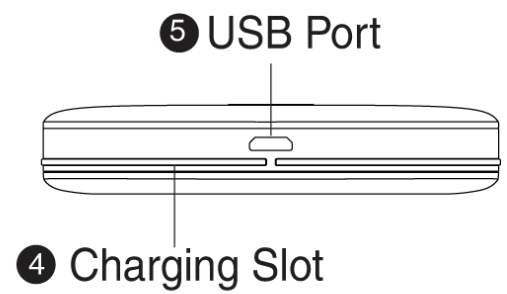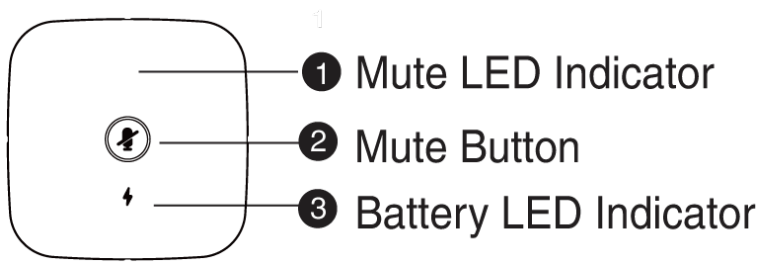

LED Instruction

LED indicator on the Charger Cradle:

LED Status	Description
Solid white	The CPW65 is being charged.
Off	The CPW65 is not being charged.

Mute LED indicator on the CPW65:

LED Status	Description
Solid green	The phone enters the pre-dialing screen. The phone is in a call and unmuted.
Fast flashing red	The phone is receiving an incoming call.
Solid red	The phone is muted.
Fast flashing yellow	The CPW65 is in the registration mode.
Slowly flashing yellow	The CPW65 has registered with the phone, but the CPW65 is out of range. The CPW65 has registered with the phone, but the CP965 is turned off.
Flashing red and green alternately	The phone is searching for the CPW65 which has registered with it.
Off	The CPW65 is idle.

Battery LED indicator on the CPW65:

LED Status	Description
Solid green for one second and then off	The CPW65 is turned on.
Solid green for 3 seconds and then off	The CPW65 is idle.
Solid green	The CPW65 is fully charged.
Solid red	The CPW65 is being charged.
Fast flashing red 3 times and then off	The battery capacity is too low to turn on the CPW65.
Slowly flashing red	The battery capacity is less than 10%.
Off	If you tap the mute button and the battery LED indicator on the CPW65 is still off, it means the CPW65 is turned off.

Charge CPW65

Method 1	Method 2
<ol style="list-style-type: none"> Put the CPW65 on the charger cradle. Plug the provided micro USB cable into the micro USB port on the charger cradle, and into the USB port on the CP965. 	<ol style="list-style-type: none"> Plug the provided micro USB cable into the micro USB port on the CPW65, and into the USB port on the CP965.

When charging, the battery LED indicator on the CPW65 glows red. When it is fully charged, the battery LED indicator on the CPW65 will glow green.

The CPW65 starts up automatically when charging. Or you can long tap the Mute button on the CPW65 for 3 seconds to turn it on.

TIP

- If it is the first time you use the CPW65, you need to fully charge it for normal use.
- If the CPW65 is not in use, we still recommend charging it even when the battery is full.

Register CPW65 to CP965 Conference Phone

You can skip this chapter if the CPW65 has registered with the CP965 conference phone.

Otherwise, follow the steps below to register the CPW65 to the CP965 conference phone. The CPW65 works as the audio input device of the CP965 conference phone.

To register the CPW65 to the CP965 conference phone:

- On the CP965, tap **More > Mic >**

2. Turn on the CPW65.

The CPW65 enters the registration mode automatically. And the mute LED indicator on the CPW65 fast flashes yellow.

The CPW65 registers with the CP965 conference phone automatically. If the registration is successful, the mute LED indicator on the CPW65 goes out and the touch screen of CP965 conference phone prompts the CPW65 information: battery, work time and standby time.

TIP

You can connect up to two CPW65 to a CP965 conference phone.

Mute & Unmute CPW65

 
When the CPW65 works as an audio input device for the CP965 conference phone and the CP965 conference phone is in a call, you can tap the Mute button on the CPW65 to mute or unmute the CPW65.

Place CPW65 in a Conference Room

The CPW65 is a wireless expansion mic that can work as the audio input device of the CP965 conference phone. It supports 360-degree audio pickup at a radius of up to 3 meters. You can place the CPW65 on a conference table.

Do the following to ensure optimal voice quality:

- The CPW65 should be less than 20 meters from the CP965 conference phone, and there are no obstacles between them.
- Place the CPW65 on a stable surface and keep it away from obstacles, so that they can achieve the best performance.

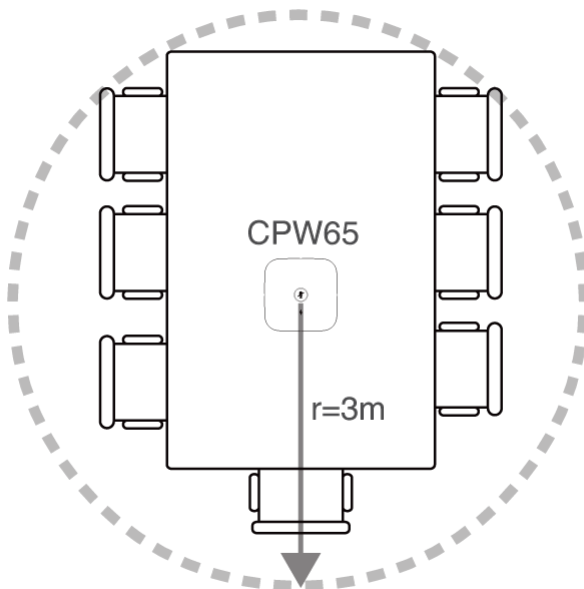

FAQ

1. How to turn off the CPW65?

Long tap the Mute button on the CPW65 until the battery LED indicator the CPW65 glows red for 3 seconds and then goes out.


2. How to find the CPW65 which has registered with the CP965 conference phone?

1. On the CP965, tap **More > Mic**.
2. Select the desired microphone, and then tap **Find**.

The mute LED indicator on the CPW65 flashes red and green alternately.

3. How to register the CPW65 to another CP965 conference phone?

The CPW65 can only be registered to one CP965 conference phone. If you register the CPW65 to another CP965 conference phone, the CPW65 will deregister from the previous CP965 conference phone automatically. To register the CPW65 to another CP965 conference phone:

1. On the CP965, tap **More > Mic** > 
2. Charge the CPW65.
3. Long tap the Mute button on the CPW65 for 5 seconds.

The CPW65 enters the registration mode. And the mute LED indicator on the CPW65 fast flashes yellow.



The CPW65 registers with the new CP965 conference phone automatically.

4. How to deregister the CPW65?

1. On the CP965, tap **More > Mic**.
2. Select the desired mic, and then tap **Detail**.
3. Tap **Unbind** to deregister the CPW65.

CPW90

  Package Contents

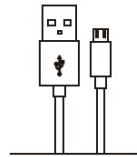
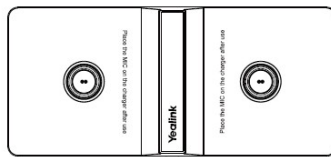


Wireless Expansion Mic×2 Charging Cradle


0.3m Micro USB Cable

Quick Start Guide

  CPW90 Component Instruction

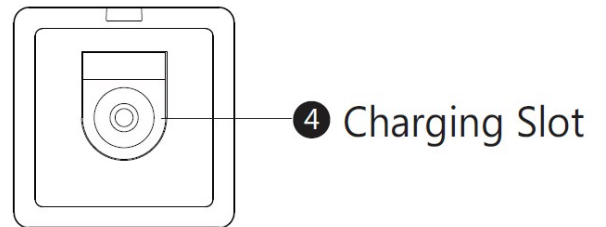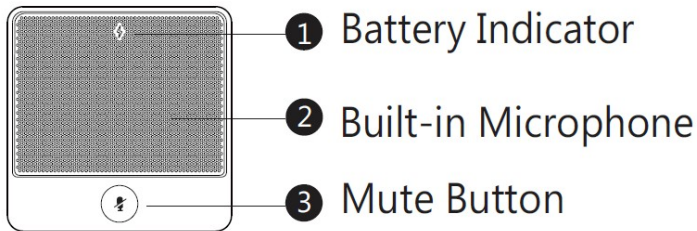

Charge the CPW90

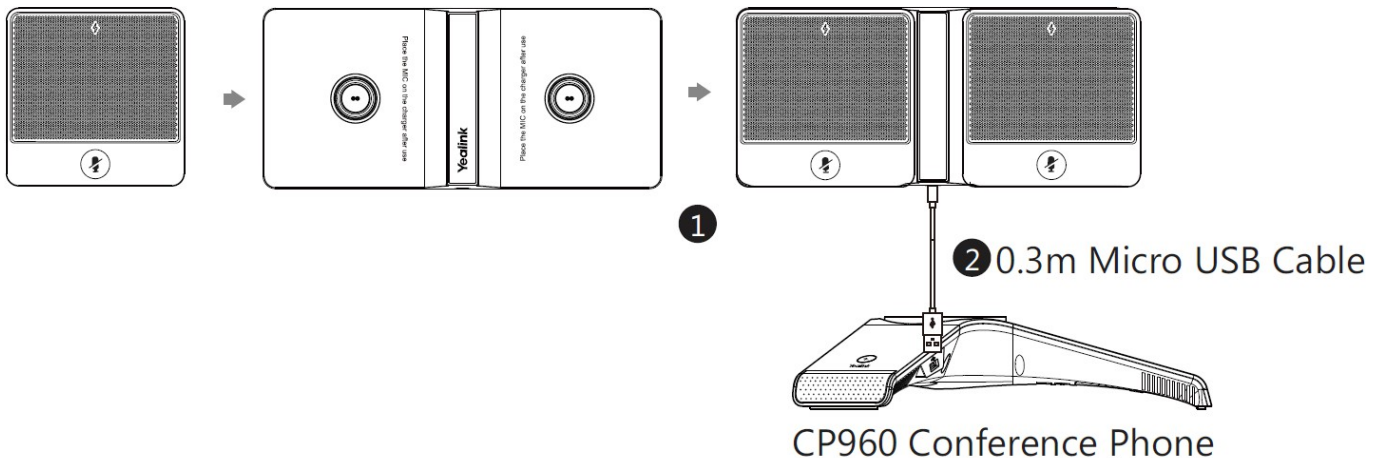 

1. Put the CPW90 on the charging cradle.
2. Connect the micro USB port on the charging cradle to the USB port on the CP960 using a 0.3m micro USB cable.

NOTE



- If it is the first time you use the CPW90, you need to fully charge the CPW90 for normal use.
- If the CPW90 is not in use, we recommend you to charge the CPW90 even when the battery is full.

Register the CPW90 with the CP960 Conference Phone

If you buy CP960-WirelessMic, the CPW90 is registered with the CP960 conference phone by default. In this situation, you can skip this chapter.

If the CPW90 is not registered with the CP960 conference phone, you should register the CPW90 with the CP960 conference phone manually. So that the CPW90 can work as expansion microphone of the CP960 conference phone.

1. Do the following on the CP960 conference phone:

Tap  > **Wireless Microphone**.
Tap  to search for a CPW90.

2. Turn on the CPW90.

The CPW90 enters the registration mode automatically. And the mute indicator LED on the CPW90 fast flashes yellow.

The CPW90 registers with the CP960 conference phone automatically. If the registration is successful, the mute indicator LED on the CPW90 goes out and the touch screen of CP960 conference phone prompts the CPW90 information: battery, work time and standby time.

TIP

You can connect up to two wireless expansion microphones to a CP960 conference phone.

LED Instruction

There are two indicators on the CPW90. The indicators display the CPW90 work status.

Mute indicator LED on the CPW90

LED Status	Description
Solid green	<ul style="list-style-type: none"> · The phone enters the pre-dialing screen. · Call mute mode is deactivated.
Slowly flashing red	The phone is receiving an incoming call.
Solid red	Call mute mode is activated.
Fast flashing yellow	The CPW90 is in the registration mode.
Slowly flashing yellow	<ul style="list-style-type: none"> · The CPW90 has registered with the phone, but the CPW90 is out of range. · The CPW90 has registered with the phone, but the CP960 is turned off.
Flashing red and green alternately	The phone is searching for the CPW90 which has registered with it.
Off	The CPW90 is in the idle mode.

Battery indicator LED on the CPW90


LED Status	Description
Solid green for one second and then off	The CPW90 is turned on.
Solid green for 3 seconds and then off	The CPW90 is in the idle mode.
Solid green	The CPW90 is fully charged.
Solid red	The CPW90 is being charged.
Fast flashing red 3 times and then off	The battery capacity is too low to turn on the CPW90.
Slowly flashing red	The battery capacity is less than 10%.
Off	If you tap the mute button, the battery indicator LED on the CPW90 is still off, it means the CPW90 is turned off.

Place the CPW90

The CPW90 is a wireless expansion mic which can work as expansion microphone of the CP960 conference phone. It supports 360-degree audio pickup at a radius of up to 3 meters. The CPW90 has a rubber pad on its base to prevent it from sliding. You can place the CPW90 on a conference table.

Do the following to ensure optimal voice quality:

 - The CPW90 should be less than 20 meters distant from the CP960 conference phone, and is not disturbed by obstacles.
- Place the CPW90 on a stable surface and keep it away from obstacles so that it can effectively pick up sounds.

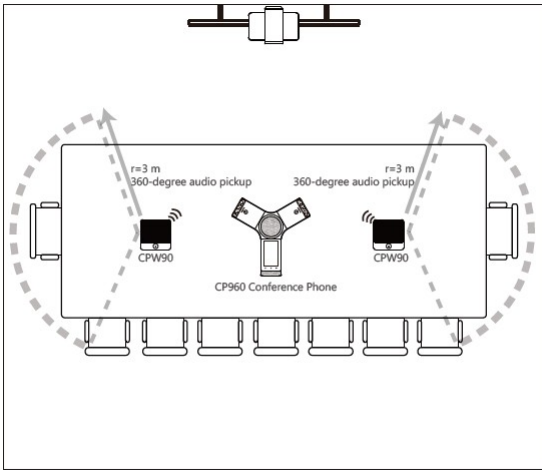

Mute/Unmute the CPW90


When the CPW90 works as an expansion microphone of the CP960 conference phone of the CP960 conference phone and the CP960 conference phone is in a call, you can tap the mute button on the CPW90 to mute or unmute the CPW90.

FAQ

How to turn off the CPW90?



Long tap the mute button on the CPW90, until the battery indicator LED on the CPW90 illuminates solid red for 3 seconds and then goes out.

How to find the CPW90 which has registered with the CP960 conference phone?

1. Tap  > **Wireless Microphone**.
2. Select the desired mic, and then tap **Find**.
The mute indicator LED on the CPW90 flashes red and green alternately.

How to register the CPW90 with another CP960 conference phone?


The CPW90 can only be registered with one CP960 conference phone. If you want to register the CPW90 to another CP960 conference phone, the CPW90 will be deregistered from the previous CP960 conference phone automatically.

1. Do the following on another CP960 conference phone:
 - o Tap  > **Wireless Microphone**.
 - o Tap  to search for a CPW90.
2. Put the CPW90 on the charging cradle and make sure it is charging.
3. Long tap the mute button on the CPW90 for 5 seconds.
The CPW90 enters the registration mode. And the mute indicator LED on the CPW90 fast flashes yellow.
The CPW90 registers with another CP960 conference phone automatically, and is deregistered from the previous CP960 conference phone.

What is the idle mode?

When the CPW90 registers with the CP960 conference phone successfully, the CPW90 enters the idle mode. In idle mode, if you tap the mute button on the CPW90, the battery indicator LED on the CPW90 will illuminate solid green for 3 seconds and then go out.

How to deregister the CPW90 from the CP960 conference phone?

1. Tap  > **Wireless Microphone**.
2. Select the desired mic, and then tap **Detail**.
3. Tap Unbind to deregister the CPW90.

CPW90-BT

Package Contents



Charging Cradle



Bluetooth Wireless Microphone x2



1.8m Micro USB Cable



Power Adapter




BT42
Bluetooth USB Dongle
Optional




Quick Start Guide

 CPW90-BT Component Instruction



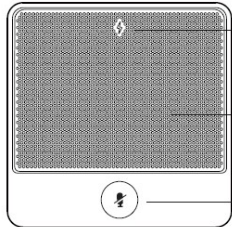


 - ① Battery Indicator
- ② Built-in Microphone
- ③ Mute Button

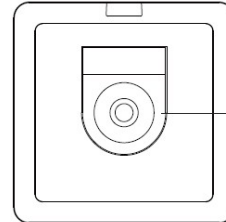


- ④ Charging Slot

   Charge the CPW90-BT

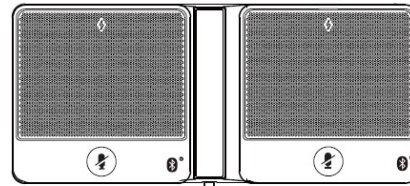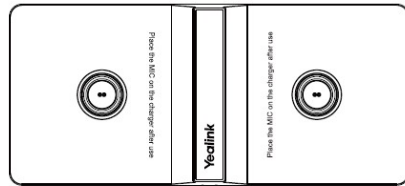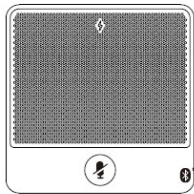

- ② 1.8m Micro USB Cable

 

1. Put the CPW90-BT on the charging cradle.
2. Connect to the power source.

During charging, the battery indicator illuminates solid red. When the battery capacity reaches 100%, the battery indicator illuminates solid green. When you charge the bluetooth wireless microphones, the bluetooth wireless microphones will start automatically. You can also long tap the mute button on the bluetooth wireless microphone for 3 seconds to turn it on.

NOTE

- If it is the first time you use the CPW90-BT, you need to fully charge the CPW90-BT for normal use.
- If the CPW90-BT is not in use, we recommend you to charge the CPW90-BT even when the battery is full.

Find the Paired Bluetooth Wireless Microphones

1. On your remote control, navigate to **More > Setting > Video & Audio > Wireless Micphone**.
2. Select the desired bluetooth wireless microphone and press the **OK** key.
3. Select **Find**.
The mute LED indicator flashes red and green alternately.
4. Select **Cancel**.

Mute/Unmute the CPW90

1. Tap the mute button to mute it.
The mute LED indicator illuminates solid red.
2. Tap the mute button again to unmute it.

DECT USB Dongle

DD10K

Introduction

DECT USB dongle DD10K allows you to turn the SIP-T41S/T42S/T54W IP phone to the DECT desk phone (hereinafter referred to as DD phone). After that, you can use the IP phone as a handset with a base station.

DECT USB dongle DD10K also allows you to turn the SIPT58V/T58A/T58W/T56A/T53/T53W/T54W/T57W/VP59 IP phone to the corded-cordless phone.

After that, you can use the IP phone as a base station and its handset 1.

 
The features introduced in this guide apply to the following Yealink IP phones:

- SIP-T41S/T42S IP phones running firmware V82 or later.
- SIP-T58V/T58A/T58W/T56A IP phones running firmware V83 or later.
- SIP-T53/T53W/T54W/T57W/VP59 IP phones running firmware V85 or later.

NOTE

EOL Products: T41S/T42S/T58V/T58A/T56A

Package Contents

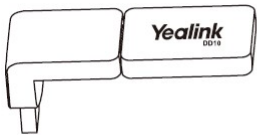

DD10K

 


Quick Start Guide

Assemble the DD10K

1. Insert the DD10K into the USB port on the back of the phone.

If the firmware versions of the DD10K and IP phone do not match, the IP phone will upgrade/downgrade the DD10K.

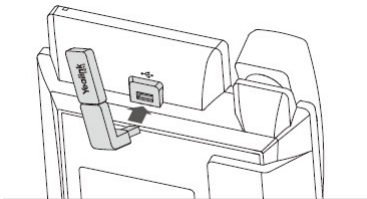

Get Started (for T58V/T58A/T58W/T56A/T53/T53W/T54W/T57W/VP59)

Handset Registration Mode

Before registering the handset, make sure the IP phone is in the registration mode.

To set the IP phone to the handset registration mode:

1. Insert the DD10K.
2. Swipe left or right to go to the second idle screen.
3. Navigate to **DECT Settings > Handsets**.
4. Tap **Register** (press **Start Reg** for T53/T53W/T54W).

Handset Registration

You can register up to other four handsets to one phone.

The supported handsets include W52H, W53H, W56H, W59R, W73H, and DD phone.

To register the handset when the phone prompts "Unregistered!", do one of the following:

Way 1: Press the **Reg** soft key to register quickly.

Way 2:

1. Do one of the following:
 - Press the OK soft key, and then select **Register Handset**.
 - Press **☰**, and then select **Settings > Registration > Register Handset**.

The handset begins searching for the phone.

2. Press the **OK** soft key after a phone is found.
3. Enter the base station PIN (default: 0000), and then press the **OK** soft key to complete the registration.

NOTE

- If the handset is registered to the phone successfully, the phone prompts “Subscribed Succeed” .
- If the handset prompts “Searching for Base” , check whether your phone is in the handset registration mode or not.

Switch Modes between DD Phone and CC Phone (for T54W)

1. Assemble the DD10K.
2. Press the **Menu** soft key when the phone is idle, and then select **Status > Phone Mode**.
3. Select the desired mode and click **OK**.

The phone will reboot to make the change take effect.

Check the Dongle Status (for T58V/T58A/T58W/T56A/T53/T53W/T54W/T57W/VP59)

To check the dongle status for T58V/T58A/T58W/T57W/T56A/VP59:

1. Insert the DD10K.
2. Swipe left or right to go to the second idle screen.
3. Navigate to **Settings > Status > Dongle**.

To check the dongle status for T53/T53W/T54W:

1. Insert the DD10K.
2. Press the **Menu** soft key when the phone is idle, and then select **Status > Dongle Status**.

Get Started (for T41S/T42S/T54W)

DD Phone Mode

Before using a IP phone as a DECT desk phone, you should enable the DD phone mode first.

To enable the DD phone mode when the IP phone is powered on (only for firmware version 84 or later):

1. Insert the DD10K.
The phone screen prompts you whether to switch to the DD phone mode.
2. Press the **OK** soft key to continue, and the phone switches to the DD phone mode after rebooting.


To enable the DD phone mode when the IP phone is powered off:

1. Insert the DD10K.
2. Power on the IP phone.
The IP phone switches to the DD phone mode automatically after startup.

If you purchase the DD10K package, you should manually register the DD phone to one Base station.

Registration


You can register the DD phones to W70B/W80 Multi-Cell System/W90 Multi-Cell System. Each DD phone can be registered to only one base station.

Before registering the DD phone, make sure the base station is in registration mode (long press  on the base station till the registration LED flashes).

To register the DD phone when the phone prompts “Unregistered!” , do one of the following:

Way 1: Press the **Reg** soft key to register quickly.

Way 2:

1. Do one of the following:
 - Press the **OK** soft key, and then select **Register Handset**.
 - Press , and then select **Settings > Registration > Register Handset**.

The handset begins searching for the phone.

2. Press the **OK** soft key after a phone is found.
3. Enter the base station PIN (default: 0000), and then press the **OK** soft key to complete the registration.






NOTE

- If the DD phone is registered to the base station successfully, the phone prompts “Subscribed Succeed” .
- If the DD phone prompts “Searching for Base” , check whether your base station is powered on or not.

Accessories Compatibility

Expansion Module






Expansion Module

	EXP20	EXP38	EXP39	EXP40	EXP43	EXP50
						
T3 Series IP Phones						
T30	☒	☒	☒	☒	☒	☒
T30P	☒	☒	☒	☒	☒	☒
T31	☒	☒	☒	☒	☒	☒
T31P	☒	☒	☒	☒	☒	☒
T31G	☒	☒	☒	☒	☒	☒
T33P	☒	☒	☒	☒	☒	☒
T33G	☒	☒	☒	☒	☒	☒
T4 Series IP Phones						
T42U	☒	☒	☒	☒	✓	☒
T43U	☒	☒	☒	☒	✓	☒
T46U	☒	☒	☒	☒	✓	☒
T48U	☒	☒	☒	☒	✓	☒
T5 Series IP Phones						
T53	☒	☒	☒	☒	☒	✓ (Up to 3)
T53W	☒	☒	☒	☒	☒	✓ (Up to 3)
T54W	☒	☒	☒	☒	☒	✓ (Up to 3)
T57W	☒	☒	☒	☒	☒	✓ (Up to 3)
T58W	☒	☒	☒	☒	☒	✓ (Up to 3)
T58W with Camera	☒	☒	☒	☒	☒	✓ (Up to 3)
T58W Pro	☒	☒	☒	☒	☒	✓ (Up to 3)
T58W Pro with Camera	☒	☒	☒	☒	☒	✓ (Up to 3)
VP59	☒	☒	☒	☒	☒	☒
EOL IP Phones						
T19P	☒	☒	☒	☒	☒	☒
T19P E2	☒	☒	☒	☒	☒	☒
T20P	☒	☒	☒	☒	☒	☒
T21P	☒	☒	☒	☒	☒	☒
T21P E2	☒	☒	☒	☒	☒	☒
T22P	☒	☒	☒	☒	☒	☒
T23P	☒	☒	☒	☒	☒	☒
T26P	☒	✓	✓	☒	☒	☒

T27P	✓	☒	✓	☒	☒	☒
T27G	✓	☒	☒	☒	☒	☒
T28P	☒	✓	✓	☒	☒	☒
T29G	✓	☒	✓	☒	☒	☒
T32G	☒	☒	☒	☒	☒	☒
T38G	☒	☒	☒	☒	☒	☒
T40G	☒	☒	☒	☒	☒	☒
T40P	☒	☒	☒	☒	☒	☒
T41P	☒	☒	☒	☒	☒	☒
T42G	☒	☒	☒	☒	☒	☒
T46G	☒	☒	☒	✓ (Up to 6)	☒	☒
T48G	☒	☒	☒	✓ (Up to 6)	☒	☒
T49G	☒	☒	☒	☒	☒	☒
T41S	☒	☒	☒	☒	☒	☒
T42S	☒	☒	☒	☒	☒	☒
T46S	☒	☒	☒	✓ (Up to 6)	☒	☒
T48S	☒	☒	☒	✓ (Up to 6)	☒	☒
T52S	☒	☒	☒	☒	☒	☒
T54S	☒	☒	☒	☒	☒	☒
T56A	☒	☒	☒	☒	☒	☒
T58A	☒	☒	☒	☒	☒	✓ (Up to 3)
T58V	☒	☒	☒	☒	☒	☒
T58A with Camera	☒	☒	☒	☒	☒	☒
Conference Phone						
CP960	☒	☒	☒	☒	☒	☒
CP925	☒	☒	☒	☒	☒	☒
CP965	☒	☒	☒	☒	☒	☒
CP935W	☒	☒	☒	☒	☒	☒
CP935W-Base	☒	☒	☒	☒	☒	☒

Wireless Headset Adapter

Wireless Headset Adapter




	EHS35	EHS36	EHS40	EHS60	EHS61
					
T3 Series IP Phones					
T30	✓	☒	☒	☒	☒
T30P	✓	☒	☒	☒	☒
T31	✓	☒	☒	☒	☒

T31P	✓	☒	☒	☒	☒
T31G	✓	☒	☒	☒	☒
T33P	✓	☒	☒	☒	☒
T33G	✓	☒	☒	☒	☒
T4 Series IP Phones					
T42U	✓	☒	✓ V85 or later	☒	☒
T43U	✓	☒	✓ V85 or later	☒	☒
T46U	✓	☒	✓ V85 or later	☒	☒
T48U	✓	☒	✓ V85 or later	☒	☒
T5 Series IP Phones					
T53	✓	☒	✓ V85 or later	☒	☒
T53W	✓	☒	✓ V85 or later	☒	☒
T54W	✓	☒	✓ V85 or later	☒	☒
T57W	✓	☒	✓ V85 or later	☒	
T58W	✓	☒	✓ V85 or later	☒	☒
T58W with Camera	☒	☒	✓ V85 or later	☒	☒
T58W Pro	☒	☒	✓ V85 or later	☒	☒
T58W Pro with Camera	☒	☒	✓ V85 or later	☒	☒
VP59	☒	☒	✓ V85 or later	☒	☒
EOL IP Phones					
T19P	☒	☒	☒	☒	☒
T19P E2	☒	☒	☒	☒	☒
T20P	☒	☒	☒	☒	☒
T21P	☒	☒	☒	☒	☒
T21P E2	☒	☒	☒	☒	☒
T22P	☒	☒	☒	☒	☒
T23P	☒	☒	☒	☒	☒
T26P	☒	☒	☒	☒	☒
T27P	☒	✓	☒	☒	☒
T27G	☒	✓	☒	☒	✓
T28P	☒	☒	☒	☒	☒
T29G	☒	✓	☒	☒	✓
T32G	☒	☒	☒	☒	☒
T38G	☒	☒	☒	☒	☒
T40G	☒	✓	☒	☒	✓
T40P	☒	✓	☒	☒	✓
T41P	☒	✓	☒	☒	✓
T42G	☒	✓	☒	☒	✓
T46G	☒	✓	☒	☒	✓
T48G	☒	✓	☒	☒	✓
T49G	☒	☒	☒	☒	✓
T41S	☒	✓	✓ V85 or later	☒	☒
T42S	☒	✓	✓ V85 or later	☒	☒
T46S	☒	✓	✓ V85 or later	☒	☒
T48S	☒	✓	✓ V85 or later	☒	☒
T52S	☒	☒	☒	☒	☒
T54S	☒	☒	☒	☒	☒

T56A	☒	☒	✓ V85 or later	☒	☒
T58A	☒	☒	✓ V85 or later	☒	☒
T58V	☒	☒	☒	☒	☒
T58A with Camera	☒	☒	☒	☒	☒
Conference Phone					
CP960	☒	☒	☒	☒	☒
CP925	☒	☒	☒	☒	☒
CP965	☒	☒	☒	☒	☒
CP935W	☒	☒	☒	☒	☒
CP935W-Base	☒	☒	☒	☒	☒

Wi-Fi USB Dongle

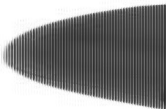Wi-Fi USB Dongle


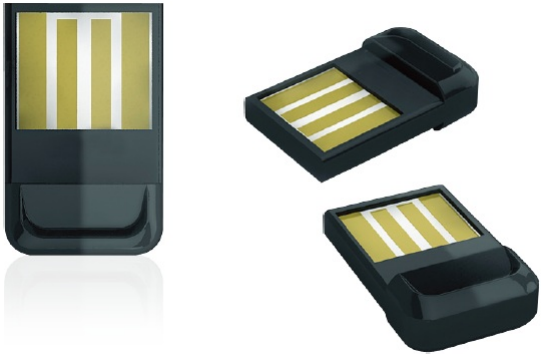
	WF40	WF50	WF50 (V1)
			
T3 Series IP Phones			
T30	☒	☒	☒
T30P	☒	☒	☒
T31	☒	☒	☒
T31P	☒	☒	☒
T31G	☒	☒	☒
T33P	☒	☒	☒
T33G	☒	☒	☒
T4 Series IP Phones			
T42U	✓	✓ (V84 or later)	✓ (106.86.0.70 or later)
T43U	✓	✓ (V84 or later)	✓ (106.86.0.70 or later)
T46U	✓	✓ (V84 or later)	✓ (106.86.0.70 or later)
T48U	✓	✓ (V84 or later)	✓ (106.86.0.70 or later)
T5 Series IP Phones			
T53	✓	✓ (V84 or later)	✓ (96.86.0.70 or later)
T53W	☒	☒	☒
T54W	☒	☒	☒

T57W	☒	☒	☒
T58W	☒	☒	☒
T58W with Camera	☒	☒	☒
T58W Pro	☒	☒	☒
T58W Pro with Camera	☒	☒	☒
VP59	✓	✓	✓
EOL IP Phones			
T19P	☒	☒	☒
T19P E2	☒	☒	☒
T20P	☒	☒	☒
T21P	☒	☒	☒
T21P E2	☒	☒	☒
T22P	☒	☒	☒
T23P	☒	☒	☒
T26P	☒	☒	☒
T27P	☒	☒	☒
T27G	✓ (X.81.0.110 or later)	✓ (V84 or later)	☒
T28P	☒	☒	☒
T29G	✓ (V81 or later)		
T32G	☒	☒	☒
T38G	☒	☒	☒
T40G	☒	☒	☒
T40P	☒	☒	☒
T41P	☒	☒	☒
T42G	☒	☒	☒
T46G	✓ (V81 or later)	☒	☒
T48G	✓ (35.80.0.95 or later)	☒	☒
T49G	☒	☒	☒
T41S	✓ (X.81.0.110 or later)	✓ (V84 or later)	☒
T42S	✓ (X.81.0.110 or later)	✓ (V84 or later)	☒
T46S	✓ (V81 or later)	✓ (V84 or later)	☒
T48S	✓ (V81 or later)	✓ (V84 or later)	☒
T52S	✓	✓ (V84 or later)	☒
T54S	✓	✓ (V84 or later)	☒
T56A	☒	☒	☒
T58A	☒	☒	☒
T58V	☒	☒	☒
T58A with Camera	☒	☒	☒
Conference Phone			
CP960	☒	☒	☒
CP925	☒	☒	☒

CP965	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
CP935W	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
CP935W-Base	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Bluetooth USB Dongle

Bluetooth USB Dongle

	BT40	BT41
		
T3 Series IP Phones		
T30	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
T30P	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
T31	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
T31P	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
T31G	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
T33P	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
T33G	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
T4 Series IP Phones		
T42U	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
T43U	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
T46U	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
T48U	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
T5 Series IP Phones		
T53	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
T53W	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
T54W	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
T57W	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
T58W	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
T58W with Camera	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
T58W Pro	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
T58W Pro with Camera	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
VP59	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
EOL IP Phones		
T19P	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
T19P E2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
T20P	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
T21P	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

T21P E2	☒	☒
T22P	☒	☒
T23P	☒	☒
T26P	☒	☒
T27P	☒	☒
T27G	✓	✓
T28P	☒	☒
T29G	✓	✓
T32G	☒	☒
T38G	☒	☒
T40G	☒	☒
T40P	☒	☒
T41P	☒	☒
T42G	☒	☒
T46G	✓	✓
T48G	✓	✓
T49G	☒	☒
T41S	✓	✓
T42S	✓	✓
T46S	✓	✓
T48S	✓	✓
T52S	☒	☒
T54S	☒	☒
T56A	☒	☒
T58A	☒	☒
T58V	☒	☒
T58A with Camera	☒	☒
Conference Phone		
CP960	☒	☒
CP925	☒	☒
CP965	☒	☒
CP935W	☒	☒
CP935W-Base	☒	☒

IP Phone Camera

IP Phone Camera

	CAM50
--	--------------






T3 Series IP Phones	
T30	<input type="checkbox"/>
T30P	<input type="checkbox"/>
T31	<input type="checkbox"/>
T31P	<input type="checkbox"/>
T31G	<input type="checkbox"/>
T33P	<input type="checkbox"/>
T33G	<input type="checkbox"/>
T4 Series IP Phones	
T42U	<input type="checkbox"/>
T43U	<input type="checkbox"/>
T46U	<input type="checkbox"/>
T48U	<input type="checkbox"/>
T5 Series IP Phones	
T53	<input type="checkbox"/>
T53W	<input type="checkbox"/>
T54W	<input type="checkbox"/>
T57W	<input type="checkbox"/>
T58W	<input checked="" type="checkbox"/>
T58W with Camera	<input checked="" type="checkbox"/>
T58W Pro	<input checked="" type="checkbox"/>
T58W Pro with Camera	<input checked="" type="checkbox"/>
VP59	<input type="checkbox"/>
EOL IP Phones	

T19P	☒
T19P E2	☒
T20P	☒
T21P	☒
T21P E2	☒
T22P	☒
T23P	☒
T26P	☒
T27P	☒
T27G	☒
T28P	☒
T29G	☒
T32G	☒
T38G	☒
T40G	☒
T40P	☒
T41P	☒
T42G	☒
T46G	☒
T48G	☒
T49G	☒
T41S	☒
T42S	☒
T46S	☒
T48S	☒
T52S	☒
T54S	☒
T56A	☒
T58A	☒
T58V	☒
T58A with Camera	☒
Conference Phone	
CP960	☒
CP925	☒
CP965	☒
CP935W	☒
CP935W-Base	☒

Wireless Expansion Microphone

Wireless Expansion Microphone


	CPW65	CPW90	CPW90-BT
--	-------	-------	----------

			
T3 Series IP Phones			
T30	☒	☒	☒
T30P	☒	☒	☒
T31	☒	☒	☒
T31P	☒	☒	☒
T31G	☒	☒	☒
T33P	☒	☒	☒
T33G	☒	☒	☒
T4 Series IP Phones			
T42U	☒	☒	☒
T43U	☒	☒	☒
T46U	☒	☒	☒
T48U	☒	☒	☒
T5 Series IP Phones			
T53	☒	☒	☒
T53W	☒	☒	☒
T54W	☒	☒	☒
T57W	☒	☒	☒
T58W	☒	☒	☒
T58W with Camera	☒	☒	☒
T58W Pro	☒	☒	☒
T58W Pro with Camera	☒	☒	☒
VP59	☒	☒	☒
EOL IP Phones			
T19P	☒	☒	☒
T19P E2	☒	☒	☒
T20P	☒	☒	☒
T21P	☒	☒	☒
T21P E2	☒	☒	☒
T22P	☒	☒	☒

T23P	☒	☒	☒
T26P	☒	☒	☒
T27P	☒	☒	☒
T27G	☒	☒	☒
T28P	☒	☒	☒
T29G	☒	☒	☒
T32G	☒	☒	☒
T38G	☒	☒	☒
T40G	☒	☒	☒
T40P	☒	☒	☒
T41P	☒	☒	☒
T42G	☒	☒	☒
T46G	☒	☒	☒
T48G	☒	☒	☒
T49G	☒	☒	☒
T41S	☒	☒	☒
T42S	☒	☒	☒
T46S	☒	☒	☒
T48S	☒	☒	☒
T52S	☒	☒	☒
T54S	☒	☒	☒
T56A	☒	☒	☒
T58A	☒	☒	☒
T58V	☒	☒	☒
T58A with Camera	☒	☒	☒
Conference Phone			
CP960	☒	✓	✓
CP925	☒	☒	☒
CP965	✓	☒	☒
CP935W	☒	☒	☒
CP935W-Base	☒	☒	☒

DECT USB Dongle

DECT USB Dongle

	DD10K
	
T3 Series IP Phones	
T30	☒
T30P	☒
T31	☒
T31P	☒

T31G	☒
T33P	☒
T33G	☒
T4 Series IP Phones	
T42U	☒
T43U	☒
T46U	☒
T48U	☒
T5 Series IP Phones	
T53	✓
T53W	✓
T54W	✓
T57W	✓
T58W	✓
T58W with Camera	☒
T58W Pro	☒
T58W Pro with Camera	☒
VP59	✓
EOL IP Phones	
T19P	☒
T19P E2	☒
T20P	☒
T21P	☒
T21P E2	☒
T22P	☒
T23P	☒
T26P	☒
T27P	☒
T27G	☒
T28P	☒
T29G	☒
T32G	☒
T38G	☒
T40G	☒
T40P	☒
T41P	☒
T42G	☒
T46G	☒
T48G	☒
T49G	☒
T41S	✓
T42S	✓
T46S	☒
T48S	☒
T52S	☒
T54S	☒
T56A	✓
T58A	✓
T58V	✓
T58A with Camera	☒

Conference Phone	
CP960	☒
CP925	☒
CP965	☒
CP935W	☒
CP935W-Base	☒

Headset Compatibility

Other Vendor Headset Compatibility

Tested wired headset list compatible with Yealink IP Phone

Tested wired headset list compatible with Yealink IP Phone				
Manufacturer	Model	Wired Headset Connection	Compatible Phone	IP Phone Interface Type
Yealink	YHS33	Direct connect (RJ9)	All Yealink IP Phone	RJ-9
	YHS34/YHS34Lite			
	YHS36			

Tested wireless headset list compatible with Yealink IP Phone

Tested wireless headset list compatible with Yealink IP Phone				
Manufacturer	Model	Additional device needed	Compatible Phone	IP Phone Interface Type
Yealink	WH62	Yealink EHS Adapter (EHS35)	SIP-T30,SIP-T30P,SIP-T31,SIP-T31P,SIP-T31G,SIP-T33P,SIP-T33G	RJ-9
	WH63			
Poly(Plantronics)	CS540	Yealink EHS Adapter (EHS36)	SIP-T48S,SIP-T46S,SIP-T42S,SIP-T41S,SIP-T40G,SIP-T40P,SIP-T27G —Based on V84 or later	RJ-12
Jabra	PRO 920			
	Engage 65 Mono Engage 65 Convertible			

Tested wireless headset list compatible with Yealink IP Phone				
Manufacturer	Model	Additional device needed	Compatible Phone	IP Phone Interface Type
Yealink	WH67	x	VP59,SIP-T58A,SIP-T53,SIP-T53W,SIP-T53C,SIP-T54W,SIP-T57W,SIP-T41S,SIP-T42S,SIP-T46S,SIP-T48S,SIP-T42U,SIP-T43U,SIP-T46U,SIP-T48U —V85 or later SIP-T58W —V86	USB 2.0
	WH66			
	WH63			
	WH62			
Poly(Plantronics)	CS540	Yealink EHS Adapter (EHS40)	VP59,SIP-T58A,SIP-T53,SIP-T53W,SIP-T53C,SIP-T54W,SIP-T57W,SIP-T41S,SIP-T42S,SIP-T46S,SIP-T48S,SIP-T42U,SIP-T43U,SIP-T46U,SIP-T48U —V85 or later SIP-T58W —V86	USB 2.0
	Savi 7300(7310/7320) Savi 8200(8210/8220/8240) not applicable to T58A/N/W			
Jabra	PRO 920			
	Engage 65 Stereo&Mono			
	Engage 75 Stereo&Mono			

Tested Wired USB headset compatible with Yealink IP Phone

Tested Wired USB headset compatible with Yealink IP Phone				
Manufacturer	Model	Additional device needed	Compatible Phone	IP Phone Interface Type
Yealink	UH34/UH34 Lite	x	SIP-T58V,SIP-T58A SIP-T56A,VP59 T54S,T52S SIP-T48S,SIP-T46S SIP-T42S,SIP-T41S ——V83 or later SIP-T53,SIP-T53W SIP-T54W,SIP-T57W ——V84 or later SIP-T42U,SIP-T43U, SIP-T46U,SIP-T48U, ——V85 or later VP59,SIP-T58W,SIP-T58A, SIP-T53,SIP-T53W,SIP-T53C,SIP-T54W,SIP-T57W ——V86	USB 2.0
	UH36			
	UH38			

Tested Wired USB headset compatible with Yealink IP Phone				
Manufacturer	Model	Additional device needed	Compatible Phone	IP Phone Interface Type
Poly(Plantronics)	Blackwire C3200 (3210/3215/3220/3225)	x	SIP-T58V,SIP-T58A,SIP-T56A,VP59 ——V83 or later SIP-T54S,SIP-T52S,SIP-T48S,SIP-T46S,SIP-T42S,SIP-T41S,SIP-T53,SIP-T53W,SIP-T54W,SIP-T57W ——V84 or later SIP-T42U,SIP-T43U,SIP-T46U,SIP-T48U ——V85 or later SIP-T58W,SIP-T53C ——V86	USB 2.0
	Blackwire C5200(5210/5220)			
Jabra	Evolve 20			
	Evolve 40			
	Engage 65 Stereo & Mono			
	Engage 75 Stereo & Mono			

Tested Bluetooth Headset list compatible with Yealink IP Phone












Tested Bluetooth Headset list compatible with Yealink IP Phone				
Manufacturer	Model	Additional device needed	Compatible Phone	IP Phone Interface Type
Yealink	WH66	x Or Yealink Bluetooth USB dongle(BT40/BT41)	SIP-T53W, SIP-T54W, SIP-T57W,SIP-T58V,SIP-T58A,SIP-T58W,VP59 SIP-T53C,SIP-T42U,SIP-T43U,SIP-T46U,SIP-T48U,SIP-T48S,SIP-T46S,SIP-T42S,SIP-T41S	Bluetooth
	WH67			
	BH72			
	BH76			
	UH38			
Poly(Plantronics)	Voyager 4300 (4310/4320)	x Or Yealink Bluetooth USB dongle(BT40/BT41)	SIP-T58V,SIP-T58A,VP59 ——V83 or later SIP-T54S,SIP-T52S,SIP-T53,SIP-T53W,SIP-T54W,SIP-T57W,SIP-T48S,SIP-T46S,SIP-T42S,SIP-T41S,SIP-T27G ——V84 or later SIP-T42U,SIP-T43U,SIP-T46U,SIP-T48U ——V85 or later SIP-T53C,SIP-T58W ——V86	Bluetooth
	Voyager Focus			
	Voyager Legend			
	Voyager 4320			
	Voyager Focus2 UC			
	Voyager 5200			
Jabra	Evolve 65	x Or Yealink Bluetooth USB dongle(BT40/BT41)	SIP-T53W, SIP-T54W, SIP-T57W,SIP-T58V,SIP-T58A,SIP-T58W,VP59 SIP-T53C,SIP-T42U,SIP-T43U,SIP-T46U,SIP-T48U,SIP-T48S,SIP-T46S,SIP-T42S,SIP-T41S	Bluetooth
	Evolve 75			
	Evolve2 65			
	Evolve2 65			
	Evolve2 75			

PBX Partner

PBX Partner

Yealink has established cooperations with many international mainstream communication platforms. Therefore, our joint solutions are seamlessly compatible with each other and provide a better experience and more choices for our users.

This is an overview of the tested interoperability of our current phone models on the various PBX platforms.

	2600HZ	3CX	Aarenet	ALLOcloud	Bicom	Broadsoft Broadcloud	Broadsoft Broadworks	Centile	Cirpack	Clarity	CoreDial
											
T3 Series IP Phones											
T30	✓	✓	☒	✓	☒	☒	☒	✓	✓	☒	✓
T30P	✓	✓	☒	✓	✓	☒	☒	✓	✓	☒	✓
T31	✓	✓	☒	✓	☒	☒	☒	✓	✓	☒	✓
T31P	✓	✓	☒	✓	☒	☒	☒	✓	✓	☒	✓
T31G	✓	✓	☒	✓	✓	☒	☒	✓	✓	☒	✓
T33P	✓	✓	☒	✓	☒	☒	☒	✓	✓	☒	✓
T33G	✓	✓	☒	✓	✓	✓	☒	✓	✓	☒	✓
T4 Series IP Phones											
T42U	✓	✓	☒	✓	✓	✓	☒	✓	✓	☒	✓
T43U	✓	✓	☒	✓	✓	✓	☒	✓	✓	☒	✓
T46U	✓	✓	☒	✓	✓	✓	☒	✓	✓	☒	✓
T48U	✓	✓	☒	✓	✓	✓	☒	✓	✓	☒	✓
T5 Series IP Phones											

T53	✓	✓	✓	✓	✓	☒	✓	☒	✓	✓	✓
T53W	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
T54W	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
T57W	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
T58W	☒	☒	☒	☒	☒	☒	✓	✓	✓	✓	✓
T58W with Camera	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒
T58W Pro	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒
T58W Pro with Camera	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒
VP59	✓	☒	✓	✓	✓	☒	✓	✓	✓	✓	✓
Conference Phone											
CP925	☒	☒	☒	☒	☒	☒	✓	☒	☒	☒	☒
CP965	☒	☒	☒	☒	☒	☒	✓	☒	☒	☒	☒
CP930W	☒	☒	☒	☒	☒	☒	☒	☒	✓	✓	✓
CP935W	☒	☒	☒	☒	☒	☒	✓	☒	☒	☒	☒
CP860	✓	✓	✓	✓	✓	☒	☒	☒	☒	☒	✓
CP920	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
CP960	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
EOL IP Phones											
T19P	✓	✓	✓	✓	☒	☒	☒	☒	☒	☒	☒
T19P E2	✓	✓	✓	✓	☒	☒	✓	✓	✓	✓	✓
T20P	✓	✓	✓	✓	☒	☒	☒	✓	✓	☒	✓
T21P	✓	✓	✓	✓	☒	☒	☒	☒	☒	☒	✓

T21P E2	✓	✓	✓	✓	✓	☒	✓	☒	✓	✓	
T22P	✓	✓	✓	✓	☒	☒	☒	✓	✓	☒	✓
T23P	✓	✓	✓	✓	☒	☒	✓	☒	✓	☒	✓
T23G	✓	✓	✓	✓	✓	☒	✓	✓	✓	✓	✓
T26P	✓	✓	✓	✓	☒	☒	☒	☒	☒	☒	✓
T27P	✓	✓	✓	✓	☒	☒	✓	☒	☒	☒	✓
T27G	✓	✓	✓	✓	✓	☒	✓	☒	✓	✓	✓
T28P	✓	✓	✓	✓	☒	☒	☒	☒	☒	☒	✓
T29G	✓	✓	✓	✓	✓	☒	✓	☒	✓	✓	✓
T32G	✓	✓		✓	☒	☒	☒	☒	✓	☒	✓
T38G	✓	✓		✓	☒	☒	☒	✓	✓	☒	✓
T40G	✓	✓	✓	✓	☒	✓	✓	✓	✓	✓	✓
T40P	✓	✓	✓	✓	☒	✓	✓	✓	✓	✓	✓
T41P	✓	✓	✓	✓	☒	✓	✓	✓	✓	✓	✓
T42G	✓	✓	✓	✓	✓	☒	✓	✓	✓	✓	☒
T46G	✓	✓	✓	✓	☒	✓	☒	✓	✓	✓	☒
T48G	✓	✓	✓	✓	☒	☒	✓	✓	✓	✓	✓
T49G	✓	✓	✓	✓	☒	☒	☒	✓	✓	☒	☒
T41S	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

T42S	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
T46S	✓	✓	✓	✓	✓	☒	✓	✓	✓	✓	☒
T48S	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
T52S	✓	✓	✓	✓	✓	☒	✓	☒	✓	☒	✓
T54S	✓	✓	✓	✓	✓	☒	☒	☒	✓	☒	✓
T56A	✓	✓	✓	✓	✓	☒	✓	☒	✓	✓	✓
T58A	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
T58V	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
T58A with Camera	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒	☒

Wall Mount Bracket Drilling Template

Overview


The following table lists the Yealink wall mount bracket and the supported device.

Wall Mount Bracket	Supported Device
EXP40 Wall Mount Bracket	EXP40
EXP43 Wall Mount Bracket	EXP43
T29G Wall Mount Bracket	T27G/T29G
T31G Wall Mount Bracket	T30/T30P/T31/T31P/T31G/T31W
T33G Wall Mount Bracket	T33P/T33G/MP52/T34W
T42G Wall Mount Bracket	T40G/T40P/T41P/T41S/T41U/T42G/T42S/T42U/T43U
T46G Wall Mount Bracket	T46G/T46S/T46U
T46U Wall Mount Bracket	T46G/T46S/T46U
T48G Wall Mount Bracket	T48G/T48S/T48U
T48U Wall Mount Bracket	T48G/T48S/T48U
T53 Wall Mount Bracket	T53/T53C/T53W/T54W
T55A Wall Mount Bracket	T55A
T58V Wall Mount Bracket	T58V/T57W/T54S/T52S/MP58/T58W
MP50 Wall Mount Bracket	MP50/MP54
MP56 Wall Mount Bracket	MP56

Drilling Template


EXP40 Wall Mount Bracket

 [Click to download EXP40 Wall Mount Bracket Drilling Template.](#)

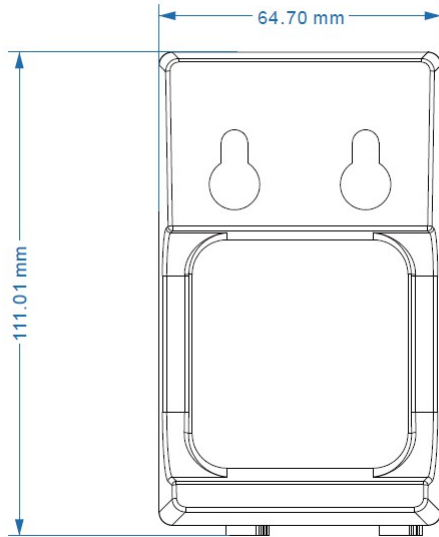


EXP43 Wall Mount Bracket

 [Click to download EXP43 Wall Mount Bracket Drilling Template.](#)

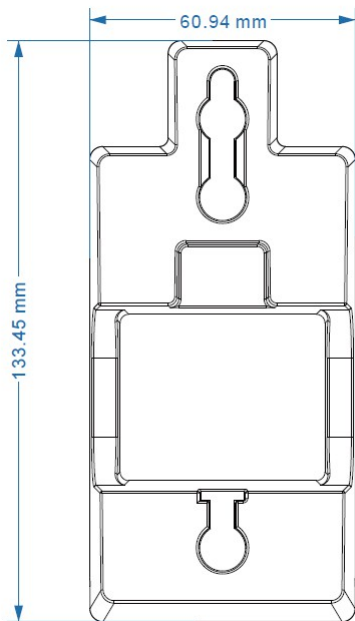


MP50 Wall Mount Bracket

 [Click to download MP50 Wall Mount Bracket Drilling Template.](#)

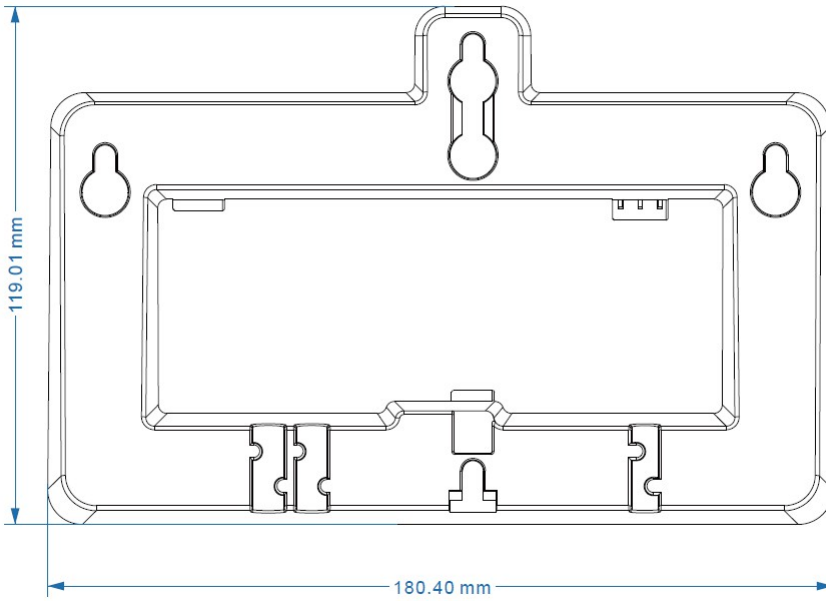


MP56 Wall Mount Bracket

 [Click to download MP56 Wall Mount Bracket Drilling Template.](#)

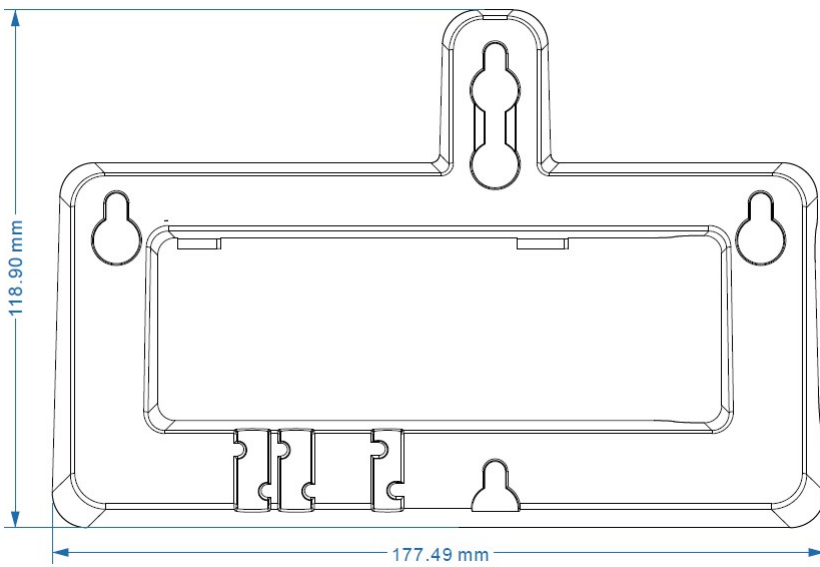


T29G Wall Mount Bracket

 [Click to download T29G Wall Mount Bracket Drilling Template.](#)

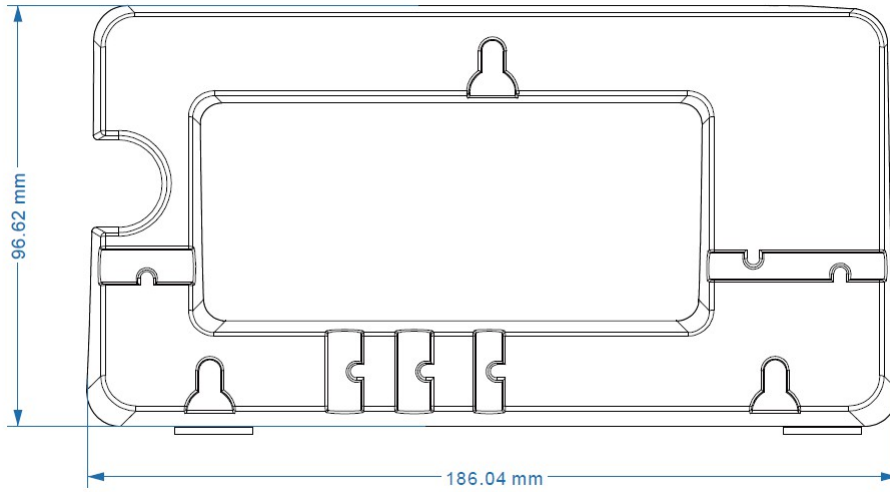


T31G Wall Mount Bracket

 [Click to download T31G Wall Mount Bracket Drilling Template.](#)

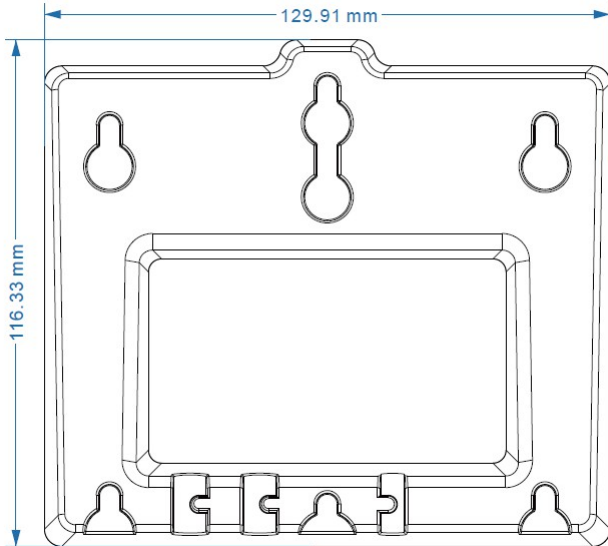


T33G Wall Mount Bracket

 [Click to download T33G Wall Mount Bracket Drilling Template.](#)

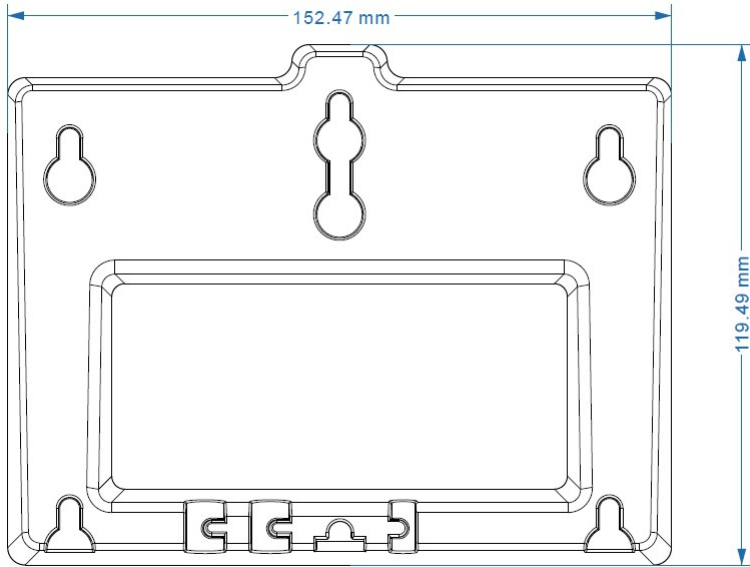


T42G Wall Mount Bracket

 [Click to download EXP40 Wall Mount Bracket Drilling Template.](#)

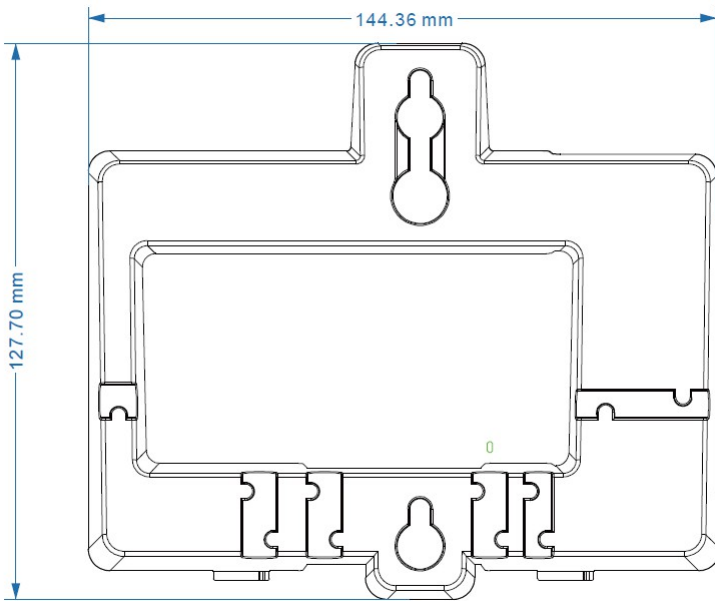


T46G/T46U Wall Mount Bracket

 [Click to download T46G/T46U Wall Mount Bracket Drilling Template.](#)

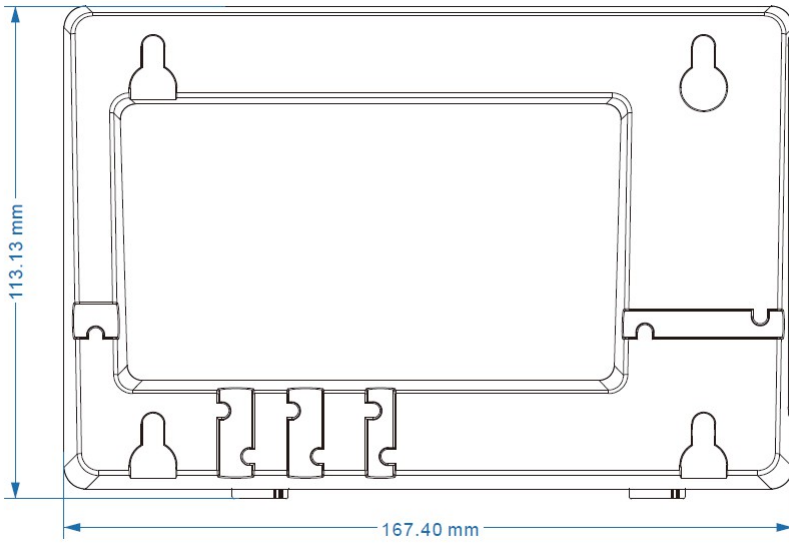


T48G/T48U Wall Mount Bracket

 [Click to download T48G/T48U Wall Mount Bracket Drilling Template.](#)

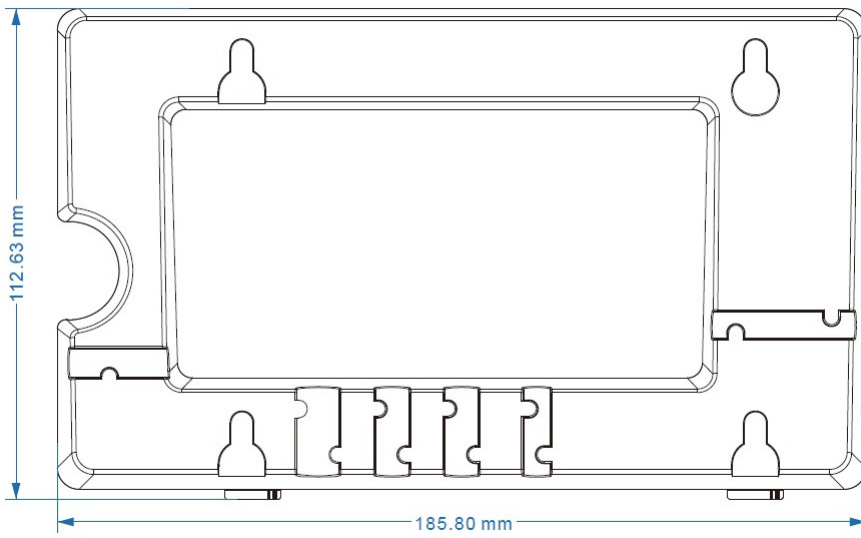


T53 Wall Mount Bracket

 [Click to download T53 Wall Mount Bracket Drilling Template.](#)

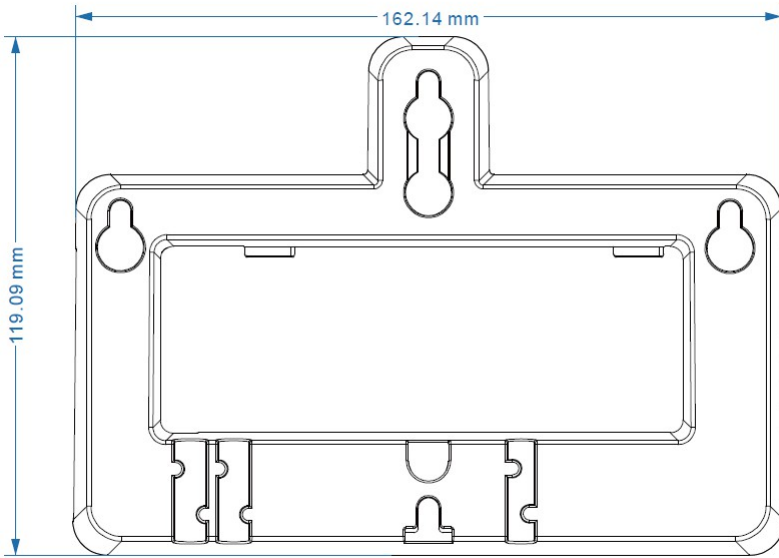

T55A Wall Mount Bracket

 [Click to download T55A Wall Mount Bracket Drilling Template.](#)

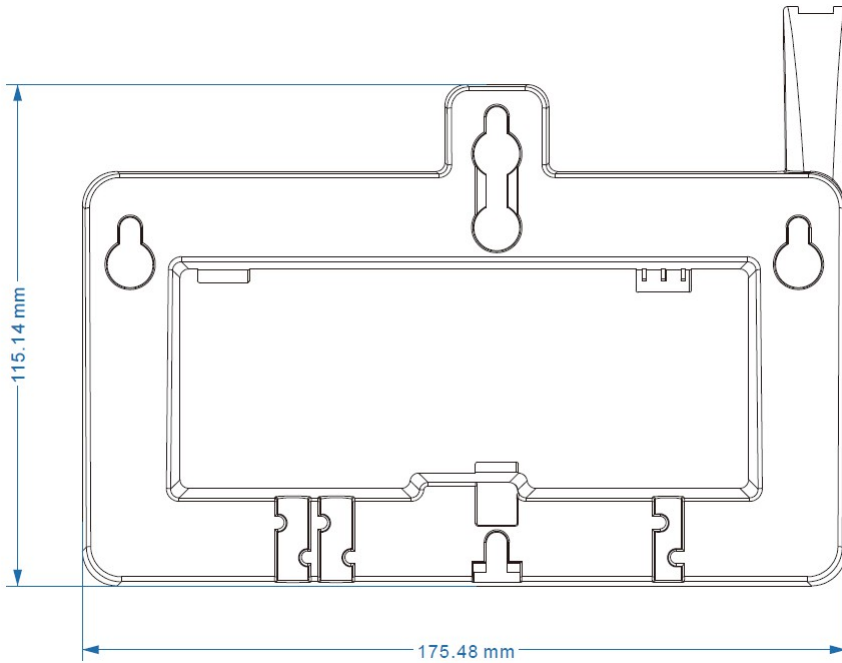

T58V Wall Mount Bracket

[Click to download T58V Wall Mount Bracket Drilling Template.](#)

